









DRAIN AND RINSE

- 1 Defrost**

 Press RESET, then Press and Hold **STANDBY** for 3 Seconds
- 2**

 When Defrost Completed Press RESET
- 3**

 Remove Hopper Agitators, then Press Wash
- 4**

 Drain Product then Press RESET
- 5**

 Add 8 Liters (2.11 Gallons) Water to Hoppers
- 6**

 Scrub Sides & Bottom of Hoppers
- 7**

 Press Wash Drain Water Press RESET
- 8**

 Repeat Steps 5-7 Until Water is Clear

DISASSEMBLE & CLEAN

- 1** Switch to OFF

RELEASE PRESSURE IN CYLINDER by Pulling Down on Dispensing Handles OR Pulling up on Prime Plug
- 2**




 Disconnect Feed Tube
- 3**

 Disassemble Feed Tube
- 4**


 Turn & Disconnect Air Pump
- 5**

 Turn & Disconnect Suction Tube
- 6**

 Disassemble Air Pump
- 7**



 Remove Dispensing Door Nuts (Diagonally)
- 8**

 Remove Dispensing Door Assembly
- 9**

 Remove Door Gaskets & Beater Guides
- 10**

 Remove Prime Plugs
- 11**

 Remove Handle Pin Plugs
- 12**

 Remove Dispensing Handles & Draw Valves
- 13**

 Remove O-Rings from Draw Valves & Prime Plugs
- 14**

 Remove Star Caps
- 15**

 Remove Beater Assembly
 Option A: Helix Beater V3
- 16**

 Remove Beater Assembly
 Option B: Helix Beater V5
- 17**

 Remove Seal
- 18**

 Remove Blades
- 19**

 Remove and Clean Internal Drip Tray
- 20**

 Scrub Cylinders w/ Large Brush
- 21**

 Scrub Hopper Feed Hole & Agitator
- 22**

 Scrub Prime Plug Ports w/ Brush
- 23**

 Wash All Parts Thoroughly

ASSEMBLE

 <p>1 Lubricate and Install End of Seal</p>	 <p>2 Install Beater Assembly, Rotate to Lock in Place</p>	 <p>3 Install Beater Blades</p>	 <p>4 Lubricate and Install End of Seal</p>	 <p>5 Install Beater Assembly, Rotate to Lock in Place</p>	 <p>6 Install & Lubricate Draw Valves & Prime Seals</p>	 <p>7 Install Draw Valves</p>	 <p>8 Install Dispensing Handles</p>
Option A: Helix Beater V3		Option B: Helix Beater V5					
 <p>9 Install Handle Retention Pin & Nut</p>	 <p>10 Install Prime Plugs</p>	 <p>11 Install Star Caps</p>	 <p>12 Install Door Gaskets and Beater Guides</p>	 <p>13 Install Dispensing Door Assembly</p>	 <p>14 Install Dispensing Door Nuts (Diagonally)</p>	 <p>15 Install Gears & Seal Lubricate Seal Lightly</p>	 <p>16 Install Pump Cover & Hand Nuts</p>
 <p>17 Install Suction Tube with Spring and Plug</p>	 <p>18 Install Air Pump Assembly (DO NOT INSTALL FEED TUBE)</p>	 <p>19 Lubricate & Install Hopper Agitators</p>	 <p>20 Install Internal & Front Drip Tray</p>	<h3>SANITIZE AND ADD PRODUCT</h3>			

 <p>21 Press RESET</p>	 <p>22 Add 1 Liter (0.26 Gallons) Product & Purge Sanitizer</p>	 <p>23 Pour in Remaining Product into Hoppers</p>	 <p>24 Open Prime Plug Until Product Flows Out from Bottom Prime Port</p>	 <p>25 Press WASH to Prime Air Pump, Make Sure Product Pumps Out Strong, then Press RESET</p>	 <p>26 Assemble, Sanitize & Install Feed Tube</p>	 <p>27 Install Hopper Lids</p>	 <p>28 Press FREEZE</p>
--	--	--	---	--	--	---	--