

PROGRAMMING

Motorola CLS Radios

TO ENTER PROGRAMMING MODE

- Press and hold **Push-To-Talk** and **MON** for 3 seconds while tuning the radio on
- The radio beeps and displays **PROG**, the channel number flashes and the frequency (indicated by **FREQ**) and code (indicated by **CODE**) display alternately

To set the channel (CLS 1410 only)

Press **-** or **+**



To set the frequency (all CLS models)

Press **MENU** until **FREQ** displays
Press **-** or **+** to change the frequency



To set the Interference Eliminator Code (all CLS models)

Press **MENU** until **CODE** displays
Press **-** or **+** to change the code



To set available channels (CLS 1410 only)

Press **MENU** until **CH** displays
Press **-** or **+** to select number of available channels



To set a call tone (all CLS models)

Press **MENU** until **CA** displays
Press **-** or **+** to select 1, 2, or 3 for audible call tones,
4 for VibraCall or 0 for off (default)



To set the microphone gain (all CLS models)

Press **MENU** until **μ** and **G** display
Press **-** or **+** to select: 1-Low sensitivity,
2-Medium sensitivity, 3-High sensitivity



To edit the Scan List (CLS 1410 only)

Press **MENU** until **Z** displays, the channel number and
Y or **∩** flash

Press **-** or **+** to select the channel, then press **MON**
to select **Y** (include channel) or **∩** (exclude channel)

