

219716 Compatibility Notes - 10/24/2018	
Model	Notes
T-49F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-12FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-49F-2-G-2	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-72FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-23F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING.
GDM-10F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-23FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS
T-72FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-72F-6	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

T-72F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-49FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDIM-26NT	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-49F-4	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-49F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-2	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-72F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-23F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

T-23F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-23F-2	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-49FG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-72F-6	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-43F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-35F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-12F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-35F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

GDM-49F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-72F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-1-G-1	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-49F DOLLAR GENERAL	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-72F DOLLAR GENERAL	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-72F FAMILY DOLLAR	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. FAMILY DOLLAR USED THE 200983 AFTER 7/6/12 PER PCN 6172 IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-08	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1F-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STG1F-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1F-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1R-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1R-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2F-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2F-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2F-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA2R-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2R-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-19T-F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1F-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1R-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STG1R-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1R-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1R-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1R-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1R-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-1HG/1HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA1R-1HG/1HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1R-1HG/1HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2R-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2R-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2R-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2R-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.



STA2R-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2R-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-2HG/2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2R-2HG/2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2R-2HG/2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1F-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1F-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2F-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA2F-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2F-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-2HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-2HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-2HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1RPT-1G-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-1G-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-1G-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-1HG/1HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-1HG/1HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-1HG/1HS-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-2HG-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-2HG-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STG1RPT-2HG-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-2HS-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-2HS-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-2HS-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-1G-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-1G-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-1G-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-2HG-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1RPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-2HG-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2RPT-2S-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-2S-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-2S-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA3R-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

T-43F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG3R-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1F-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-4HS-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1DT-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-4HG-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-2G-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-2G-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA2RPT-2G-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-4HS-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2RPT-4HS-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2RPT-4HG-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-4HG-4HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-4HS-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA3R-6HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1DT-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STG1DT-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR3R-3G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2DT-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1-FPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1FPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1FPT-2HS-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1FPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1FPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.



STR1FPT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR3R-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2F-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2DT-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STM2F-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-2S-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1-RPT-2HG-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RRI-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA1RRT-1G-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RRT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1RRI-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RRI-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RRI89-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RRI-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RRI89-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RRT-1G-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1RRT-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RRI-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RRI-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RRI89-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RRT-2G-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RRT-2S-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA3R-3G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1F-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1F-1G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG3R-3G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-43F	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-4HG-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STM1F-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2H-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STM1F-2HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR3F-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STA3F-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG3F-3S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2FRI-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2FRI-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1FRI-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-4HS-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR3F-6HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STM2F-4HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

GDM-49F-HC-LD	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-72F-HC-LD	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA1RPT-2HG-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2RPT-2G-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2FRI-2S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-1S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1RPT-2HG-2HG-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2F-2G-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1RPT-2HS-2HS-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1R-1G-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1F-1S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR1F-1G-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STM1F-2HS-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RRI-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2R-2S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR1RRT89-1S-1S	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG1F-2HG	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-49F-HC~TSL01 DOLLAR GENERAL	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-72F-HC~TSL01 DOLLAR GENERAL	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-49F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-43F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-49F-HC~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-23-HC-LD	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.



GDM-72F-HC~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPT-4HG-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2RPTVLD-2G-2S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-HC-MC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-2-HC-MC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2RPT-4HS-2G	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-35F~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-43F-HC~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

GDM-19T-F~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-72F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR3R-6HS	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-10F-HC-LD	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-12F-HC-LD	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-2-MC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-35F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F-2-MC-BK	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

FLM-54F~TSL01-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
TS-35F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23F~TRUAIRO1	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-49FG-HC~FGD01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-12F-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-12FG-HC~FGD01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
FLM-81F~TSL01-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
T-23DT-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.

STR2RPT-2S-2G-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STR2F-2S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STA2F-2S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
STG2F-2S-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-10F-HC~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
GDM-12F-HC~TSL01	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.
FLM-27F~TSL01-HC	UNIVERSAL KIT. ALSO USED TO REPLACE AR2 CONTROLS PLEASE CHECK WORK ORDER FOR CORRECT CONTROL NEED MODEL AND SERIAL NUMBER FOR PROGRAMING. IF CUSTOMER IS CHANGING FROM A AR2 CONTROL TO A BR-1 CONTROL CUSTOMER MUST ORDER THIS KIT. CANT ORDER CONTROL ALONE.