
 


Instructions for


Changing Plastic Pump Lids & Trimming Dip Tubes

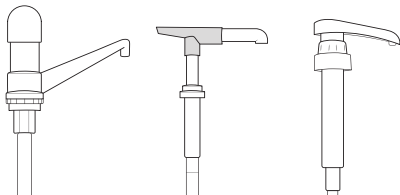


1

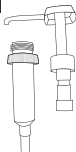


2

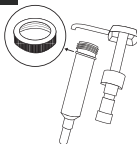

3

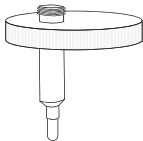

4

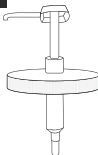 

Changing Lid Size

Your pump may come with a small lid installed.

1. Unscrew the locking collar of the pump by rotating counterclockwise. Set top portion of pump aside.
2. Remove lid and set aside.
3. Install new lid.
4. Reinstall top portion of pump by rotating locking collar clockwise.

1



Trimming Dip Tube

This pump comes installed with a trimmable dip tube.


1. Measure the height of your container starting from the bottom of the container to the bottom of the threads at the top. Subtract $\frac{3}{4}$ ".

NOTE: If dip tube is touching the bottom of the container or is too close, this could cause suction or inadequate condiment flow. Be sure to subtract $\frac{3}{4}$ " from the measurement as stated above.


2. Install dip tube onto pump.

3. Measure from pump lid downwards. Matching the measurement from Step 1, trim your dip tube. Using caution, cut at an angle.

2

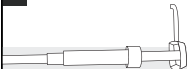

3

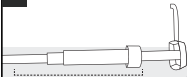

Cleaning

Clean, rinse, sanitize, and dry parts at a minimum of every 24 hours.

- 1.** Place the pump into a container of hot water.
- 2.** Pump the hot water through the pump until all food product has been expelled.
- 3.** Remove dip tube and unscrew locking collar to disassemble pump.
- 4.** Clean all parts with hot water and dish soap.
- 5.** Rinse completely with warm, clean water.
- 6.** Sanitize all parts according to local sanitation requirements.
- 7.** Air dry parts completely before assembling for use.