



VITRELLE® GLASS DINNERWARE
VAISSELLE EN VERRE VITRELLE®

P1153746 - Rev. 05/2026

CORELLE, LIVINGWARE and VITRELLE are registered trademarks of Corelle Brands
CORELLE, LIVINGWARE et VITRELLE sont des marques déposées de Corelle Brands
©2026 Corelle Brands, LLC



Scan QR Code for Safety, Use and Care.

Scannez le code QR pour les consignes de sécurité,
d'utilisation et d'entretien.

Escanee el código QR para obtener información
sobre seguridad, uso y cuidado.

ENGLISH
SAFETY, USE AND CARE

Read and save these instructions for best results with your new dinnerware.
These instructions apply to Corelle® Vitrelle® glass dinnerware products, including Plates
and Bowls, and Serving Pieces.

⚠️**WARNING** ⚠️ All dinnerware can break, including glass plates and bowls. You can help
prevent damage and personal injury by following these guidelines.

DINNERWARE

1. When used near extreme heat, glass dinnerware can break.

DO NOT use with:

Standard	Countertop	Other
Stovetop Broiler BBQ Grill Microwave Browning Element Stovetop Pressure Cooker	Toaster/Countertop Oven Air Fryer Slow Cooker Rice Cooker Grilling Appliance Pressure Cooker Multicooker	Direct Heating Source Open Flames Camping Stove

2. When heated or cooled too rapidly, glass dinnerware can break.

While cooking, DO NOT:	After cooking, DO NOT:
Transfer directly from freezer to hot oven Add liquid to hot items Use to microwave popcorn Microwave while empty Microwave a tiny amount of food Overheat oil or butter in the microwave Use for foods with browning wrappers Use to boil water (see note 2)	Place hot items in sink Place hot items on a metal stove grate Place hot items on a wet or cold surface Handle hot items with a wet or cold cloth

Notes

- The safest place for hot items to cool is on a cooling rack, dry potholder or dry cloth.
- DO NOT boil water in any Corelle item on a stovetop.

3. If handled or cleaned improperly, glass dinnerware can scratch or develop fine
cracks, and can eventually break.

When handling, DO NOT:	When cleaning, DO NOT:
Bump against hard objects Attempt to repair when cracked	Use abrasive cleanser or abrasive scouring pads Clean with hard objects, such as metal Soak stoneware in water for an extended period of time

CONSUMER CARE / SOINS AUX CONSOMMATEURS

REGION / RÉGION	CONTACT / CONTACT
U.S./Canada	www.corelle.com
Mexico	mx.corelle.com
UK/EU	corellebrands.co.uk/contact-us/
Australia	02-9317-1000 (Sydney Metro) Support.AU@gkbrands.com.au

Notes

- If items break, USE CARE when picking up sharp pieces to avoid cuts.

LIDS

- For plastic lids, follow Warnings above for Dinnerware.
- Be sure to vent lid when heating food in the microwave.

Use

Your dinnerware is designed for serving food, & can also be used for reheating & storing food.

Can be used in:	Vitrelle Glass Plates and Bowls	Vitrelle Glass Serving Pieces	Plastic Cover
Standard oven (preheated)	See note 1	See note 1	No
Standard convection oven (preheated)	See note 1	See note 1	No
Microwave	✓	✓	✓
Refrigerator	✓	✓	✓
Freezer	✓	✓	✓

Notes

- Always preheat standard oven and standard convection oven before inserting
glassware for reheating (maximum of 350°F / 176°C).
- To warm empty dishes for serving, use a preheated standard oven only (maximum of
350°F / 176°C).
- Handle hot items with a potholder or dry cloth.
- Use care with tomato and acidic sauces since they can stain plastic covers.

Care

Cleaning carefully will help keep your dinnerware in good condition.

Can be cleaned:	Vitrelle Glass Plates and Bowls	Vitrelle Glass Serving Pieces	Plastic Lids
Dishwasher	✓	✓	Top rack
Hand washing	✓	✓	✓
Cleaning pads	Plastic or nylon only	Plastic or nylon only	No
Cleanser	Non-abrasive only	Non-abrasive only	No

Notes

- Before first use, wash dinnerware items thoroughly.
- Allow items to cool before placing in sink or water.
- When using a dishwasher, load items to avoid bumping against other items.

In Case Of Problems

Please do not return this item to the store.

We will work with you directly to resolve any problems, within the limits of the warranty
for this product. Corelle Brands is committed to quality products and superior customer
service.

For more information, contact Corelle Brands Consumer Care, from the Contact List above.

LIMITED WARRANTY

Corelle® glass dinnerware: Limited Five Year Warranty

Corelle® plastic lids: Limited Two Year Warranty

For these warranties to apply, the owner must follow the Corelle Safety, Use and Care
instructions. For complete warranty details, see www.corelle.com

