

Commercial Electric Ranges




351ER24SC, 351ER24SD, 351ER36SC, 351ER36SD, 351ER60SC, 351ER60SD



Conforms to UL STD. 197
Certified to CSA STD. C22.2 NO. 109
Conforms to NSF/ANSI Std. 4

REVISED 05/2024

Parts Diagram 351ER24SC/D

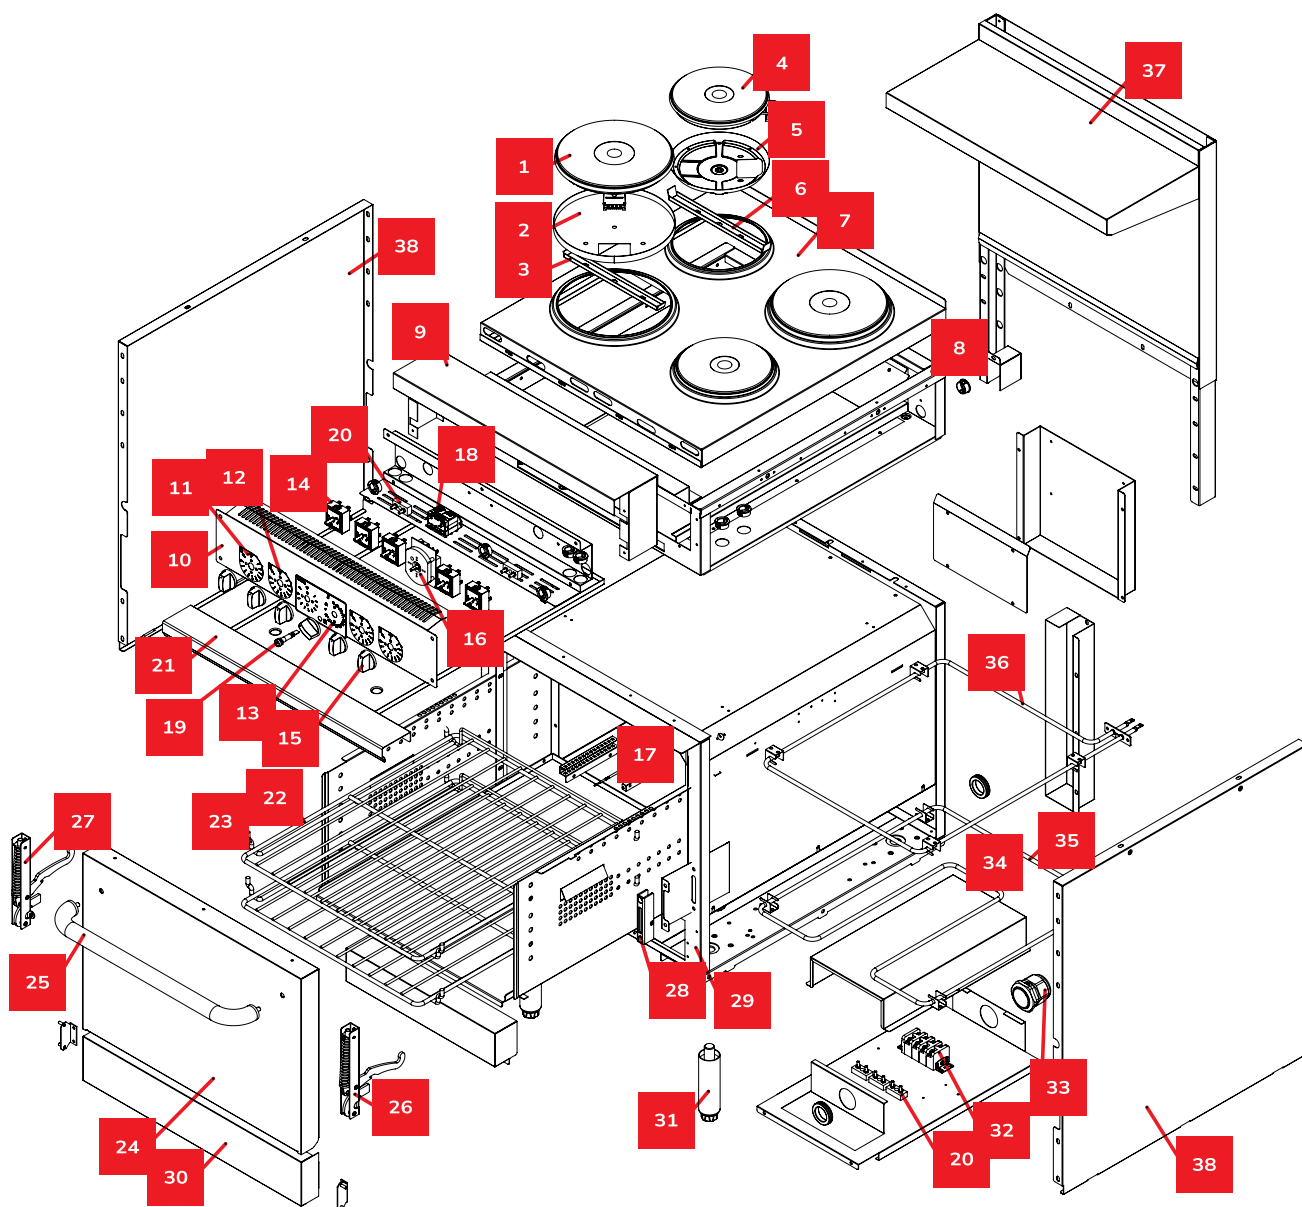


Parts List

351ER24SC/D

#	DESCRIPTION	PART CODE	QTY	#	DESCRIPTION	PART CODE	QTY
1(A)	FRONT HOTPLATE (208V)	351411628L	2	25	DOOR HANDLE	-	1
1(B)	FRONT HOTPLATE (240V)	351411619L	2	26	RIGHT DOOR HINGE	351904282	1
2	FRONT HEAT SHIELD	-	2	27	LEFT DOOR HINGE	351904300	1
3	FRONT HOTPLATE LOCKING BAR	-	2	28	DOOR HINGE SEAT	351904291	2
4(A)	REAR HOTPLATE (208V)	351411646L	2	29	BOTTOM HOUSING ASSEMBLY	-	1
4(B)	REAR HOTPLATE (240V)	351411637L	2	30	KICKPLATE	-	1
5	REAR HEAT SHIELD	-	2	31	LEG	351901664L	4
6	REAR HOTPLATE LOCKING BAR	-	2	32	OVEN TERMINAL BLOCK	351702873L	1
7	TOP PANEL	-	1	33	POWER CORD BUSHING	-	1
8	TOP PANEL ASSEMBLY	-	1	34	HEATING ELEMENT FIX CLAMP	-	9
9	FRONT PANEL HOUSING	-	1	35(A)	BOTTOM OVEN HEATING ELEMENT (208V)	351411682L	1
10	FRONT PANEL FOR CONTROLS	-	1	35(B)	BOTTOM OVEN HEATING ELEMENT (240V)	351411673L	1
11	TEMPERATURE STICKER FOR REAR HOTPLATE	-	2	36(A)	TOP OVEN HEATING ELEMENT (208V)	351411700L	1
12	TEMPERATURE STICKER FOR FRONT HOTPLATE	-	2	36(B)	TOP OVEN HEATING ELEMENT (240V)	351411691L	1
13	OVEN TEMPERATURE STICKER	-	1	37	BACK PANEL ASSEMBLY	-	1
14	INFINITE SWITCH	3510800400	5	38	SIDE PANEL	-	2
15	TEMPERATURE/TIMER KNOB	351104928L	6				
16	OVEN THERMOSTAT	351302346L	1				
17	TEMPERATURE PROBE	351506119L	1				
18	RELAY	351901246L	1				
19	INDICATOR LIGHT	351301400	1				
20	RANGE TERMINAL BLOCK	351703028L	5				
21	BOTTOM HEAT BAFFLE	-	1				
22	OVEN WIRE RACK	351106755L	2				
23	OVEN RACK SUPPORT	351106746L	8				
24	DOOR ASSEMBLY	3511039056	1				

Parts Diagram 351ER36SC/D

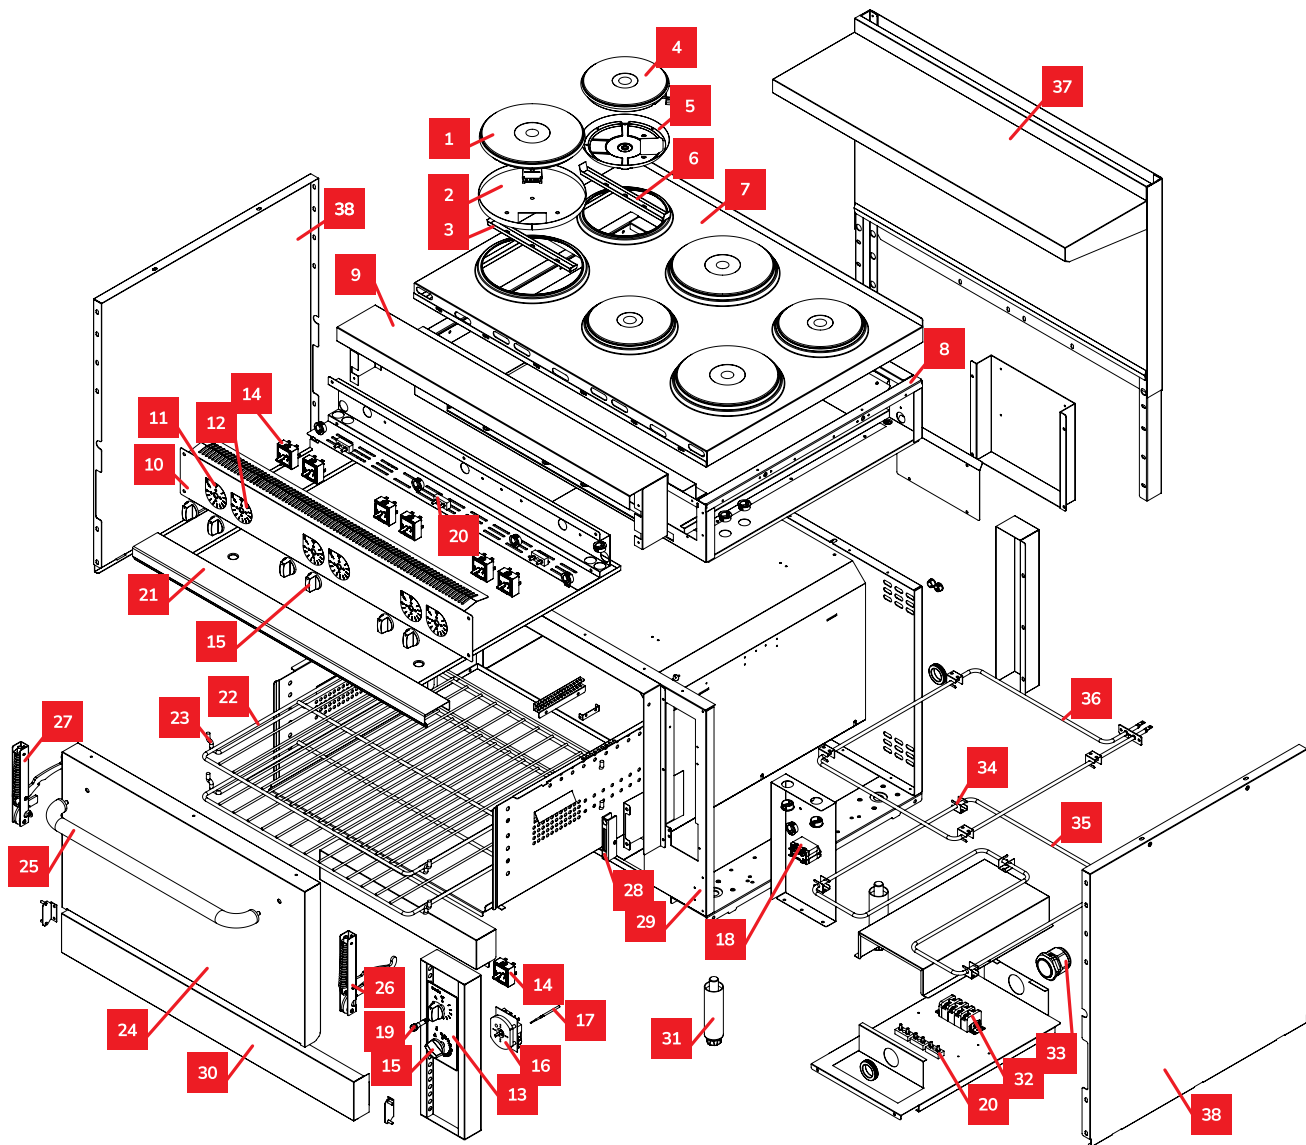


Parts List

351ER36SC/D

#	DESCRIPTION	PART CODE	QTY
1(A)	FRONT HOTPLATE (208V)	351411628L	3
1(B)	FRONT HOTPLATE (240V)	351411619L	3
2	FRONT HEAT SHIELD	-	3
3	FRONT HOTPLATE LOCKING BAR	-	3
4(A)	REAR HOTPLATE (208V)	351411646L	3
4(B)	REAR HOTPLATE (240V)	351411637L	3
5	REAR HEAT SHIELD	-	3
6	REAR HOTPLATE LOCKING BAR	-	3
7	TOP PANEL	-	1
8	TOP PANEL ASSEMBLY	-	1
9	FRONT PANEL HOUSING	-	1
10	FRONT PANEL FOR CONTROLS	-	1
11	TEMPERATURE STICKER FOR REAR HOTPLATE	-	3
12	TEMPERATURE STICKER FOR FRONT HOTPLATE	-	3
13	OVEN TEMPERATURE STICKER	-	1
14	INFINITE SWITCH	3510800400	7
15	TEMPERATURE/TIMER KNOB	351104928L	8
16	OVEN THERMOSTAT	351302346L	1
17	TEMPERATURE PROBE	351506119L	1
18	RELAY	351901246L	1
19	INDICATOR LIGHT	351301400	1
20	RANGE TERMINAL BLOCK	351703028L	6
21	BOTTOM HEAT BAFFLE	-	1
22	OVEN WIRE RACK	351106764L	2
23	OVEN RACK SUPPORT	351106746L	4
24	DOOR ASSEMBLY	3511041070	1

#	DESCRIPTION	PART CODE	QTY
25	DOOR HANDLE	-	1
26	RIGHT DOOR HINGE	351904282	1
27	LEFT DOOR HINGE	351904300	1
28	DOOR HINGE SEAT	351904291	2
29	BOTTOM HOUSING ASSEMBLY	-	1
30	KICKPLATE	-	1
31	LEG	351901664L	4
32	OVEN TERMINAL BLOCK	351702873L	1
33	POWER CORD BUSHING	-	1
34	HEATING ELEMENT FIX CLAMP	-	9
35(A)	BOTTOM OVEN HEATING ELEMENT (208V)	351411682L	1
35(B)	BOTTOM OVEN HEATING ELEMENT (240V)	351411673L	1
36(A)	TOP OVEN HEATING ELEMENT (208V)	351411700L	1
36(B)	TOP OVEN HEATING ELEMENT (240V)	351411691L	1
37	BACK PANEL ASSEMBLY	-	1
38	SIDE PANEL	-	2

Parts Diagram 351ER60SC/D

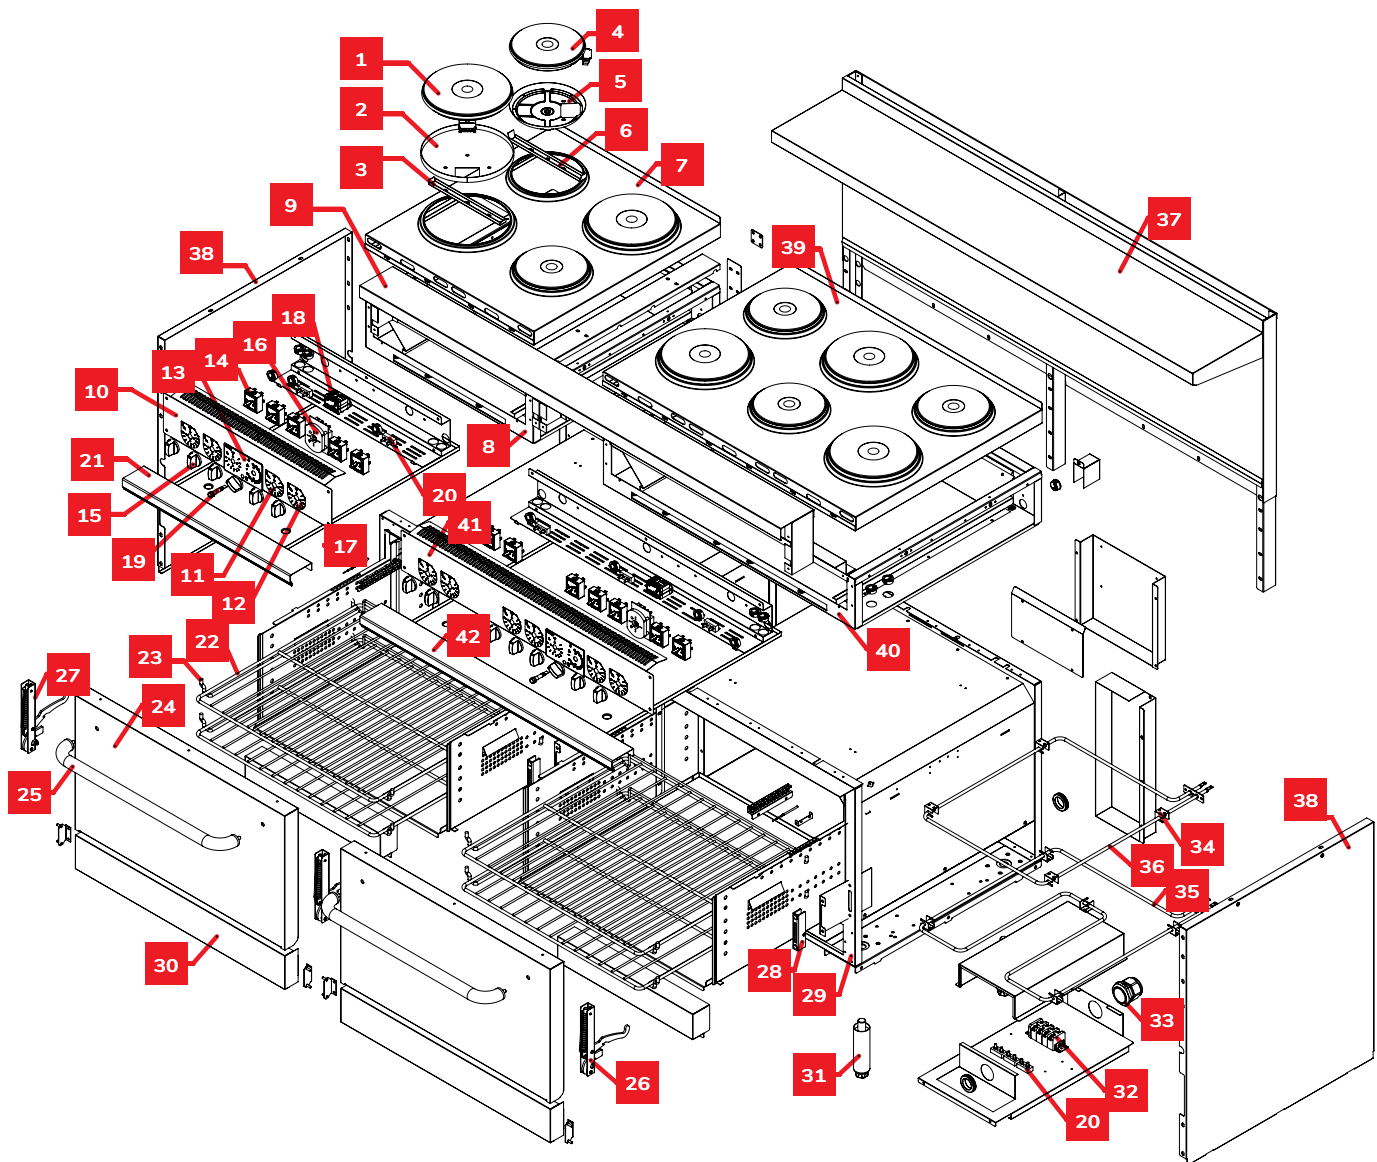

Parts List

351ER60SC/D


#	DESCRIPTION	PART CODE	QTY
1(A)	FRONT HOTPLATE (208V)	351411628L	5
1(B)	FRONT HOTPLATE (240V)	351411619L	5
2	FRONT HEAT SHIELD	-	5
3	FRONT HOTPLATE LOCKING BAR	-	5
4(A)	REAR HOTPLATE (208V)	351411646L	5
4(B)	REAR HOTPLATE (240V)	351411637L	5
5	REAR HEAT SHIELD	-	5
6	REAR HOTPLATE LOCKING BAR	-	5
7	LEFT TOP PANEL	-	1
8	LEFT TOP PANEL HOUSING ASSEMBLY	-	1
9	FRONT PANEL HOUSING	-	1
10	FRONT PANEL FOR CONTROLS	-	1
11	TEMPERATURE STICKER FOR REAR HOTPLATE	-	5
12	TEMPERATURE STICKER FOR FRONT HOTPLATE	-	5
13	OVEN TEMPERATURE STICKER	-	2
14	INFINITE SWITCH	3510800400	12
15	TEMPERATURE/TIMER KNOB	351104928L	14
16	OVEN THERMOSTAT	351302346L	2
17	TEMPERATURE PROBE	351506119L	2
18	RELAY	351901246L	2
19	INDICATOR LIGHT	351301400	2
20	RANGE TERMINAL BLOCK	351703028L	11
21	LEFT BOTTOM HEAT BAFFLE	-	1
22	OVEN WIRE RACK	351106764L	4
23	OVEN RACK SUPPORT	351106746L	16
24	DOOR ASSEMBLY	3511041070	2

#	DESCRIPTION	PART CODE	QTY
25	DOOR HANDLE	-	2
26	RIGHT DOOR HINGE	351904282	2
27	LEFT DOOR HINGE	351904300	2
28	DOOR HINGE SEAT	351904291	4
29	BOTTOM HOUSING ASSEMBLY	-	2
30	KICKPLATE	-	2
31	LEG	351901664L	8
32	OVEN TERMINAL BLOCK	351702873L	2
33	POWER CORD BUSHING	-	2
34	HEATING ELEMENT FIX CLAMP	-	18
35(A)	BOTTOM OVEN HEATING ELEMENT (208V)	351411682L	2
35(B)	BOTTOM OVEN HEATING ELEMENT (240V)	351411673L	2
36(A)	TOP OVEN HEATING ELEMENT (208V)	351411700L	2
36(B)	TOP OVEN HEATING ELEMENT (240V)	351411691L	2
37	BACK PANEL ASSEMBLY	-	1
38	SIDE PANEL	-	2
39	RIGHT TOP PANEL	-	1
40	RIGHT TOP HOUSING ASSEMBLY	-	1
41	RIGHT FRONT PANEL FOR CONTROLS	-	1
42	RIGHT BOTTOM HEAT BAFFLE	-	1

Wiring Diagram

351ER24SC/D


ER24 circuit diagram

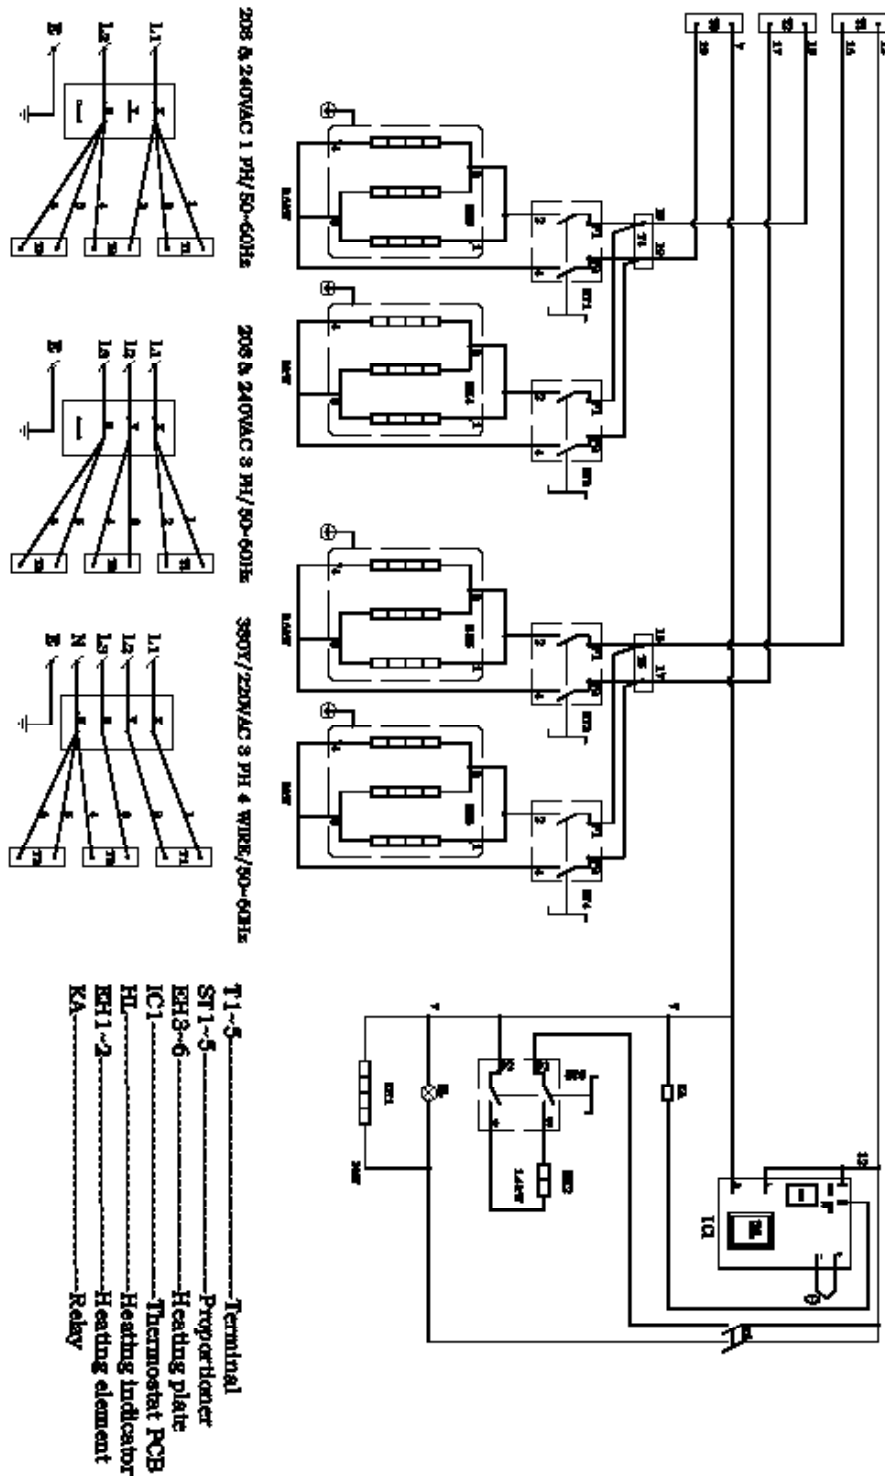

Wiring Diagram

351ER36SC/D

ER36 Circuit Diagram

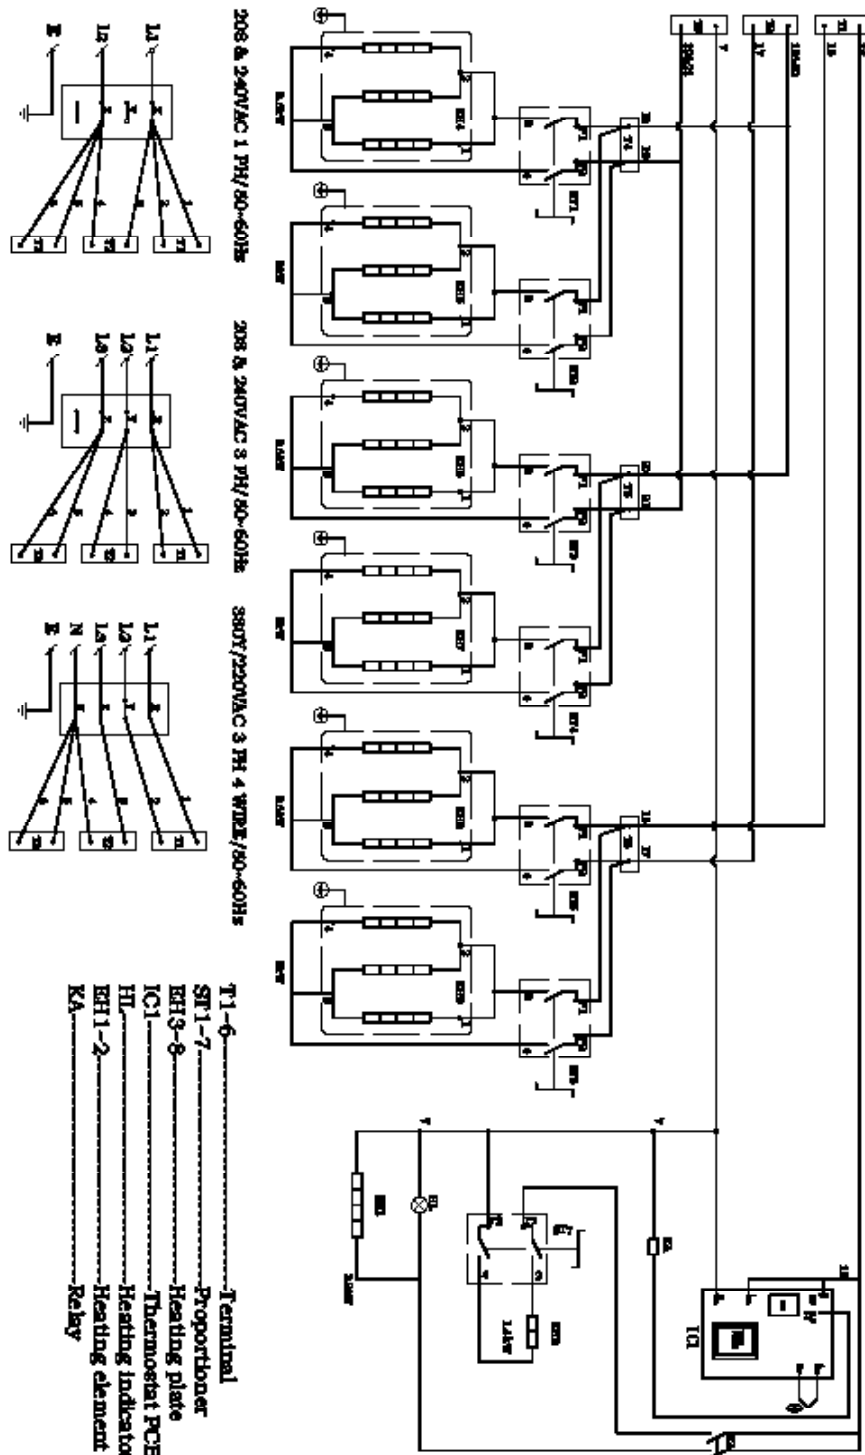

Wiring Diagram

351ER60SC/D

ER60 circuit diagram (4 plates section)

