

# User's Manual for Jumbo Hobby Chair Model C-PRO-800



Thank you for purchasing the Jumbo Hobby Chair. This information will provide you with the safe handling of the product. Please read this information carefully and keep this for future reference.

## Instructions for Safe Use of the Jumbo Hobby Chair



Do not use this product as a stepladder or any other purpose than chair. The chair may fall causing injury and damage.



Do not move the chair when sitting on the seat. The seat may shift unexpectedly causing injury and damage.




Do not place any objects, especially hot liquids, on the seat of the chair. The seat may move causing the object to fall, leading to possible injury and burns.



This chair is a folding chair, so please do not place your fingers and hands between any moving areas when you handle the chair. You may catch your fingers and hands in these moving areas causing injury.

- Do not use this chair in an unstable position such as leaning while seated. It may fall down causing injury and damage.
- If you use this chair on floor, it may cause damage scratching the floor. Please place a rug or mat under the chair to prevent damage and scratching to the floor. The leg caps can wear. If you see any cracking or damage to the leg caps, replace them. (Please purchase replacement parts at the store where purchased.)
- Incorrect operation or inappropriate use of the chair might cause bodily injury or damage. Please be careful when allowing children to use the chair.

The stopper rubbers can wear. If you see any cracking or damage to the stoppers, replace them. (Please purchase replacement parts at the store where purchased.) (Please replace stopper rubbers in a set of 8 pcs.)

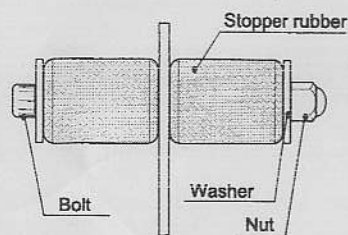


### How to change the stopper rubbers

To remove, use a 3mm hexagon wrench and 7mm spanner. Unscrew nut to remove washer and bolt from the stopper rubber. If you have difficulty removing, after unscrewing nut and bolt, snap them out with a flat screwdriver. Replace the new stopper rubbers by screwing in bolt, washer and nut to secure the stopper rubbers.

## Instructions to Open Chair


1

Open the front leg.

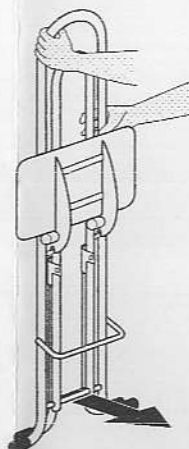

2


After lifting the seat from locking position, fold down to open as shown.

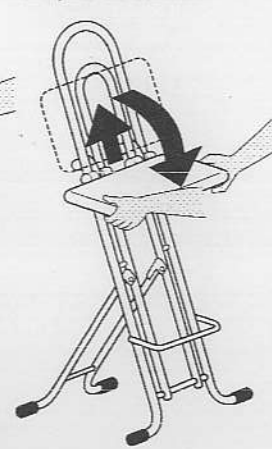

## Instructions to Close Chair


1

Fold seat up against frame.

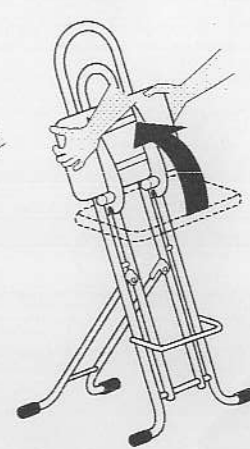


2

Slide seat down to lock in the seat stopper, and close the rear leg to the frame.

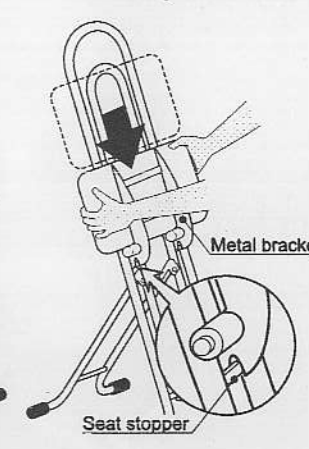


## Instructions to Adjust Seat Height

Hold the front of the seat and lift up so it moves freely up and down.

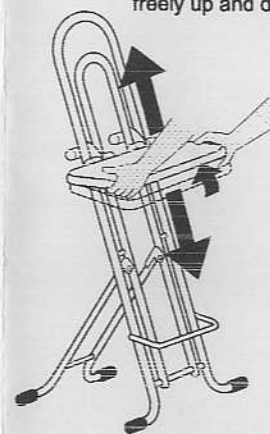

The seat adjusts to any height desired between 810mm and 460mm.

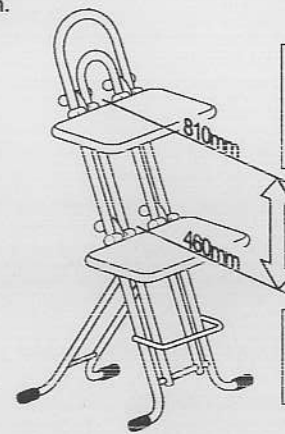

The maximum seat height is achieved by making sure all eight stopper rubbers are in contact with the straight area of the frame.

The lower limit is achieved at a point where the metal bracket of the seat does not touch the seat stopper.