

| Holding Cabinet | FL-2331 | |
|-----------------|-------------|--|
| Rev. 3 (3/14) | Page 1 of 7 | |

OPERATING and MAINTENANCE INSTRUCTIONS Models: H138NPSCMQ Series Hot Cabinet and H138NPSCMQ-15A Series Hot Cabinet



| Cabinet model number: | |
|----------------------------|------|
| Cabinet serial number: | |
| Authorized Service Agency: | |
| Ph: | Fax: |

Keep this manual for future reference.

| Holding Cabinet | FL-2331 |
|-----------------|-------------|
| Rev. 3 (3/14) | Page 2 of 7 |




OPERATING and MAINTENANCE INSTRUCTIONS Models: H138NPSC Series Hot Cabinet

ELECTRICAL SPECIFICATIONS:

| Model No. | Volts | Watts | Amps | Hertz | Phase | NEMA |
|--------------|-------|-------|------|-------|-------|-------|
| H138NPSC | 120 | 2000 | 16.6 | 60 | 1 | 5-20P |
| H138NPSC-15A | 120 | 1500 | 12.5 | 60 | 1 | 5-15P |

Note: The above model numbers are basic models. They will be followed by numbers and letters.

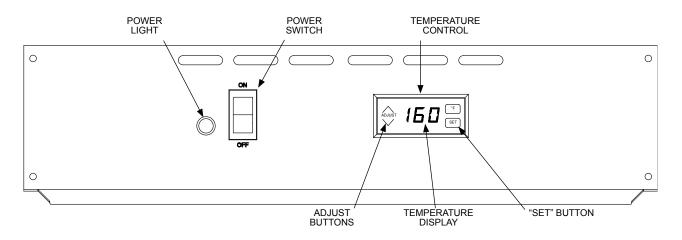

INSTALLATION:

- 1. Remove all paper and packing material from inside of cabinet.
- 2. Remove protective paper and vinyl material from outside surfaces of cabinet.
- 3. Place the cabinet in a well-ventilated area.
- 4. Place cabinet on level floor.
- 5. Plug cord end into proper wall outlet.



FIRST TIME START-UP:

1. Push the POWER switch to "ON", and run the unit for one hour.

NOTE: *DO <u>NOT PUT FOOD INTO CABINET!</u>* This step is to burn off manufacturing oils and excess adhesive.

2. Let the cabinet cool and wipe inside clean with detergent and hot water before first use.

HOW TO HOLD:

- 1. Push POWER switch to "ON." Yellow POWER LIGHT will come on.
- 2. Push the "SET" button on the TEMPERATURE CONTROL. The TEMPERATURE DISPLAY will show "SP1" (set point 1).
- 3. Press "SET" again and the current set point temperature will be displayed.
- 4. Press the ▲ ➤ ADJUST buttons to adjust to the desired temperature.
- 5. Press "SET" to save the temperature setting.
- 6. Preheat cabinet for 45 minutes.
- 7. Put product into cabinet.

NOTE: Proper food holding temperature is 140°F/60°C or higher.



Blower inlet guard must be in place before operating cabinet.



| Holding Cabinet | FL-2331 | |
|-----------------|-------------|--|
| Rev. 3 (3/14) | Page 3 of 7 | |

MAINTENANCE INSTRUCTIONS



BEFORE cleaning the cabinet:

- 1. Unplug the cabinet from the wall.
- 2. Allow cabinet to cool.



- 1. Do *NOT* use abrasives (steel wool) or harsh chemicals (chlorine, bromine, iodine or ammonia).
- 2. Do *NOT* use a water sprayer (pressure sprayer) to clean the cabinet

Cleaning hints:

- 1. Wipe up spills as soon as possible.
- 2. Clean cabinet daily to avoid heavy dirt build-up.
- 3. Make a test spot with cleaner:
 - a) Follow manufacturer's directions on cleaner.
 - b) Do not mix cleaners.
 - c) Avoid drips and splashes.

HOW TO CLEAN THE UNIT:

| | Soil | Cleaner | Method |
|----------------------------------------------|------------------------------------------------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| | DAILY CLEANING | Mild detergent and hot water. | Sponge on with cloth. Rinse with water. Wipe dry. |
| CABINET Inside and Outside (Stainless Steel) | STUBBORN SPOTS AND Mild abrasive made for stainless steel. | | Apply with damp sponge or cloth. Rub lightly. Rinse with water and wipe dry. |
| | BURNT-ON FOODS OR GREASE | Chemical oven cleaner for stainless steel. | Follow oven cleaner manufacturer's directions. |
| | HARD WATER SPOTS and SCALE | Vinegar | Swab or wipe with cloth. Rinse and dry. |

*Mild detergents include soaps and non-abrasive cleaners.

Note: Gaskets are removable for cleaning.



| Holding Cabinet | FL-2331 |
|-----------------|-------------|
| Rev. 3 (3/14) | Page 4 of 7 |



TROUBLE-SHOOTING

FAILURE

- 1. POWER LIGHT (Yellow) does NOT light.
- 2. Unit does not heat.
- 3. Unit gets too hot or won't shut off.
- 4. Blower does not work or makes noise.
- 5. GFCI device trips.

POSSIBLE CAUSE

- 1a. Switch is "OFF".
- 1b. Cord unplugged from wall outlet.
- 1c. Circuit breaker/fuse to wall outlet tripped/blown.
- 1d. Blown fuse
- 2a. Temperature control is set too low.
- 2b. Switch is "OFF".
- 3a. Defective electrical parts.

UNPLUG UNIT FROM WALL OUTLET.

4a. Defective blower.

5a. The insulation inside the heating element may have absorbed some moisture. This may have occurred if the cabinet has not been used for a long period of time or during shipping and storage of the cabinet. Plug the cabinet into a non-GFCI outlet and set the temperature control to its maximum. Let the cabinet run for about 1 hour to dry out the heating element from any moisture may have been absorbed. If the circuit breaker trips, call the factory Authorized service agent. After drying the heating element, plug cabinet into the GFCI receptacle; the cabinet should run properly. If the GFCI device continues to trip, call the factory Authorized service agent.

GFCI (ground-fault circuit interrupter): A GFCI receptacle is a device that de-energizes a circuit when it detects an unsafe flow of current to ground. The intention of a GFCI device is to minimize the potential for an electrical shock.


If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400



| Holding Cabinet | FL-2331 |
|-----------------|-------------|
| Rev. 3 (3/14) | Page 5 of 7 |

REPLACEMENT PARTS

Include all information on nameplate when ordering parts

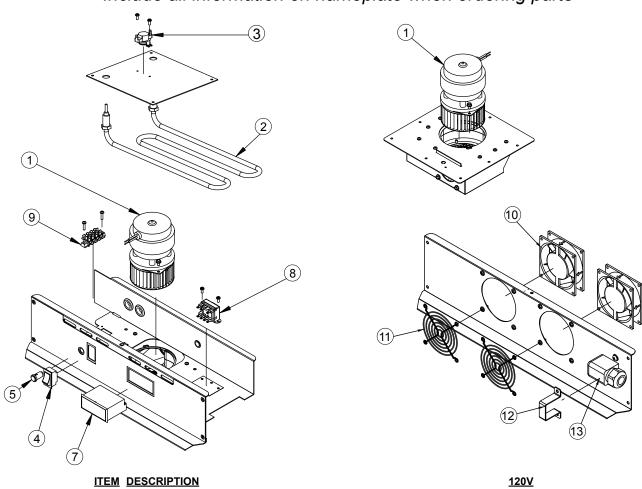


| <u>TEM</u> | DESCRIPTION | | <u>120V</u> |
|------------|----------------------------------------|-----------|----------------|
| 1 | Blower Kit | | 0769-180-K |
| 2 | Heater Kit, Air | 1850 Watt | 0811-022-K |
| | | 1370 Watt | 0911-289 |
| 3 | High Limit | | 0848-060 |
| 4 | Power Switch | | 0808-116-K |
| 5 | Power Light | | 0766-094 |
| | Relay - Solid State (not shown) | | 0857-134 |
| 7 | Temperature controller | | 0848-075-CC-K |
| 8 | Transformer (used with Temp controlled | 0769-159 | |
| 9 | Terminal Block (4 pole) | | 0852-093 |
| | Terminal Block (2 pole) | | 0852-091 |
| 10 | Vent Fan | | 0769-165 |
| | Power Cord (not shown) | 20 Amp | 0810-065-14-LK |
| | Power Cord (not shown) | 15 Amp | 0810-029-02 |
| 11 | Fan Guard | | 0769-167 |
| 12 | Cord Bracket | | 0553-757 |
| 13 | Strain Relief 90° | | 0818-095 |
| | | | |

| Holding Cabinet | FL-2331 | |
|-----------------|-------------|--|
| Rev. 3 (3/14) | Page 6 of 7 | |



REPLACEMENT PARTS

Include all information on nameplate when ordering parts

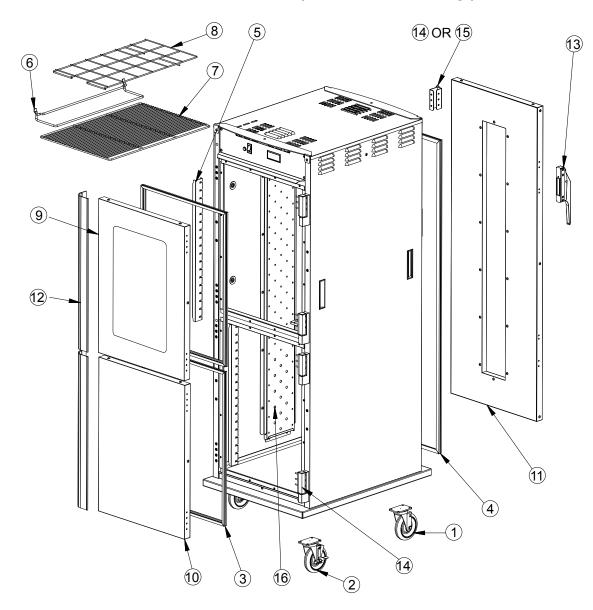

CABINET REPLACEMENT PARTS: H138NPSCDOM3

Door, front, window

Door, front, solid

10

| Item | Description | Part No. | Item | Description | Part No. |
|------|-------------------------|-------------|------|-------------------------------|---------------|
| 1 | Caster | 0569-306-K | 11 | Door, back, window | 1221-629-K |
| 2 | Caster with brake | 0569-306-BK | 12 | Handle, door | 0911-111 |
| 3 | Gasket, front doors | 0861-245-K | 13 | Latch, door | 1006-120-01-K |
| 4 | Gasket, back door | 0861-246-K | 14 | Hinge Kit, lift off, set of 2 | 0519-114-K |
| 5 | Post, rack | 0696-228 | 15 | Hinge, butt type | 0519-089 |
| 6 | Angle, Wire, set of 2 | 0621-281-K | 16 | Air tunnel | 0546-120 |
| 7 | Wire shelf | 1170-005 | | Door stop | 0553-740 |
| 8 | Wire blower inlet guard | 1170-211 | | | |

1221-610-K 1221-534-K



| Holding Cabinet | FL-2331 | |
|-----------------|-------------|--|
| Rev. 3 (3/14) | Page 7 of 7 | |

