## 



## **Instructions To Deploy and Lock Feet For Stacking & Storage**

## To Deploy Feet:

- 1. Step on foot, then pull barricade upward to unlock
- 2. Rotate foot 90° clockwise
- 3. Push down on barricade to lock foot in place



Stored Position Locked



Stored Position Unlocked

To Lock Feet for Stacking & Storage:

- 1. Step on foot, then pull barricade upward
- 2. Rotate foot 90° counter clockwise
- 3. Push down on barricade to lock foot in place



Deployed Unlocked



Deployed Locked

