



# DELUXE PUB HEIGHT WOOD HIGH CHAIR

## ASSEMBLY INSTRUCTIONS

Model# 910-KD

Youngstar



### Inspection and Maintenance

Inspection	Maintenance
Check that both ends of strap are non-frayed	Chair should be kept clean and sanitized
Check the crotch strap is non-frayed and is firmly attached on both ends	Using a soft rag and non-abrasive cleaner, wipe down all parts of the high chair
Check that the warning label is intact	
Check all chair connections are firmly attached. Tighten as necessary	Do not use bleach or abrasive cleaners as it may discolor and scratch the wood



### Warning

**FALL HAZARD:** Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.

Always use restraints and adjust to fit snugly. The child should be secured in the highchair at all times by the restraining system.

Supervision is required. Never leave child unattended. Stay near and watch child when in use.

**You are responsible for the safe operation of this unit!**



**Please Note:** This product is designed for an infant or child capable of sitting upright and unassisted. The child should be secured in the high chair at all times by the restraining system.

**Restraint Usage:** To fasten the waist strap, push both tabs into the buckle receptacle until both lock in place and you hear a "click."



The waist strap can be adjusted to make the strap tighter or looser.


**Do not use** the high chair if any part is broken, torn, or missing.



# DELUXE PUB HEIGHT WOOD HIGH CHAIR

## ASSEMBLY INSTRUCTIONS

Model# 910-KD

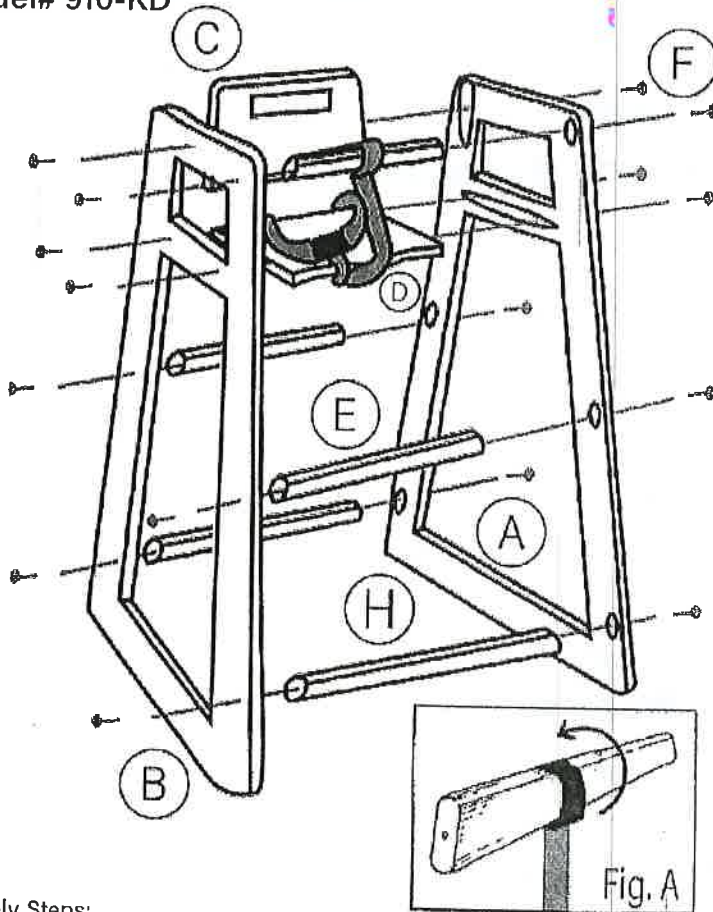

Young's ★

Ships knocked down in 1 carton

### Materials List:

- A. Right side leg panel
- B. Left side leg panel
- C. Seat back
- D. Seat (with seat belt and handrail with crotch strap)
- E. Shorter Lower leg support bar (2)
- F. Connector Bolt (16)
- G. Allen wrench
- H. Longer Lower leg support bar (2)

### Assembly Steps:

1. Insert shorter lower leg support bars (E) tapered end up, making sure the longer lower support bars are in the bottom most slots, into bottom grooves of Left Side Panel (B). Insert longer lower leg support bars (H) tapered end up, into bottom grooves of Left Side Panel (B). Insert bolts and tighten with allen wrench.
2. Insert seat back (C) into groove of left side panel (B), with WARNING LABEL facing the front of the chair. Insert bolt and tighten with allen wrench.
3. Insert seat (D) into middle groove of left leg panel (B) with scalloped edge facing the front of chair. Insert bolts and tighten with allen wrench.
4. With left side leg panel (B) laying down and chair front facing you, straighten crotch strap. Face strap with staples towards seat back. Roll crotch strap 2 times towards seat (or to your right) until strap is tight. Fit hand rail into groove of left leg panel (B).
5. Roll chair to side, insert bolt into hand rail and tighten with allen wrench.
6. Join right side leg panel (A) to all the parts, starting with the back support, seat, leg supports, and lastly the bar with the crotch strap that has been rotated to make sure the strap is tight from seat to bar (Fig. A).
7. Insert bolts starting with the back, seat, leg supports, and finishing with the bar with the crotch strap. This ensures the crotch strap is securely tight. Bolts should be recessed into the hole when tight.

