



StrongArm®

12 Volt DC
ELECTRIC WINCHES

OWNER'S MANUAL

MODELS SA5000, SA5015, SA7000, SA7015,
SA9000, SA9005, SA9015, SA12000 & SA12015




⚠ WARNING: READ INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE OR SERVICE THE **STRONGARM** ELECTRIC WINCH. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN SERIOUS OR FATAL INJURY. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.



WINCH RATINGS

ELECTRIC WINCH RATING*

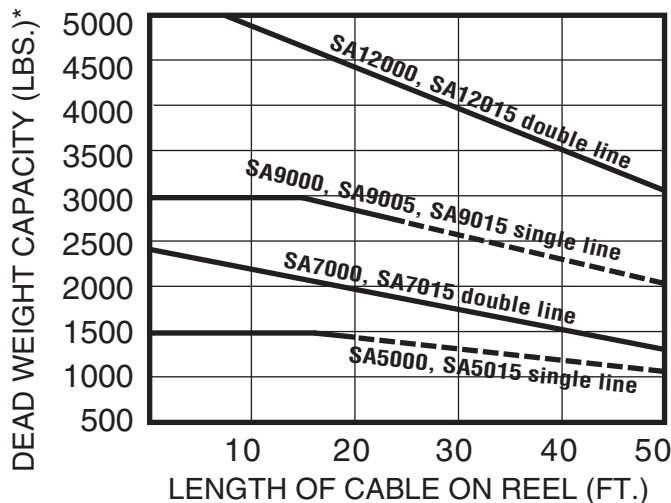

DOUBLE LINE OPERATION

Models SA7000, SA7015, SA12000 and SA12015 are factory equipped with a pulley block and hook and 50' of cable for double line operation. This increases the pulling capacity of the winch as shown, however, care must be taken to allow adequate motor cooling. Note that with double line, a pull of 25' requires reeling in 50' of cable.

For intermittent use only. Ratings at left are based on 10' pull. For longer pulls motor cooling periods must be allowed.

⚠ CAUTION: CONTINUOUS RUNNING IN EXCESS OF 4 MINUTES WILL DAMAGE WINCH MOTOR.

GUIDE TO ROLLING LOAD CAPACITY** Maximum weight in pounds and kilograms rolling load.

MODEL	PERCENT INCLINE						LOAD CAPACITY*
	5% (3°)	10% (6°)	20% (11°)	30% (17°)	50% (26°)	70% (35°)	
SA5000, SA5015	10,000 lbs. 4,536 kg	7,500 lbs. 3,402 kg	5,100 lbs. 2,313 kg	3,900 lbs. 1,769 kg	2,700 lbs. 1,225 kg	2,200 lbs. 998 kg	1,500 lbs. 681 kg
SA7000, SA7015	14,600 lbs. 6,623 kg	11,000 lbs. 4,990 kg	7,400 lbs. 3,357 kg	5,700 lbs. 2,586 kg	4,000 lbs. 1,814 kg	3,300 lbs. 1,497 kg	2,200 lbs. 999 kg
SA9000, SA9005, SA9015	20,000 lbs. 9,072 kg	15,000 lbs. 6,804 kg	10,200 lbs. 4,627 kg	7,700 lbs. 3,493 kg	5,500 lbs. 2,495 kg	4,500 lbs. 2,041 kg	3,000 lbs. 1,362 kg
SA12000, SA12015	30,000 lbs. 13,608 kg	22,600 lbs. 10,251 kg	15,200 lbs. 6,895 kg	11,600 lbs. 5,262 kg	8,300 lbs. 3,765 kg	6,800 lbs. 3,084 kg	4,500 lbs. 2,043 kg

APPROXIMATE LOAD SPEED (FT./MIN.)

	NO LOAD		FULL LOAD	
	Full Reel	Empty Reel	Full Reel	Empty Reel
SA5000, SA5015	33	12	8	4
SA7000, SA7015	16	6	4.5	3.5
SA9000, SA9005, SA9015	11	5	4	2.5
SA12000, SA12015	9	2.5	2	1.5

⚠ WARNING: NOT TO BE USED AS A HOIST FOR LIFTING, SUPPORTING OR TRANSPORTING PEOPLE OR LOADS OVER AREAS WHERE PEOPLE COULD BE PRESENT!

(*) Load capacity (dead weight) is a measure of actual maximum force to which the winch system may be subjected.

(**) All capacities shown are with 15' of cable on the reel and 10% rolling friction factor. For full reel of cable adjust capacities according to graph above. Note 5% incline is one-half foot rise in ten feet.

IMPORTANT SAFETY INFORMATION

⚠ WARNING: FAILURE TO READ AND FOLLOW INSTRUCTIONS BELOW COULD RESULT IN SERIOUS OR FATAL INJURY.

⚠ WARNING: NOT TO BE USED AS A HOIST FOR LIFTING, SUPPORTING, OR TRANSPORTING PEOPLE OR LOADS OVER AREAS WHERE PEOPLE COULD BE PRESENT.

⚠ This winch is not designed for movement of human beings. Do not use for scaffolding, elevators, or any other application in which persons could be positioned on or under the load at any time. Do not use as an overhead hoist.

⚠ Consult with manufacturer before using this winch in any vertical lifting/lowering applications. Tel. 402-462-4141, Fax 402-460-4613. Email: dlsales@dutton-lainson.com

⚠ This electric winch should be respected as power equipment. High forces are created when using a winch, creating potential safety hazards. Never allow children or anyone who is not familiar with the operation of the winch to use it.

⚠ Never exceed rated winch capacity. Dangerously high forces can be created if the load being moved is too large or is allowed to get in a bind, etc. Note that installing longer than normal cable results in increased load on winch. If overloaded, this winch has power enough to break the cable.

⚠ Inspect the winch cable often and replace at the first sign of damage. Never exceed the winch capacity. When cable breaks under tension, it tends to whip toward the winch area. It is recommended that a blanket or rug be placed over the cable during winching operations to minimize this whipping action in case of cable breakage.

⚠ Never apply load to winch with cable fully extended. Keep at least three turns of cable on the reel.

⚠ Keep the winching area free of all unnecessary personnel. Never stand between load and winch.

⚠ The 12 volt D.C. winch operates from a low voltage D.C. source of power (e.g., a car or truck battery). DO NOT connect winch to 120V A.C. power.

⚠ When winching operation has been completed, do not depend on the winch to support the load. Always secure the load properly. Use tie down straps or chains.

⚠ The auxiliary handle is provided for emergency use only. Never use the auxiliary handle as an assist to the motor when the motor is running. Always remove the auxiliary handle when it is not in use. Do not operate the winch motor with the handle installed.

⚠ Keep hands and fingers clear of the drum and cable area of the winch when operating. Do not attempt to guide the cable by hand as it rewinds on the drum.

⚠ The winch must be securely attached to a structural member or frame that is capable of sustaining loads in excess of the winch capacity. When attaching the winch to a vehicle, make sure the mounting pad area is rigidly supported by the vehicle frame. Always block the wheels to prevent vehicle from rolling when pulling a load with the winch. Do not use vehicle pulling power to increase the pulling capacity of your winch.

MOUNTING INSTRUCTIONS

1. Be sure that the mounting surface is of sufficient strength to support a load well in excess of the rated winch capacity. Fasten the winch to the mounting surface with three 1/2" bolts, nuts, washers, and lockwashers. (See base hole pattern.) Be sure that the winch is positioned so that the cable does not rub the front opening of the winch. Your winch is equipped with key hole slots in the base for use with quick-mounting shoulder studs if desirable. If you wish to use quick-mount studs, they should be mounted securely into the mounting surface. After positioning the winch on the studs, a 3/8" bolt should be placed in one of the other holes available to keep the winch securely in position. For double line use, install an eye-hook on the mounting surface close to the base of the winch for fastening the stationary cable hook. Be sure the eye-hook is of sufficient strength to withstand loads in excess of the single line rating of the winch.

WIRING & SWITCH INSTALLATION

MODEL SA9005

Refer to the complete assembly and operating instructions packed in the poly bag with the switch.


MODELS SA5000, SA5015, SA7000, SA7015, SA9000, SA9015, SA12000 and SA12015.

Attach the circuit breaker assembly on the end of the positive (+) wire to the positive battery terminal. Attach negative (-) wire (ground) to the negative battery terminal or a convenient ground location. Make certain that connections are clean and tight. If the wiring is being permanently installed in a vehicle, the wires should be secured so that they cannot come into contact with hot or moving parts.

Continued on next page

MODELS SA5000, SA7000, SA9000 & SA12000

With the wires at the bottom, push the switch/plug into the pocket in the winch housing. The switch should push easily to the bottom of the pocket and excess force should not be required for installation or removal. Rotate the switch in the direction indicated on the winch decal to power the load in or out. Be sure the wires are free to rotate with the switch so that it will return to its center "Off" position when released.

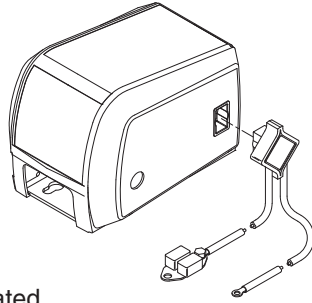


MODELS SA5015, SA7015, SA9015 & SA12015

Attach the power supply plug into the connector located at the back of the winch.

This plug pushes and snaps into place easily and will fit in only one direction.

Connect the remote switch cord to the short cord coming from the back of the winch. The winch can be operated by depressing the "In" or "Out" side of the switch, which will return to off when released.

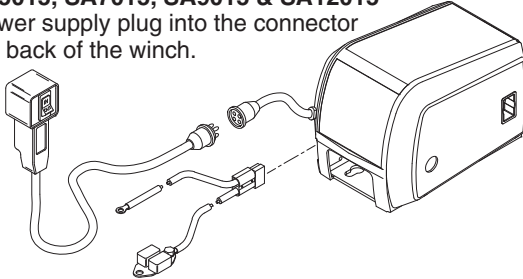

OPERATING INSTRUCTIONS

All models can be powered in or out. Allowing the switch to return to the off position will automatically stop the winch and hold the load.

NOTE: It is normal for smoke to be produced during the initial power down use.

Be sure the battery is fully charged and in top condition to avoid power loss. If using a vehicle battery, leave the engine running on fast idle as a precaution in case the battery is not in top condition.

When the winching operation is complete, secure the load properly with tie down straps or chains. Do not depend on the winch to support the load. Also, remove the power supply plug from the winch to avoid accidental operation.

⚠ WARNING: EVEN THOUGH THE WINCH IS EQUIPPED WITH CIRCUIT BREAKER OVERLOAD PROTECTION, PARTICULAR CARE SHOULD BE TAKEN NOT TO CREATE AN OVERLOAD. PAY ATTENTION TO THE SOUND OF THE WINCH AND THE LOAD BEING PULLED. MAKE CERTAIN THAT THE CABLE TENSION DOES NOT RISE SUDDENLY BECAUSE OF A BIND IN THE LOAD.

⚠ CAUTION: The electric motor is designed for intermittent service only. Extended use without cooling off periods will cause overheating resulting in motor damage. Maximum continuous run time is four minutes.

⚠ WARNING: NEVER ALLOW CHILDREN, OR ANYONE WHO IS NOT FAMILIAR WITH THE OPERATION OF THE WINCH, TO USE IT.

AUXILIARY HANDLE

1. An emergency crank handle is provided for use in the event of a power failure. Remove the electrical power from the winch.
 2. Remove the plastic plug from the side of the winch housing and insert the handle so that it completely engages with the drive shaft. The handle can be cranked in either direction.
- ⚠ WARNING: NEVER OPERATE THE WINCH ELECTRICALLY WITH THE EMERGENCY HANDLE IN POSITION.**
3. Always remove the handle from the winch after use and replace the plastic plug.


WINCH MAINTENANCE

For long life and trouble-free operation your winch should periodically be inspected for any required maintenance. This should be done at least once annually and more frequently in adverse conditions such as salt water areas or areas of extreme dust and dirt.


1. Carefully inspect the winch cable for any kinks, frays or abnormal stiffness and replace at the first sign of this kind of damage. **Go to Dutton-Lainson website: <http://www.dutton-lainson.com/ts.php> for trouble shooting manual, select winch model number and click on symptom "Cable Damage" for complete diagnoses and corrective action.** Periodic lubrication with a light oil will improve the life of the cable. In order to replace the winch cable, it is necessary to remove the four cover mounting bolts. Be sure that the power is disconnected from the housing and lift the housing off of the winch by gently stretching it open near the lower front corner. Rotate the winch reel so that you have access to the rope clamp. Remove the old cable and replace it with a new cable of the same size. Be sure that the cable passes under both sides of the rope clamp and that the clamp is tightened securely.

NOTE: CABLE IS WOUND OVER THE TOP OF THE DRUM ON MODELS SA5000, SA5015, SA7000 AND SA7015 AND UNDER THE DRUM ON MODELS SA9000, SA9005, SA9015, SA12000 AND SA12015. SEE ATTACHMENT METHOD BELOW.

CABLE ATTACHMENT METHODS

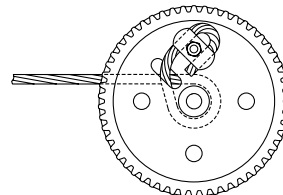

MODELS SA5000, SA5015, SA7000 & SA7015

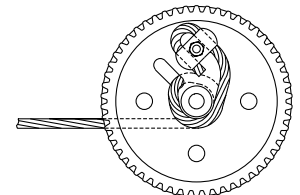

MODELS SA9000, SA9005, SA9015, SA12000 & SA12015


2. With the cover removed as described above, inspect the entire gear train and all drive shafts for any significant wear or loose bearings fits. Grease all of the gears on the inside of the winch base and apply a drop of oil on all of the bearings in the base. Also, place a drop of oil on the roller clutch. Do not over lubricate these areas and do not use grease in the roller clutch. The brake pads and brake disc must be kept clean and oil free.
3. Check the operation of the roller clutch. Carefully rotate the brake disc and observe the motor shaft. When the disc is turned clockwise the motor shaft should turn with it. When the disc is turned counterclockwise the motor shaft should not turn. Also, check all nuts, bolts, retaining rings, etc., to be sure that they are tight and secure.



To order replacement parts contact:
Dutton-Lainson Company
 www.dlco.com
 Tel: 800-569-6577
 Fax: 402-460-4612
 e-mail: DLsales@dutton-lainson.com

In Europe Contact:
 IMDS
 12-13 Eddystone Road
 South Hampshire Business Park
 Calmore SO40 3SA, United Kingdom

All OZ Lifting Products LLC® manual and electric winches are subject to a one year limited warranty. It is the operator's responsibility to ensure that the product is used in accordance with all applicable local codes, regulations, and safety standards. OZ Lifting Products, LLC assumes no liability for any damages or injuries resulting from the improper use of the product.

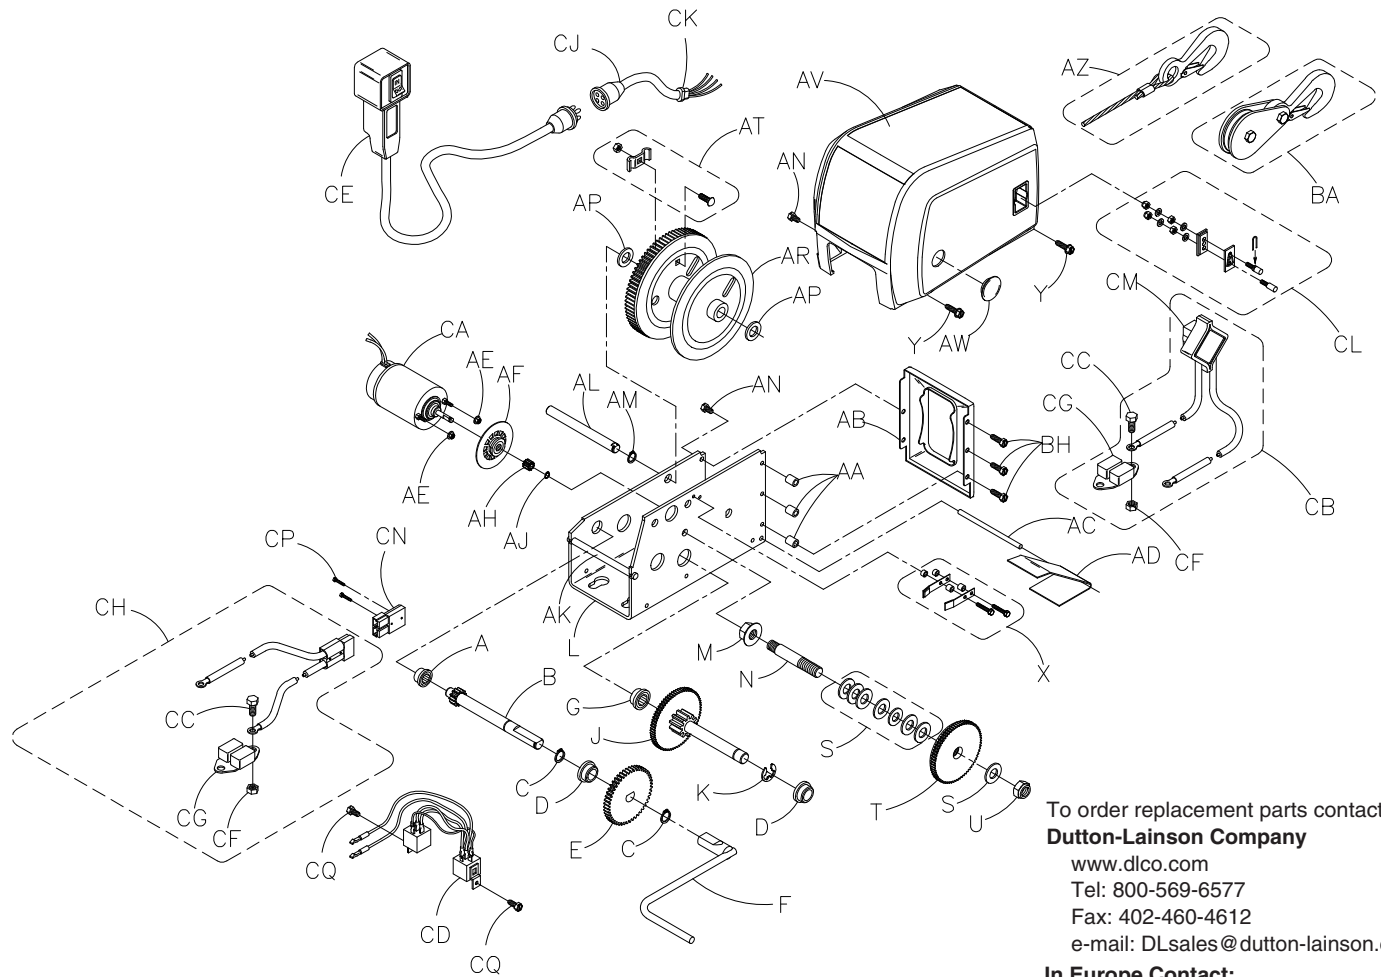

To order replacement parts contact:
Dutton-Lainson Company
www.dlco.com
 Tel: 800-569-6577
 Fax: 402-460-4612
 e-mail: DLsales@dutton-lainson.com

In Europe Contact:
 IMDS
 12-13 Eddystone Road
 South Hampshire Business Park
 Calmore SO40 3SA, United Kingdom

SA9000, SA9005, SA9015, SA12000, SA12015 PARTS LIST

Ref. Part	Number	Ref. Part	Number	Ref. Part	Number
A Bearing Housing Assy	304314	AD Level Wind	204709	MOTOR PARTS	
B Primary Drive Shaft Assy	304304	AE Nut, 10-32 Locknut (2)	205193	CA Motor Assy (SA9000/SA12000)	304349
C Retaining Ring (2)	205191	AF Brake Disc Assy	304422	CA Motor Assy (SA9015 & SA12015)	304973
D Bushing (2)	204012	AH 12T Pinion Gear	404522	CB Switch Assy (SA9000/SA12000)	5240494
E 56T Gear	204703	AJ "E" Ring	205135	(Includes Items CC, CF & CG)	
F Aux. Handle Assy	304412	AK Base Spacer	404510	CC Screw - 1/4x20x3/8	205018
G Drive Shaft Bearing Housing Assy	304313	AL Reel Shaft	404514	CD Relay Assy (SA9015 & SA12015)	304972
J Interm. Drive Shaft Assy	304814	AM Retaining Ring	204468	CE Switch Assy (SA9015 & SA12015)	5240973
K "E" Ring	205116	AN Screw, 1/4x20x1/2" (4)	205189	CE In/Out Rocker Switch Only	206431
L Base	404921	AP Washer (2)	205109	CF Nut - 1/4-20	206225
L Base (SA9015/SA12015)	404980	AR Reel Assy	304815	CG Circuit Breaker Assy	304025
M Nut, 7/16-20 Locknut	205192	AT Rope Clamp Kit	5243506	CH Wiring Harness Complete	5241518
N Clutch Stud	404535	AV Cover (DC)	404632	(SA9015 & SA12015)	
S Washer (8)	204360	AV Cover (SA9015 & SA12015)	404991	CJ Pigtail - (SA9015 & SA12015)	304917
T Gear Assy	304319	AW Cover Plug	204713	CK Strain Relief (SA9015 & SA12015)	206670
U Nut	205015	AZ Cable & Hook (7/32x25')	5240478	CL Pocket Plate Replacement Kit	5703129
X Brake Spring Replacement Kit	5703160	AZ Cable & Hook (7/32x50') (Opt.)	5240452	CM Replacement Switch Kit	5240411
Y Screw, 1/4-20x1" (2)	205190	BA Pulley Block & Hook (Complete)	5240270	CN Connector	206055
AA Spacer (3)	404513	BE Top Decal (Not Shown) SA9000	206680	CP Screw, 6-32x7/8 (2)	204959
AB Front Plate	404511	BE Top Decal (Not Shown) SA9015	206012	CQ Screw, 1/4-20x3/8 (2)	205337
AC Level Wind Pin	404516	BH Screw 1/4-20x7/8 (3)	205242	CR Remote Switch (Complete)	5240668
				(SA9005)	



A Dependable Company Since 1886
DUTTON-LAINSON COMPANY
 Hastings, NE 68902 U.S.A • Tel 402-462-4141 • Fax 402-460-4612
 E-mail dlsales@dutton-lainson.com • Web Site www.dutton-lainson.com

**MADE IN
USA**