


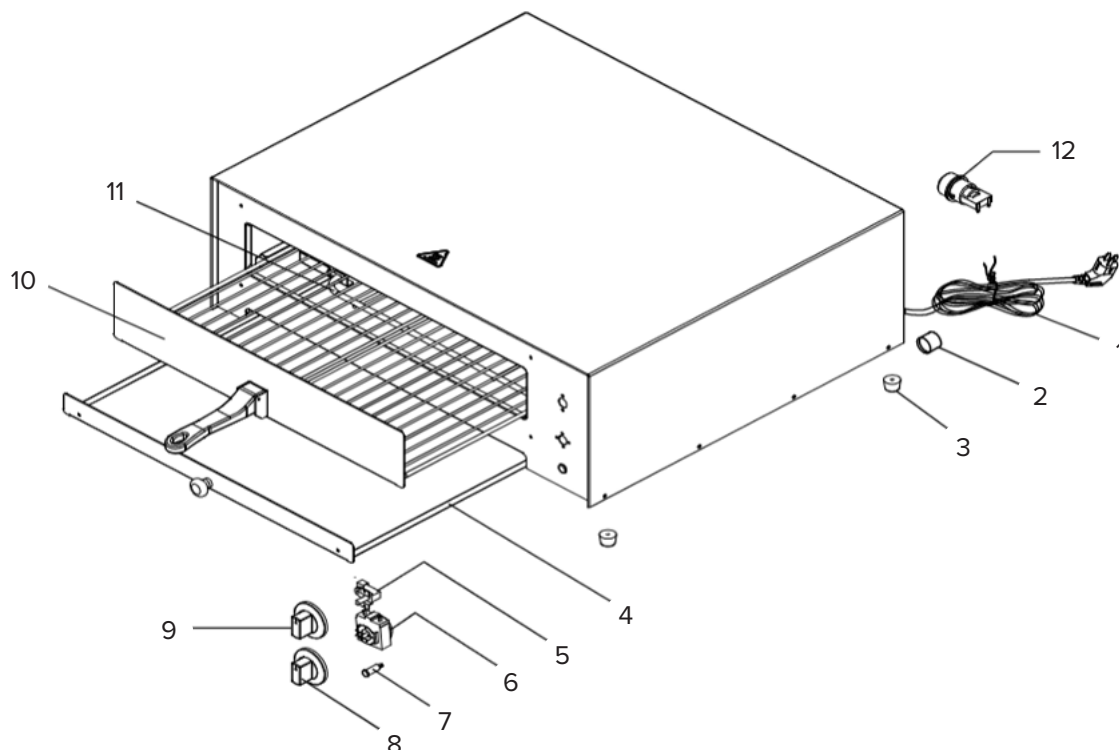

Exploded Parts Reference

ITEM KEY	PART DESCRIPTION		PART NUMBER
1	Power Cord	177DPO18S2	
2	Wire Buckle	—	
3	Feet	177CPO16FEET	
4	Crumb Tray	177PCPO1611	
5	Thermostat	177PCPO1618	
6	Timer	177PCPO1619	
7	Power Indication Light	177PCPO1622	
8	Timer Knob	177PCPO1621	
9	Thermostat Knob	177CPO16KNOB	
10	Door Assembly	177PCPO16DR Solid	177PCPO16GDR Glass
11	Heating Element	177PCPO1616	
12	Internal Light	—	