


■SL-605K / SL606STK Bag Sealers

Spare Parts **DIAGRAM**

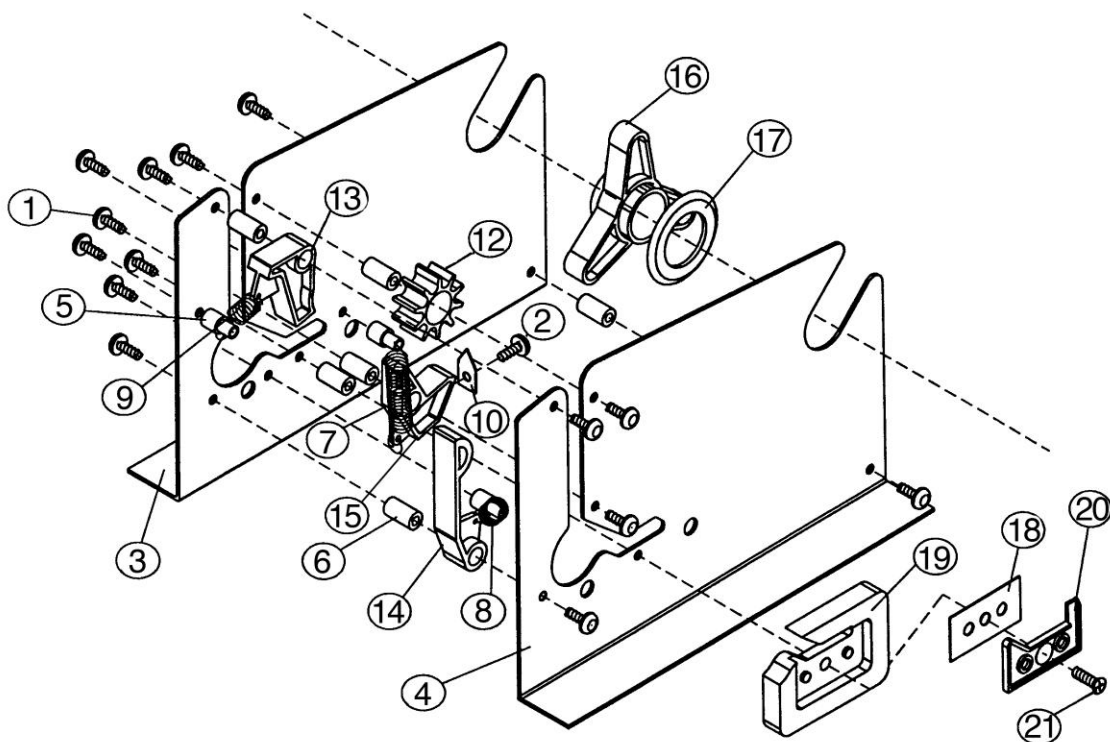

No.	Parts No.	Description	Part #
1	210321	Screw	
2	210324	Screw for Inside Blade (Tape)	SL6-2
3	605001	Left Side Plate	
4	605002	Right Side Plate	
5	605003	Spring Hook/Spacer	
6	605004	Stud for Screw/Spacer	
7	605005	Inside Blade Holder Spring 7 x 21mm	SL6-7
8	605006	Breaker Spring/Pressure 7 x 21mm	SL6-8
9	605007	Tape Stand Spring/Slide Spring 7 x 24mm	SL6-9
10	605008	Blade-Puncture Blade	SL6-10
11	605009	Felt Leveling Pad	
12	605010	Gear/Plastic	SL6-12
13	605011	Tape Stand	SL6-13
14	605012	Breaker	SL6-14
15	605013	Inside Blade Holder	SL6-15
16	605014	Tape Core	SL6-16
17	605015	Tape Guide/Washer	SL6-17
18	605016	Trimmer Blade	SL6-18
19	605017	Trimmer Blade Holder	SL6-19
20	605020	Trimmer Blade Cover	SL6-20
21	605021	Screw for Trimmer Blade	
22	210334	Screw for Tape Gun, set	SL6-22