


# SmartAIR FAN CONTROL INSTALLATION

## FIRE SUPPRESSION SYSTEM RELAY (OPTIONAL)

To integrate fan controls with a fire detection / suppression system wire fire panel to supplied relay in VFD enclosure as shown below.

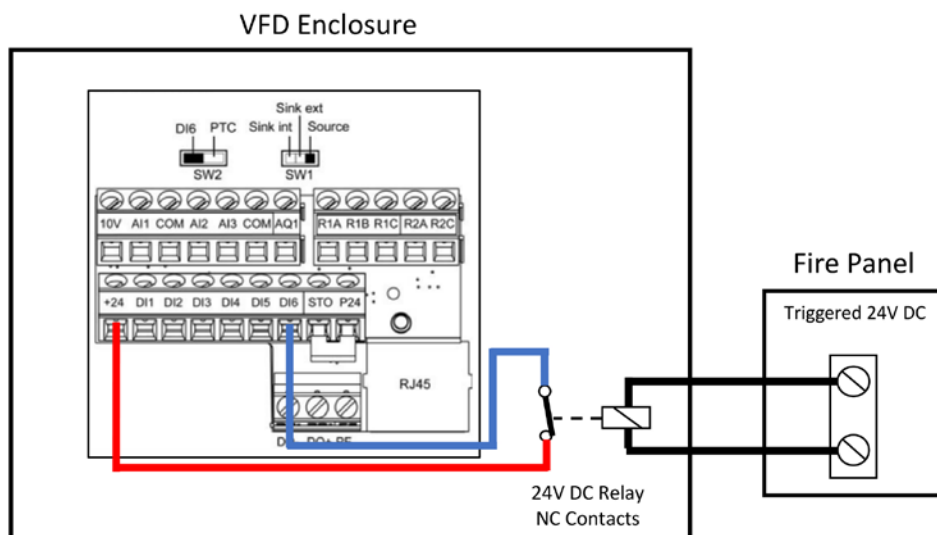

## FIRE RELAY ALARM

If the Fire Relay is activated the fan will decelerate to a stop and a message will display on the HMI (pictured below.) Once the Fire Relay is reset the fan will automatically restart.

## FIRE RELAY JUMPER

If no Fire Relay is to be installed a jumper **MUST** be installed as pictured below for the unit to operate with the SmartAir Control.

