


## QUICK START GUIDE

# Server Remote Dispensing System

Tips and tricks to help you get started with your new Remote Dispensing System.

1

For set-up, you will need a qualified person to install the countertop bracket, a screwdriver, (4) screws, router, and/or saw equipment.


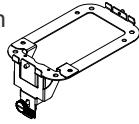


2

Choose a location with easy access and convenient height for pump. Allow room for slack in hose during set-up, pouch replacement, and take-down.




Use cutout template included to mark, cut, and drill holes. Secure the bracket with four screws.

**IMPORTANT TIP:**  
Do not locate countertop hole directly above pouch support(s). Offset the hole to leave space for pump and hose below.

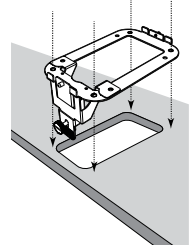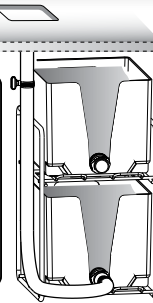


3

Insert pump into bracket. Always clean pump first. Refer to separate instructions for pump. Insert pin on rear of bracket into hole on rear of lid. Pull the under-counter lever forward to allow front pin of bracket into front hole of lid. Release lever to secure front bracket pin. Tighten thumbscrew to lock lever.

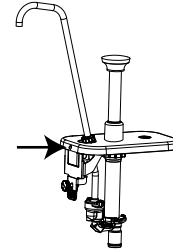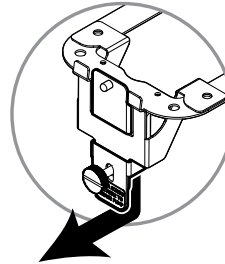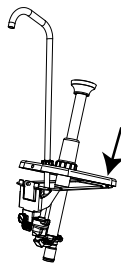


4

Attach the hose to pump by sliding onto valve connector at bottom of pump. Rotate hose clamp turn-key clockwise to secure. Hose may be trimmed if length is excessive.

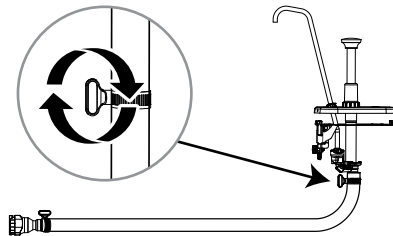


5

Prepare pouch(es). If pouch has 38MM external connector, remove pouch cap and screw dispensing cap onto connector.

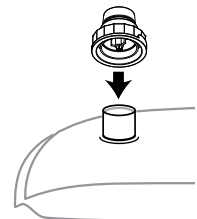

6


If pouch has 16MM internal fitment, screw dispensing cap onto adapter. Position adapter directly over center of pouch fitment and press down to pierce through film in pouch fitment.

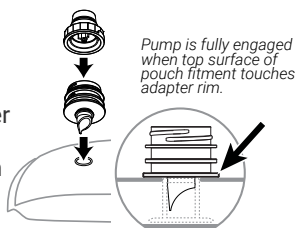

Pump is fully engaged when top surface of pouch fitment touches adapter rim.


7

Place pouch(es) in to pouch supports. Locate dispensing cap in front slot directed downward for best evacuation of condiment.

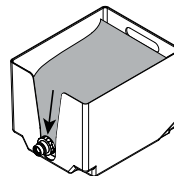


8

Place support(s) beneath counter. Connect hose to pouch. Prime pump until condiment comes out.

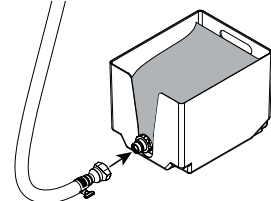

## WANT TO LEARN MORE?

Visit [server-products.com/manual-more](https://server-products.com/manual-more) for your manual, part breakdown, support videos and more.  
[spsales@server-products.com](mailto:spsales@server-products.com) | 800.558.8722

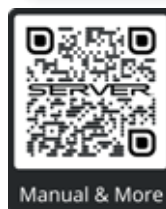

Manual & More

MODEL  
XXXX  
P/N  
#####



SERIES  
##X ##X

**2** YEAR  
WARRANTY

REFERENCE YOUR PART NUMBER  
(P/N) LOCATED ON THE LID OR BASE.

CUTOUT TEMPLATE

Full Scale 1:1

