



Electric Countertop Ice Crusher



Intertek
5020158

CONFORMS TO UL STD. 982

Models: 177CTIC300

09/2022

Please read and keep these instructions. Indoor use only.

Thank you for purchasing and using our Galaxy electric countertop ice crusher. To make best use of this product and avoid damage and injury, please read this manual carefully before using the machine, and keep it handy for future reference.

Important Safeguards

Whenever used, the following items identify safety and property damage messages, and designate a level of hazard seriousness.



This safety alert symbol alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER: Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Use of this signal word is limited to the most extreme situations.

WARNING: Indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or property/product damage. It also alerts against unsafe practices.

NOTICE: Addresses practices not related to personal injury, such as product and/or property damage.



Warning

To reduce the risk of fire, electric shock, or serious personal injury:

- Keep the product out of the reach of children and pets. This product is not intended for use by children. Supervision is necessary when using any appliance near children.
- Never leave the ice crusher unattended.
- Do not touch hot surfaces. Always use the handle and knobs of the product.
- Do not immerse the power cord, plug, or product in water or other liquids.
- Make sure all controls are "off" before unplugging the unit, and then remove the plug from the wall outlet by pulling directly on the plug
- Do not plug or unplug the product from the electrical outlet with a wet hand.
- Do not leave the product unattended while it is in use.
- Do not place the crusher on or near a hot gas or electric burner.
- Do not operate the product if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if it is dropped in or exposed to water.
- This product has no user-serviceable parts; do not attempt to examine or repair it yourself. Only qualified service personnel should perform any repairs.

Caution

To reduce the risk of personal injury:

- This product is intended solely for indoor use. Do not use the product outdoors or for any other purpose than intended.
- Do not allow the power cord to hang over the edge of a table or counter where it may be tripped over or pulled.
- Do not let the cord touch hot surfaces.
- Always operate the product on a flat, level, stable, heat-resistant surface.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.

Special Instructions

- To avoid a circuit overload when using this product, do not operate other high wattage products on the same electrical circuit.
- A short power supply cord is provided to reduce the risk of becoming entangled or causing a tripping hazard. Use of an extension cord is not recommended.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature, as the plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Do not alter the plug or attempt to defeat the safety purpose of the plug.

To Use

WARNING: Sharp blades, do not place hands in or near the hopper while the motor is running.

NOTICE: Do not remove any permanent instruction labels or the data labels on your appliance.

Before using this equipment, it must be cleaned and dried thoroughly. Clean all surfaces before use. Failure to clean surfaces before using the unit could cause food contamination.

This ice crusher is intended for crushing ice cubes for use with cocktails, oyster platters, or other bar necessities; ice cubes should be a maximum of 2 inches in diameter. Larger pieces should be broken up before processing through the machine. Your Ice crusher machine can produce up to 10 lb. of ice per hour.

1. Place the ice crusher on a level surface and in a place where it cannot be pushed off the counter.
 - a. Keep the area at the front of the unit clear for unobstructed access during operation.
2. Make sure the handle is lifted and the main switch is turned OFF before plugging into an outlet.

WARNING: Never allow any foreign or metallic objects around the shaver area or inside the hopper. Ice picks, scoops, and debris can damage the blade, cause harm, and may result in food contamination.

3. Lift the handle and load the horn with ice cubes. Do not overfill.
 - a. Allow the ice cubes to temper for at least 5-10 minutes for best results. We do not recommend using ice straight from the freezer.
4. Depress the handle to push the ice cubes through the blade. Crushed ice will come out the bottom of the chute into the stainless-steel catch tray.

NOTICE: This unit is fitted with a safety micro-switch. When the handle is raised, the machine will not work. The handle must be depressed for the motor to work.

5. Once desired amount of ice is crushed, please turn OFF the machine using the main switch.
6. Repeat steps 3-4 for multiple batches.

Care and Maintenance

WARNING: To avoid electrical shocks or burn hazards, always make sure the product is unplugged from the electrical outlet and allowed to cool completely before cleaning.

- Operate the motor for a few minutes to remove any ice or water collection on the cutter head.
- Turn OFF the power switch and unplug the unit.
- Use a damp cloth/sponge and a mild detergent to clean the product's surfaces, ensuring that no detergent remains around the horn or cutting head.

WARNING: Do not immerse the product in liquid or place in a dishwasher. Do not spray water or cleaning products.

NOTICE: Do not use abrasive cleaners/pads to clean any part of the product.