





# Induction Counter-Top Series Griddle-Line Single And Dual Models

### Instructions For Installation And Use

⚠ CAUTION: Read the instruction before using the machine. Note: This device line is intended for professional use only.



### models

INSTINCT Griddle 3
INSTINCT Griddle 3.5
INSTINCT Griddle 5
INSTINCT Griddle 7
INSTINCT Griddle 10

Translation of Original Instructions - English



This Manual can also be found on www.garland-group.com



### **READ THIS MANUAL**

### **A** Warning

Read this manual thoroughly before installing, operating, or performing maintenance on the equipment. Failure to follow instructions in this manual can cause property damage, injury or death.

This manual must always be available for reference at the place of operation.

This manual is intended for kitchen consultants, cabinet designers, fabricators, installers, owners and operators of our appliances.

Owners, consultants, fabricators and designers:

In order for the appliance to function safely and normally, you must read and understand all specific and critical requirements (such as location, ventilation, clearance) when designing the location and/or the electrical cabinet for the appliance.

Installers, operators and staff:

For your safety and safety of the others, you must observe all safety instructions during installation, operation and maintenance of the equipment.

Should you require technical assistance, call your factory authorized service agent or distributor. Always have your model and serial number available when you call.

Your Factory Authorized Service Company and
Contact Information
Your Equipment Supplier and Contact Information
Model Number
Serial Number
Date of Installation

### **ABOUT THIS MANUAL**

Throughout this manual, the induction appliance model indicated on the cover page is referred to as **appliance**, **induction appliance** or **equipment**.

A period (.) is used in this manual as the decimal separator.

Original measurements are in metrics. Measurements in imperial are provided for reference.

Not ALL models, options and accessories are available in all geographical regions. Please consult your equipment supplier for the availability of the specific products in your region.

### **INSPECT THE SHIPMENT**

Thoroughly inspect the equipment upon delivery. Immediately report to the delivery carrier, any damage that occurred during transportation and request for a written inspection report from a claim inspector.

Keep all packages.

### **KEEP THE PACKING SLIP**

The packing slip attached to the shipment contains detailed information on all components. Keep the packing slip for reference.

# Safety Notices DEFINITIONS

### **A** DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury. This applies to the most extreme situations.

### **A** Warning

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

### **!** Caution

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

### **Notice**

Indicates information considered important, and is used to address practices not related to physical injury. For example, messages relating to property damage.

NOTE: Indicates useful, extra information about the procedure you are performing.

# SAFETY SYMBOLS AND WARNINGS ON THE APPLIANCE



This symbol alerts you to a hazardous situation that WILL or COULD cause serious bodily harm or death. Be alert and implement relevant safety precautions.



### **DANGER - HIGH VOLTAGE**

This dangerous voltage warning symbol indicates a risk of electric shock and hazards from dangerous voltage.



### **Electromagnetic Field**

This symbol warns against non-ionizing electromagnetic radiation.



### **Equipotential bonding**

This symbol marks the terminal which has to be connected with the equipotential bonding system.



### Warning 🕰



RISK OF FIRE OR ELECTRIC SHOCK! DO NOT OPEN!

To reduce the risk of fire or electric shock, do not remove or open cover. No user-serviceable parts inside.

Refer servicing to qualified personnel.

### **A** DANGER

Disconnect from supply cicuit befor opening.

CAUTION /



**ATTENTION** 

DISCONNECT FROM SUPPLY CIRCUIT BEFORE OPENING COUPER L'ALIMENTATION ELECTRIQUE AVANT D'OUVRIR DESCONECTAR DEL CIRCUITO DE SUMINISTRO ANTES DE ABRIR Αποσυνδέστε από τον καλωδιακό εξοπλισμό πριν ανοίξετε

إفصل الجهاز عن الدائرة الكهربية قبل الفتح.

### **DISCLAIMERS**

### **A** DANGER

Disregarding any safety instructions may cause harm to people, the surroundings, and the equipment. The manufacturer and/or authorized representative are not responsible for any damages or personal injury caused by failure to observe any safety instructions. Risks involved when disregarding safety instructions include, but not limiting to:

- Death or injury caused by electric shock.
- Burn injury caused by contacting hot cooking surface, cookware, or oil and grease.
- Damage to the equipment caused by using unsuitable cookware.

### **A** DANGER

Do not install or operate equipment and/or accessories that have been misused, abused, neglected, damaged, or altered from that of original manufactured specifications.

### **A** DANGER

Contact the manufacturer if you intend to make any changes on the equipment. For safety reasons, always use genuine parts and accessories approved by the manufacturer or authorized representative. Refer to the warranty documents for your equipment.

### **A** Warning

The single phase models have a power inlet intended to make the model universal. Using a cord that is not factory supplied can lead to several hazards if the wrong cord and plug attachment is installed and used. Example fire and burn hazard, risk of electric shock, risk or failure to function correctly

### **A** DANGER

Owners and operators are cautioned that maintenance and repairs must be performed by an authorized service agent using only genuine replacement parts. The manufacturer will have no obligation with respect to any product that has been improperly installed, adjusted, operated or not maintained in accordance with national and local codes and/or installation instructions provided with the product or any product that has its serial number defaced, obliterated or removed, and/or which has been modified or repaired using unauthorized parts or by unauthorized service agents.

### **A** DANGER

Improper installation, adjustment, alteration, service, or maintenance of this appliance or installation of a damaged appliance can result in DEATH, INJURY, EQUIPMENT DAMAGE, and void the warranty.

### **A** DANGER

All utility connections and fixtures must be maintained in accordance with local and national codes.

### **A** Warning

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance. Never use flammable oil soaked cloths or combustible cleaning solutions for cleaning.

### **A** Warning

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision concerning use of the appliance by a person responsible for their safety. Do not allow children to play with this appliance.

### **A** Warning

This product contains chemical known to the State of California to cause cancer and/ or birth defects or other reproductive harm. Operation, installation, and servicing of this product could expose you to airborne particles of glass-wool or ceramic fibers, crystalline silica, and/or carbon monoxide. Inhalation of airborne particles of glass-wool or ceramic fibers is known to the State of California to cause cancer. Inhalation of carbon monoxide is known to the State of California to cause birth defects or other reproductive harm.

### **A** Warning

Authorized Service Representatives are obligated to follow industry standard safety procedures, including, but not limited to, local/national regulations for disconnection / lock out / tag out procedures for all utilities including electric, gas, water and steam.

### **Notice**

This appliance is not approved or authorized for home or residential use, but is intended for commercial applications only. The manufacturer and/or authorized representative will not provide service, warranty, maintenance or support of any kind other than in commercial applications.

### **Notice**

Routine adjustments and maintenance procedures outlined in this manual are not covered by the warranty.

NOTE: Proper installation, care and maintenance are essential for maximum performance and trouble-free operation of your equipment. Visit our website for manual updates, translations, or contact information for service agents in your area.

### CORRECT DISPOSAL OF THIS PRODUCT



This marking shown on the product indicates that the product should not be disposed as household waste or regular commercial waste. Instead it

shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed correctly, you will help prevent potential harm to the environment or human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information regarding recycling of the product, please contact your local city office or your waste disposal service.

### **A** DANGER

Induction appliances, sent for disposal, can be brought back into operation and their use must be avoided.

NOTE: The appliance is built with common electrical, electromechanical and electronic parts. No batteries are used.

NOTE: The owner and operator are responsible for the proper and safe disposal of the appliance.

### Wichtig

Additional Safety Notices are stated in the relevant sections throughout the manual.

### **Table of Contents**

Safety Notices		
	Definitions	4
	Safety symbols and Warnings on the Appliance	
	Disclaimers	
	Correct Disposal of This Product	
Table of Contents		
Section 1		
General Information		
	Description of Product	10
	Application	
	Compliances	
	Serial Plate Location	
	Model Number	
	Serial Number	
Section 2 Installation		
	Installation Safety—Disclaimer	14
	Installation Safety—Clearance and Ventilation	
	Installation Safety—Electrical	
	Personal Protection	
	Specifications	
	Dimensions: INSTINCT Griddle 3, INSTINCT Griddle 3.5, INSTINC	CT
	Griddle 5	17
	Dimensions: INSTINCT Griddle 7, INSTINCT Griddle 10	18
	Installation Clearance	19
	Electrical Specifications	19
	Electrical Cables	19
	Operating Conditions	20
	Weights	
	Installation Instructions	21
	Location of the Induction Appliance	21
	Ventilation Requirements	
	Leveling the appliance	
	Adjusting Legs	
	Commissioning	
	Function Test	22
Section 3 Operation		
	Operation Safety—Disclaimer	23
	Operation Safety—Personal Protection	
	, , , , , , , , , , , , , , , , , , ,	

	Important Rules—Operation and Maintenance	25
	Display and Control Quick Reference	26
	Control	27
	Turn unit on	27
	LED Ring	27
	Selecting Temperature	27
	Setting the Timer	27
	Turning off	27
	Decommissioning	28
	Considerations	29
	When Appliance Is Idle	
	Short Heat-Up Time	
Section 4	·	
Maintenance		
Manitenance		
	Maintenance Safety—Disclaimer	
	Dangerous Electrical Voltage	
	Maintenance Safety—Cleaning	
	Personal Protection	
	Daily Cleaning and Maintenance	
	Stainless Steel case	
	Grease drawer	
	Cleaning the Griddle Plate	33
	Weekly Cleaning and Maintenance	34
	Air Intake Filter	34
	Yearly Maintenance	34
Section 5		
Troubleshooting		
•	B	25
	Dangerous Electrical Voltage	
	Common Problems	
	Symptoms	
	Dangers Avoidance in case of accidents or malfunctions	
	Troubleshooting Without Error Code	
	Troubleshooting — Error Code	38

### Section 1 **General Information**

### **Description of Product**

Built with a robust construction, our induction appliances are compact and powerful with the revolutionary RTCSmp® Technology (Realtime Temperature Control System).

The RTCSmp® Technology monitors continuously in realtime, the energy supply, temperature of the cook zone and the state of the components such as the induction coil. This monitoring system ensures the most efficient energy transfer, as well as maximizes safety:

When a malfunction occurs, the integrated fault diagnostic system reports the malfunction.

### **Application**

The RTCSmp® induction appliances are designed as compact equipment for use on the surface of a counter or table.

The patented induction RTCSmp® Griddles are engineered for cooking a large variety of meals.

Many applications are possible because:

- · Instant energy transmission from induction coil to griddle plate surface allows for fast startup time.
- · Heat distribution is even from corner to corner, across the entire cooking surface.
- The cooking surface is controlled and monitored by multiple sensors. Instantaneous temperature recovery is feasible.
- The griddle plate is coated with a polished HP-CR-INOX layer, which is resistant to abrasion, corrosion, and heat. This feature strengthens the griddle plate and minimizes cleaning time in between meal preparations.
- <sup>1</sup> Europatent EP 0858722, Swiss Patent 695817, US Patent 7183525 B2

### **Compliances**









400V and 208V-230V models comply with the latest European Norms:

EN 55014-1 EN 55014-2

EN 60529 EN 62233 (EMC/EMV)

EN 60335-2-36 EN 60335-1 EN 60335-2-38 EN 61000-3-11

EN 61000-3-12

208V and 208V-240V models comply with the latest North American Norms:

UI 197

cULus Listed to CSA 22.2 109-M1981

**UL 746C** 

FCC (CFR Title 47 Part 8 and Part 15B)

ICES-001 (Issue 4)

ICES-003 (Issue 6)

UL Sanitation to NSF 4

This device complies with Part 15 and 18 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This ISM device complies with Canadian ICES-

Cet appareil ISM est conforme à la norme NMB-001 du Canada.

UL File No: E502348, E505967

Section 1 General Information

### **Serial Plate Location**

The serial plate is located on the bottom panel of the unit. It specifies the model number, serial number, and electrical specifications of the appliance.

### **Model Number**

The model number is located on the serial plate. This manual covers only the models specified on the front cover of this manual.

### **READING THE MODEL NUMBER**

INSTINCT	Griddle
Griddle	
3/3.5/5/7	Total power in kW
/ 10	NOTE: 10 kW indicates dual
	griddle

### **Serial Number**

Serial number is located on the serial plate.

General Information Section 1



### LIMITED WARRANTY FOR INDUCTION PRODUCTS

(U.S.A & Canada)

### LIMITED WARRANTY

During the warranty period, Garland shall repair or, at Garland's option, replace parts determined by Garland to be defective in material or workmanship, and with respect to services, shall re-perform any defective portion of said services.

The foregoing shall be the sole obligation of Garland under this Limited Warranty with respect to the equipment, products and services. With respect to equipment, materials, parts and accessories manufactured by others, Garland's sole obligation shall be to use reasonable efforts to obtain the full benefit of the manufacturers' warranties. Garland shall have no liability, whether in contract, tort, negligence, or otherwise, with respect to non-Garland manufactured products.

### **EXCLUSIONS FROM COVERAGE**

•This Limited Warranty is available only to the original purchaser of the product and is not transferable. You must have your original sales receipt for warranty coverage.

Repair or replacement of parts required because of misuse, improper care or storage, negligence, alteration, accident, damage in shipment, fire, floods, power changes, use of incompatible supplies or lack of specified maintenance, other hazards or acts of God shall be excluded.

•Warranty protection is only offered for equipment installed with the procedures described in the Garland operations and installation manual.

•Normal maintenance items, including but not limited to, light bulbs, fuses, gaskets, O-rings, interior and exterior finishes, lubrication, de-liming, broken glass, etc.

•Adjustments and calibration of temperatures, speed and air flows.

•Failures caused by erratic voltages or gas supplies.

 $\bullet \text{Where equipment is being used for applications other than those approved by Garland } \\$ 

Equipment exported to foreign countries.

Consequential damages (the cost of repairing other property which is damaged), loss of

time, profits, use or any other non-cooking related incidental damages of any kind.

•Travel costs beyond 100 miles in the USA and 150 km in Canada, or two (2) hours, travel

other than overland, overtime, holiday charges, and any special arrangements.

•Any travel costs above actual time (One-way travel ONLY paid).

-Any charges additional to the SRT (Standard Repair Times) will be authorized and paid at the discretion of Garland.

•Improper or unauthorized repair.

•Flame safety components on all ranges – 90 days from the original equipment installation date.

•This Limited Warranty does not apply and shall not cover any products or equipment manufactured or sold by Garland when such products or commercial equipment is installed or used in a non-commercial application. Installation not within the applicable building or fire codes render this Limited Warranty and any responsibility or obligations associated therein null and void. This includes any damage, costs or legal actions resulting from the installation of any Garland manufactured commercial cooking or warming equipment in a non-commercial application or installation.

### **LIMITATIONS OF LIABILITY**

•The preceding paragraphs set forth the exclusive remedy for all claims based on failure of, or defect in, products or services sold hereunder, whether the failure or defect arises before or during the warranty period, and whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, implied by statute, common-law or otherwise. Garland, its servants and agents shall not be liable for any claims for personal injuries or consequential damages or loss, howsoever caused. Upon the expiration of the warranty period, all such liability shall terminate. THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, ORAL, IMPLIED OR STATUTORY. NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY. GARLAND DOES NOT WARRANT ANY PRODUCTS OR SERVICES OF OTHERS.

### REMEDIES

•The liability of Garland for breach of any warranty obligation hereunder is limited to: (i) the repair or replacement of the equipment on which the liability is based, or with respect to services, re-performance of the services; or (ii) at Garland's option, the refund of the amount paid for said equipment or services.

 Any breach by Garland with respect to any item or unit of equipment or services shall be deemed a breach with respect to that item or unit or service only.

### **ALL GARLAND PRODUCTS**

•Garland Commercial Ranges Limited ("Garland") warrants all products to be free from defects in material and workmanship for a period of 1 year from the date the product is installed or 18 months from the date of shipment from our factories, whichever comes first, unless stated otherwise for specific models or product lines.

### PRODUCT SPECIFIC LIMITED WARRANTY

Heavy duty equipment, Garland Master Series, Garland Induction, U.S. Range Cuisine are warranted to be free from defects in material and workmanship for a period of two (2) years from the date the product is installed or thirty (30) months from the date of shipment from our factory, whichever comes first and one (1) year parts and/or labor.

Stainless steel fry pots are warranted to be free from defects that would cause shortening leaks due to weld failures for the period of one (1) year parts and labor. The stainless-steel fry pots are warranted for five (5) years, however, after one (1) year the warranty is limited to replacement parts only.

### General Market Clamshell Grills/Broilers:

In Canada/USA, are warranted to be free from defects in material and workmanship for a period of two (2) years from the date the product is installed or thirty (30) months from the date of shipment from our factory, whichever comes first and two (2) years parts and/or labor.

All other regions, are warranted to be free from defects in material and workmanship for a period of one (1) year from the date the product is installed or thirty (30) months from the date of shipment from our factory, whichever comes first and two (2) years parts and one (1) year labor.

### Convection oven warranty coverage:

- Garland MCO (full size only) models: two (2) years limited parts and one (1) year labor.
  Door warranty five (5) years limited parts except window.
- Sunfire models: one year (1) limited parts and one (1) year labor. Door warranty three (3) years limited parts except window.
- . U.S. Range Summit models: one (1) year limited parts and one (1) year labor. Door warranty five (5) years limited parts except window.

During the warranty period, Garland shall repair or, at Garland's option, replace parts determined by Garland to be defective in material or workmanship, and with respect to services, shall re-perform any defective portion of said services.

The foregoing shall be the sole obligation of Garland under this Limited Warranty with respect to the equipment, products and services. With respect to equipment, materials, parts and accessories manufactured by others, Garland's sole obligation shall be to use reasonable efforts to obtain the full benefit of the manufacturers' warranties. Garland shall have no liability, whether in contract, tort, negligence, or otherwise, with respect to non-Garland manufactured products.

Note: Warranty terms may vary based on agreement at time of purchase.

### **OVERVIEW OF GENERAL WARRANTY STATEMENTS**

### WHAT WE WILL DO

We will repair or replace the defective appliance, component or part. Such repair or replacement will be at the expense of Garland except for any travel costs above actual time (one-way travel ONLY paid).

### REPLACEMENT PARTS

Parts, 90 days, no labor. KitchenCare 1-844-724-2273 Fax:1-812-406-4100.

### HOW TO GET SERVICE

Contact our Factory Authorized Service agent to obtain warranty service. To find the name and location of the nearest FAS call your dealer, or call the Garland Service Line at 1-844-724-2273. You can also go the Garland website, www.garland-group.com, select Service, select Locator, key in zip code and you will be given the FAS for the zip code entered. When calling for service, please ensure you have the model number, serial number and date of purchase or installation and description of the problem. You must keep sales receipts for proof of the date of purchase.

### WARRANTY CLAIM PROCEDURE

Customer shall be responsible to:

- Immediately advise the Dealer or Garland Factory Authorized Service Agency
  of the equipment serial number and the nature of the problem. For a list of authorized
  service agents, please refer to the Garland web site at www. garland-group.com
- Verify the problem is a factory responsibility. Improper installation, gas adjustments or misuse of equipment are not covered under this Limited Warranty.
- $\,\cdot\,\,$  Cooperate with the Service Agency so that warranty service may be completed during normal working hours.
- Submit sufficient documentation on a timely manner for reimbursement.

### GOVERNING LAW

For equipment, products and services sold in Canada this Limited Warranty shall be governed by the laws of the province of Ontario, Canada; otherwise this Limited Warranty shall be governed by the laws of the state of Delaware, U.S.A., excluding their conflicts of law principles. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety from application to this Limited Warranty.

Garland Commercial Ranges Ltd.
1177 Kamato Road, Mississauga, Ontario, Canada L4W 1X4
844-724-CARE
WWW.GARLAND-GROUP.COM



# Section 2 Installation

### INSTALLATION SAFETY—DISCLAIMER

### **▲** DANGER

Installation must be carried out by registered installation contractors only.

The contractors are responsible for interpreting all instructions correctly and performing the installation in compliance with all applicable national and local regulations.

The warning signs and serial plates on the equipment must strictly be followed.

### **A** Warning

This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.

### **A** Warning

To avoid instability, the installation area must be capable of supporting the combined weight of the equipment and food product. The equipment must be level side to side and front to back.

### **!** Caution

Consultants, fabricators and designers must consult their counter-top suppliers when designing an appropriate support structure and clearance for the counter-top and the installation.

### **Notice**

Induction equipment that is not installed correctly will have warranty voided.

# INSTALLATION SAFETY—CLEARANCE AND VENTILATION

### **A** DANGER

### Risk of Fire or Shock or Equipment Failure

All minimum clearances must be maintained. Air intake vents and exhaust vents must not be blocked or be restricted by the installation.

### **∴** Caution

This equipment must only be operated under an approved ventilation system in accordance with all applicable national and local regulations. Exceptions may apply.

### **Notice**

The maximum ambient temperature for the induction appliance to operate must not exceed 40°C [104°F].

Failure to provide adequate ventilation will cause the appliance to overheat, to reduce power, or to shutdown.

NOTE: Always maintain enough space between and around the equipment for maintenance and service.

Section 2 Installation

### INSTALLATION SAFETY—ELECTRICAL

### **A** DANGER

All electrical connections must be carried out by a certified electrical contractor, who is responsible for the correct rating and installation of the appliance. The contractor has to comply with all legal safety regulations and all applicable national and local electrical codes.

### **A** Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

### **A** Warning

This equipment must be positioned so that the plug is accessible unless other means for disconnection from the power supply, such as circuit breaker or disconnect switch, is provided.

### **A** Warning

**CE Induction Appliance only**: If ground fault current protective switches are used, they must be provided with selective activation and designed for a minimum fault current of 30mA, Type B or B+.

### **Notice**

Ensure the supply voltage and the line current match the specifications given on the serial plate affixed to the appliance. Wrong voltage will damage the appliance. A stable power supply must be provided.

### **Notice**

Always refer to the serial plate on the appliance to verify the electrical data. When the data listed on the serial plate is different than that listed in this manual, contact the manufacturer or the authorized representative.

### Notice

All cables must be routed, protected and tension free.

Installation Section 2

### PERSONAL PROTECTION

### **A** DANGER

All utilities (gas, electric, water and steam) must be OFF to all equipment and locked out of operation according to national/regional, as well as company approved practices during installation, maintenance and servicing. Always allow appliance to cool.

### **A** DANGER

Use appropriate safety equipment during installation, maintenance and servicing.

### **A** DANGER

Never stand, sit, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

### **▲** DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacture about effects of electromagnetic field on your pacemaker.

### **A** DANGER

Replace defective power cable immediately by an authorized service agency.

### **A** Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

### **A** Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.

### **∴** Caution


Use caution when handling metal surface edges of all equipment.

Section 2 Installation

### **Specifications**

### **DIMENSIONS: INSTINCT GRIDDLE 3, INSTINCT GRIDDLE 5**

Measurements in millimeters and [inch].

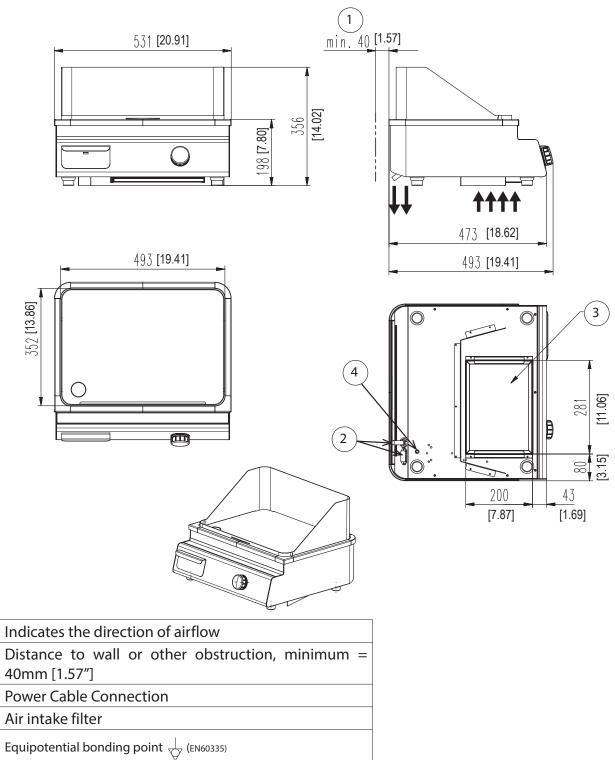


**2** 3

Installation Section 2

### **DIMENSIONS: INSTINCT GRIDDLE 7, INSTINCT GRIDDLE 10**

Measurements in millimeters and [inch].

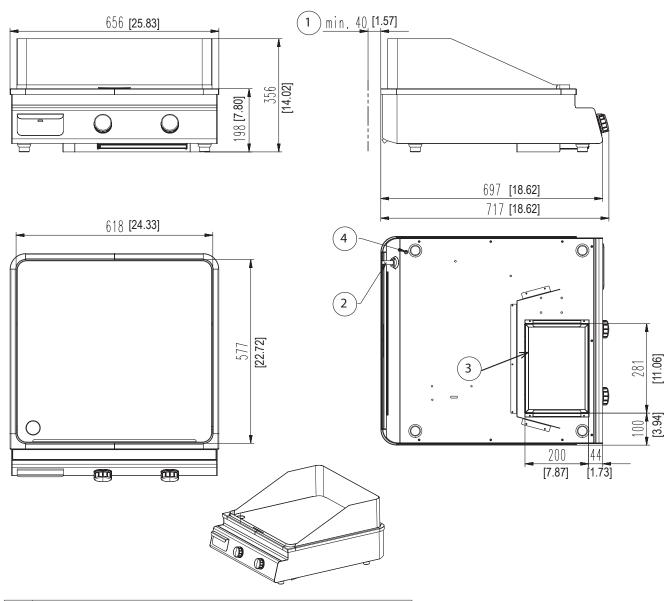

<b>→</b>	Indicates the direction of airflow
1	Distance to wall or other obstruction, minimum = 40mm [1.57"]
2	Power Cable Connection
3	Air intake filter
4	Equipotential bonding point (EN60335)

Section 2 Installation


### **INSTALLATION CLEARANCE**

### **Notice**

The orientation of each appliance in a parallel configuration will affect the ventilation requirements. Ensure the final installation meets all operating and ventilation requirements.

### Refer to example below:

-	Indicates the direction of airflow
а	Distance to wall or other obstruction, min-
	imum = 40mm [1.57"]
у	A gap between two countertop units is
	not required.

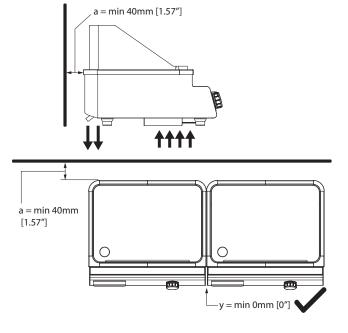

### **ELECTRICAL SPECIFICATIONS**

Model	Power / Current	Voltage / Phases	Plug
INSTINCT Griddle 3	3000W / 13A	230V / 1Φ	TYP G
INSTINCT Griddle 3.5	3500W / 16A	230V / 1Φ	EU1-16P
	3500W / 17A	208V / 1Φ 208V / 2Φ	NEMA 6-20P
INSTINCT Griddle 5	5000W / 8A	400V / 3Φ	EU 5-Pole
	5000W / 14A	208V / 3Φ	NEMA 15-20P
INSTINCT Griddle 7	7000W / 20A	208V / 3Φ	NEMA 15-30P
INSTINCT Griddle 10	10000W / 16A	400V / 3Φ	EU 5-Pole
	10000W / 28A	208V / 3Φ	NEMA 15-50P

### **ELECTRICAL CABLES**

Power supply cable and plug are included, 1.8-meter [6-foot] long.

Installation Section 2

### **OPERATING CONDITIONS**

For the appliance to function properly, the following conditions must be maintained.

Maximum Tolerance of the Nominal Supply Voltage	+6 /-10 %
Network Impedance (Zmax.)	0.25Ω
Supply frequency	50/60 Hz
Ingress Protection class	IP X3
Maximum Ambient Temperature	In Storage, -20°C to +70°C [-4°F to +158°F] In Operation, +5°C to +40°C [+41°F to +104°F]
Maximum Relative Air Humidity	In Storage, 10% to 90% In Operation, 30% to
	90%
Noise level	<45dB

### **WEIGHTS**

Model	Net W	/eight
	kg	lb
INSTINCT	28	62
Griddle 3		
INSTINCT	28	62
Griddle 3.5		
INSTINCT	30	67
Griddle 5		
INSTINCT	48	106
Griddle 7		
INSTINCT	48	106
Griddle 10		

Section 2 Installation

### **Installation Instructions**

### LOCATION OF THE INDUCTION APPLIANCE

### **⚠** Caution

Do not position the air intake vent near steam or heat exhaust of another appliance.

- The induction appliance must be installed on an even, flat, non-combustible surface.
- The surface must be able to withstand a load of 80kg (176.4lb) per appliance that is listed in this manual.
- Ensure the induction appliance is stable and will not slide or fall down.
- The induction appliance must not be installed or placed near or on a hot surface.
- The induction appliance must be level.
- Similar to other electronic equipment, induction equipment is sensitive to moisture and high heat. Protect the induction appliance from heat, steam and grease generated by other equipment, such as oven, deep fryer, pasta cooker, steamers, and water bath.
- The control switches on the front panel must not be blocked or obstructed.
- Keep the induction appliance away from combustible materials, vapors or liquids.

### **VENTILATION REQUIREMENTS**





Read and understand all installation safety instructions regarding Clearance and Ventilation at the beginning of this chapter.


- Ensure the induction appliance does not take in hot ambient air or steam from another appliance, especially when the appliance is installed next to heat generating equipment such as fryers or ovens.
- See also Installation Clearance.

### LEVELING THE APPLIANCE

To help draining grease down into the grease drawer, adjust the feet to tilt the griddle with a slight angle (**less than 1 degree**).

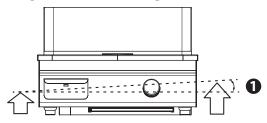

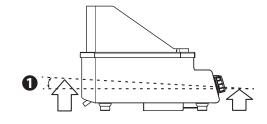

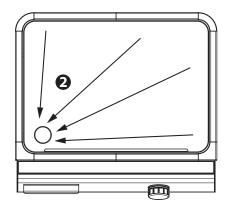


- 1 The tilt must be less than 1 degree.
- **2** Direction of grease flow

Installation Section 2

### **ADJUSTING LEGS**

Adjust the height of the leg by turning the bottom part as shown:

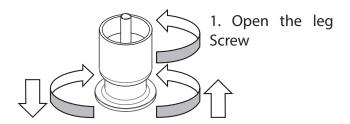

2. Adjust the height of the leg by turning the leg by turning

### **COMMISSIONING**



Read and understand all installation safety instructions regarding Electrical and Personal Protection.

- 1. Remove all objects from the griddle plate.
- 2. Connect the appliance to power supply.
- 3. Test different functions of the appliance.

### **Function Test**



- Read and understand all installation safety instructions regarding Personal Protection.
- Observe also ALL operation safety requirements in section 3 Operation.

### Testing procedure:

- 1. Follow operational instructions in section 3 to test:
  - Heat up to selected temperature.
  - Timer Function
  - Operation of knob
  - LED light is functioning.

NOTE: The LED ring illuminates continuously when the set temperature has been accepted.

- 2. Follow instructions in section 3 to set temperature display to °C or °F.
- 3. Turn the appliance off. When the unit is switched off, a papears on the display.

If the appliance does not function, refer to section 5 Troubleshooting.

# Section 3 Operation

### **OPERATION SAFETY—DISCLAIMER**

### **▲** DANGER

The on-site supervisor is responsible to train operators for operating, maintaining and ensuring that operators are made aware of the inherent dangers of operating this equipment.

### **▲** DANGER

Risk of fire/shock/equipment failure. **All minimum clearances must be maintained. Do not obstruct vents or openings.** 

### **A** Warning

This equipment is intended for indoor use only. Do not install or operate this equipment in outdoor areas.

### **Notice**

The reliability of the appliance can only be guaranteed when it is used properly. The appliance must always be operated within the limits and/or the operating conditions provided in this manual.

### **Notice**

Avoid dropping any hard objects onto the equipment. Damages to the heating surface will shortened the life cycle of the equipment and incur high service costs.

### **Notice—Induction Griddles**

NEVER heat any cooking pan on the griddle plate. Heating cooking pan will damage these equipment. Heat only food products on the griddle plate.

# OPERATION SAFETY—PERSONAL PROTECTION

### Notice

Induction appliances are more powerful, heat up quicker, and cook food faster than conventional cooking equipment. Your induction appliance will require different use and care than other conventional equipment.

Do not operate the equipment without reading this manual and understanding all safety requirements.

### **A** DANGER

If any part of the appliance is cracked or broken, turn Off directly the appliance and Immediately disconnect the appliance from the supply. Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The power switch DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

### **A** DANGER

Do not operate any appliance with a damaged or pinched cord or a damaged plug. All repairs must be performed by a qualified service company.

### **A** DANGER

Keep power cord AWAY from HEATED surfaces. DO NOT immerse power cord or plug in water. DO NOT let power cord hang over edge of table or counter.

Operation Section 3

### **▲** DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacture about effects of electromagnetic field on your pacemaker.

### **A** DANGER

Never stand, site, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

### **▲** Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.

### **A** Warning

During operation, it is possible that the floor around the unit become slippery. Wear suitable footwear and clean the floor if necessary.

### **∴** Caution

### **Short Cook Time**

Induction appliances cook food faster than conventional cooking equipment. To avoid overheating and burning, check the cooking process frequently. Never leave the appliance unattended during operation.

### **∴** Caution

Metallic objects are heated up very quickly when placed on the induction cook zone during operation. To avoid injury,

DO NOT place any objects such as closed cans, aluminum objects (aluminum foils), cutlery, jewelry, or watches on the appliance.

DO NOT place any object such as paper, cardboard, or cloth on the cooking surface, because this creates a fire hazard.

DO NOT place credit cards, phone cards, tapes, or any objects that are sensitive to magnetism on the appliance.

DO NOT use the appliance for storage.

DO NOT place any paper products, cooking utensils, cutlery, plastic vessels or food on the appliance.

### **Notice**

Do not use the cooktop for food preparation such as cutting and chopping.

### **Cooking with Induction Griddles**

### **!** Caution

### **Induction Griddles**


A suitable grease-collecting means must be in place before operating appliance.


Section 3 Operation

### **Important Rules—Operation and Maintenance**

Follow these simple rules to ensure reliable and repeatable performance of your induction equipment:

1 Keep kitchen temperature below 40°C [104°F].

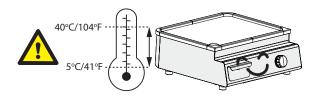


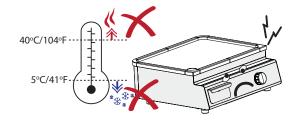


2 Never place your induction equipment next to any steam generating or heat generating equipment.




Clean the intake filter at least once a week or as often as required.

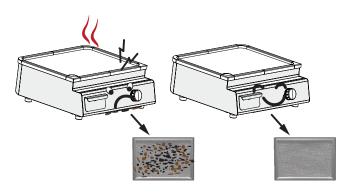

**Do not use pans on the griddle.** 

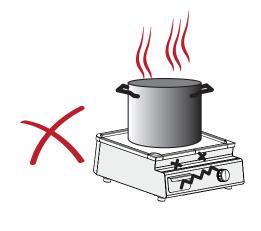

# **Display and Control Quick Reference**

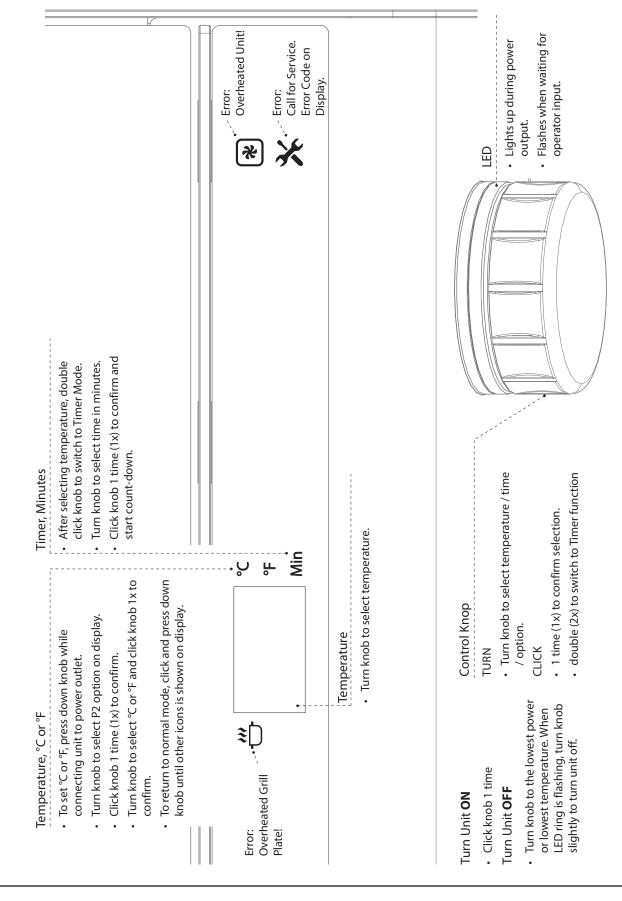

Section 3 Operation

### **Control**

### **TURN UNIT ON**

Click knob and turn to select temperature.

### **LED RING**

- The LED ring flashes if operator input is needed.
- The LED ring lights up continuously during cooking.

### **SELECTING TEMPERATURE**

- 1. Turn knob until the desired temperature is shown on the display.
- Leave the knob for approximate 5 seconds, the display will show alternately the actual detected temperature and set temperature.

### **SETTING THE TIMER**

- 1. After setting temperature, double click the knob to switch to Timer Mode.
- 2. Turn knob to set the timer from minimum 1 minute to maximum 240 minutes. The LED ring will flash.
- 3. Click knob 1 time (1x) to confirm and start the count-down.
- 4. Note the display will show alternately the temperature and the count-down.
- 5. After the set time is elapsed, the appliance will sound a beeping signal and the unit will automatically shut down if the operator takes no action.

### **TURNING OFF**

Turn knob to go to the lowest temperature.

When LED ring is flashing, turn knob slightly further to turn off the appliance.

When the unit is switched off, a  $\square$  appears on the display.



### **Additional Settings**

Additional settings are available to reduce power level, and to set display to °C or °F.

To activate the additional settings:

- 1. Press down knob while connecting unit to power outlet.
- 2. Then turn knob to select setting P1 or P2:
  - P1 = Reduce nominal max power from 100% to 25%
  - P2 = Change temperature between °C and °F
  - P3 = Shows the actual Firmware number.
  - P4 = Enable / Disable buzzer (timer function)
- 3. Click knob 1 time (1x) to confirm selection.
- 4. In P1, turn knob to select power. In P2, turn knob to select °C or °F. In P4, turn knob to select "on" or "oFF"
- 5. Click knob 1 time (1x) to confirm selection.
- 6. To leave the special setting function, keep pressing down the knob for approximately 5 seconds.

Operation Section 3

### **Decommissioning**

Procedure if the device is not needed for a long time.

- Switch off the device on the knob. (See Section 3 Turning Off)
- 2. Disconnect the device from the mains.

### **A** DANGER

If the plug is not safely accessible, the device must be switched off at the main circuit breaker.

Section 3 Operation

### **Grease Drawer**

- Empty out the grease drawer as often as necessary.
- Before operating the appliance, ensure the grease drawer is placed correctly and securely under the grease chute such that the drawer will not slide out or fall.

### **Caution**

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

### **Considerations**

- Always use a bit of oil on the griddle plate before putting any food on.
- Cooking Food from Frozen

If you cook food from frozen regularly, do not put the frozen food every time on the same position. Otherwise, the plate could deform locally over time.

### Using Proper Cooking Utensils

Use only the spatula provided to turn over food products on the griddle plate. Using any sharp-edged objects such as knife or fork can damage the griddle surface.

### Recovering from Temperature Loss

Temperature loss occurs when cold food is put on the griddle plate. The RTCSmp technology can immediately sense the temperature drop and correct any temperature loss.

### When Appliance Is Idle

### **BEST PRACTICE:**

When the induction appliance is not in use, turn off the appliance.

### **Short Heat-Up Time**

To heat up from 20°C to 200°C (68°F to 392°F), a single cook-zone griddle will take:

- INSTINCT Griddle 3.5, approximately 4 ½ minutes
- INSTINCT Griddle 5, approximately 3 minutes
- INSTINCT Griddle 10, approximately 3 minutes

# Section 4 Maintenance

### MAINTENANCE SAFETY—DISCLAIMER

### **▲** DANGER

It is the responsibility of the equipment owner to perform a Personal Protective Equipment Hazard Assessment to ensure adequate protection during maintenance procedures.

### **A** Warning

A good maintenance of the appliance requires regular cleaning, care and servicing. The site-supervisor and the operator must ensure all components relevant to safety are in perfect working order at all times.

NOTE: Cleaning tools and supplies are not provided.

### DANGEROUS ELECTRICAL VOLTAGE

### **A** DANGER

Do not open the appliance. Maintenance and servicing work other than cleaning as described in this manual must be done by an authorized service personnel.

### **A** DANGER

If any part of the appliance is cracked or broken, turn Off directly the appliance and Immediately disconnect the appliance from the supply. Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The knob DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

### MAINTENANCE SAFETY—CLEANING

### **A** Warning

Never use a high-pressure water jet for cleaning or hose down or flood interior or exterior of the equipment with water. Ensure that no liquid can enter into the equipment.

### **A** Warning

Allow heated equipment / glass surface to cool down before attempting to clean, service or move.

### **A** Warning

Use only a damp cloth to clean the knob or power cord. Disconnect power before cleaning the rotary knob or power cord. Make sure the knob and power cord are dry before reconnecting the unit.

### **⚠** Caution

Do not use caustic cleaners on any part of the equipment. Use mild, non abrasive soaps or detergents, applied with a sponge or soft cloth.

### **!** Caution

Ensure to remove all residues of cleaning agents from the cooking surfaces. Use a clean moist cloth to wipe off any such surfaces.

### **∴** Caution

Using commercial cleaning fluids or chemicals: Read the directions for use and precautionary statements before use. Pay attention to the concentration of cleaner and the length of time the cleaner remains on the food-contact surfaces or equipment surfaces.

### Notice

### **Inspect and Clean Fresh Air Intake Filter**

We strongly recommend using air intake filters in all installations to protect the equipment from grease particles. A dirty, blocked air intake filter blocks the air vent and can cause damages to the electronic components. Inspect, clean or replace the air intake filters at least once a week or as often as necessary.

### **A** Warning

### **Inspect Silicone Seal**

When the silicone seal is broken, water penetration could cause the appliance to fail, and any malfunction could cause personal harm.

Maintenance Section 4

### PERSONAL PROTECTION

### **A** DANGER

All utilities (gas, electric, water and steam) must be OFF to all equipment and locked out of operation according to national/regional, as well as company approved practices during installation, maintenance and servicing. Always allow appliance to cool.

### **A** DANGER

Use appropriate safety equipment during installation, maintenance and servicing.

### **A** DANGER

Never stand, sit, or lean on the equipment! They are not designed to hold the weight of an adult, and may collapse or tip if misused in this manner.

### **▲** DANGER

To avoid cardiac pacemaker malfunction, consult your physician or pacemaker manufacture about effects of electromagnetic field on your pacemaker.

### **A** DANGER

Replace defective power cable immediately by an authorized service agency.

### **A** Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

### **A** Warning

Risk of burns from high temperatures. You may get burnt if you touch any of the parts during operation. Surfaces close to the cooking area including side panels may get hot enough to burn skin. Use extreme caution to avoid coming in contact with hot surfaces or hot grease. Wear personal protective equipment.

### **A** Warning

During operation, it is possible that the floor around the unit become slippery. Wear suitable footwear and clean the floor if necessary.

### **!** Caution

Use caution when handling metal edges of all equipment.

Section 4 Maintenance

### **Daily Cleaning and Maintenance**

### STAINLESS STEEL CASE

1. For any appliance with stainless steel case or stainless steel flange, clean the stainless steel surface using a soft cloth with a mild detergent and/or a food-safe liquid cleaner designed to clean stainless steel.

2. Wipe dry with a soft clean cloth.

### **GREASE DRAWER**

Empty out the grease drawer as often as necessary.

### 

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

### 

A grease drawer must be in place before operating appliance.

### **CLEANING THE GRIDDLE PLATE**

### **⚠** Caution

Risk of burn from hot equipment, hot grease and steam. Wear personal protective equipment.

### Notice

**DO NOT USE** strong detergents and solvents such as Ketone, Ester, and alkaline detergents. Depending on the concentration, reaction time and temperature, these chemicals could damage the special coating on the griddle plate.

**DO NOT USE** steel wool, tough scratching sponges, or knives on the grill plate. Use the cleaning pad provided with the equipment.

**DO NOT USE** ice cubes because that can cause deformation of the griddle plate.

### To clean the griddle plate:


- 1. Set temperature to 60°C or 140°F.
- 2. Pour some water onto the plate and let the hot water dissolve the soiling.
- 3. Use non-abrasive scrubbing pads to scrape the residues into the grease drawer. To avoid burn injuries, scrub and scrape with a spatula on a non-abrasive scrubbing pad.

Maintenance Section 4

### **Weekly Cleaning and Maintenance**

### **AIR INTAKE FILTER**


1. The air intake filter is located on the bottom of the appliance. To remove, slid out the filter from the holder.

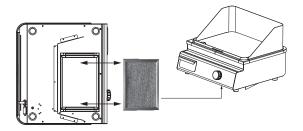


### **Yearly Maintenance**

**Best Practice**: Have the induction appliance examined once a year by an authorized technician.

2. The filter is dishwasher-safe.

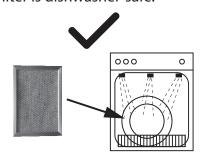

3. The filter must be DRY before you put it back into the holder.

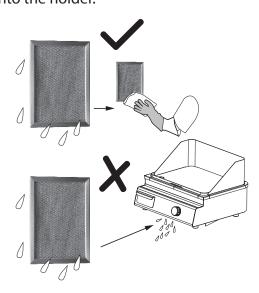

In case of insufficient cleaning of the device, the warranty expires.

# Section 5 Troubleshooting

### **Dangerous Electrical Voltage**

### **A** DANGER

If any part of the appliance is cracked or broken, turn Off directly the appliance and Immediately Turn Off the appliance. Only if it is possible and safe, disconnect the equipment from main power supply. Do not touch any parts inside the appliance.

Disconnect electric power at the main power disconnect for all equipment being serviced.

Failure to disconnect the power at the main power supply disconnect could result in serious injury or death. The power switch DOES NOT disconnect incoming power.

Contact an authorized service agency for assistance.

### ▲ DANGER

Do not open the appliance. Maintenance and servicing work other than cleaning as described in this manual must be done by an authorized service personnel.

### **A** Warning

Markings and warning labels mounted directly on the equipment must be observed at all times and kept in a fully legible condition.

NOTE: If a problem arises during operation of your induction appliance, follow the Trouble-shooting Charts before calling service. Routine adjustments and maintenance procedures are not covered by the warranty.

### **Common Problems**

One or more of the following conditions may affect the function or cause the induction equipment to fail:

- · High ambient temperature.
- Inadequate ventilation causing hot air to re-enter through the air intake slots.
- Dirty air intake filter.

### **Symptoms**

- When a malfunction occurs, the appliance may be in one of the following states:
  - The appliance switches off immediately.
  - The appliance continues to operate in a power reduction mode.
  - The appliance continues to operate normally.
- NOTE:

The cooling fan starts when the ambient temperature in the control area exceeds 55°C [130°F].

At heat sink temperature higher than 70°C [160°F], the controller automatically reduces power to keep the appliance in normal operating conditions.

# Dangers Avoidance in case of accidents or malfunctions

To avoid hazards in the event of a malfunction or accident related to the device, proceed as follows.

Disconnect the power supply from the circuit breaker provided for the device.

Disconnect the mains plug of the affected device to prevent it from being switched on again.

### **A** DANGER

If the plug is not safely accessible, the device must be switched off at the main circuit breaker.

er.
essible, the device must be switched off at the main circuit breaker
it b
irc
in
ma
the
at
off
ped
itc
S
pe.
ıust
e m
Ϋ́
de
ole, the device
ible
essi
acc.
<u>&gt;</u>
afe
ne plug is not safely acce
is n
i gr
19
the
ΕĪ
~
DANGER
AN
۵

<b>Troubleshooting Without Error Code</b>	t Error Code	
Symptom	Possible Cause	Action
Griddle not heating up.	No power supply.	Check incoming power supply (Example, power cable plugged into the wall socket). Check kitchen main fuse hox
	Unit is turned off.	Turn control knob to an ON-position.
	Defective equipment	Only if possible and safe, disconnect the appliance from the
		power supply. (1)
		Contact an authorized service agency.
Griddle not heating up.	Defective Unit	Only if possible and safe, disconnect the appliance from the
"Service" symbol is ON.		power supply. (1) Contact an authorized service agency.
Poor heating, LED ring is ON	Air-cooling system is	Verify that air vents are not obstructed. Ensure the fresh air filter is
		clean.
	Ambient temperature is too	Verify that no hot air is taken in by the fan. Reduce the ambient
	high. The cooling system is not	high. The cooling system is not temperature. The intake air temperature must be lower than 40°C
	able to keep the appliance in	[104°F].
	normal operating conditions.	
	One phase is missing (for	Check incoming power supply (Example, power cable plugged
	equipment with three phase	into the wall socket). Check kitchen main fuse box.
	wer adj.	Check if the additional Setting "P1" is correct.
	Defective equipment	Only if possible and safe, disconnect the appliance from the
		power supply. (1)
		Contact an authorized service agency.
Appliance does not react to	Defective control knob.	Only if possible and safe, disconnect the appliance from the
control knob positions		power supply. (1)
		Contact an authorized service agency.
Overheated unit symbol is	Air-cooling system is	Verify that air vents are not obstructed. Ensure the fresh air filter is
ON, fan is working	obstructed. Internal fan is dirty.   clean.	clean.
		Contact an authorized service agency.
Overheated unit symbol is	Defective fan or fan control.	Only if possible and safe, disconnect the appliance from the
ON, fan does not work		power supply. (1)
		Contact an authorized service agency.
Overheated unit symbol is ON Overheated induction coil;		Switch the appliance off. Wait until the appliance has cooled
	cooking area is too hot.	down before turning it ON again.

Troubleshooting Section 5

# **Troubleshooting** — **Error Code**

<b>Error Code</b>	Problem	Action
(Display)		
	Normal Operation.	Normal Operation.
E01	Internal wiring/coil connection malfunction. (2)	Contact an authorized service agency.
E02	Coil overcurrent. (2)	Contact an authorized service agency.
E03 +	Air-cooling system obstructed. Fan mal-	Let appliance cool down.
<b>[</b>	function. Internal heat sink overheated.	Verify that air vents are not obstructed.
<b>k</b> )	(2)	Check and clean air filter.
		Contact an authorized service agency.
E04+	Overheated cook zone.	Let appliance cool down.
*	Sensor failure.	Verify that air vents are not obstructed.
Þ		Check and clean air filter.
E41, E42,	Overheated or defective sensor. (2)	Contact an authorized service agency.
E43, E44,	NOTE: Errors E41 to E46, griddles may	
E45, E46	continue to operate.	
E06, E30 +	Ambient temperature too high (the	Let appliance cool down.
<b>a</b>	cooling system is not able to keep the	Verify that air vents are not obstructed.
Ł)	induction appliance in normal operating	Check and clean air filter.
	conditions). Internal component	Verified that no hot air is taken in by the fan. Reduce the ambient
	overheated. (2)	temperature. The intake air temperature must be lower than 40°C [104°F].
		Contact an authorized service agency.
E29	Generator component failure. Problem with control wiring.	Contact an authorized service agency.
E47	Warning from overheated griddle plate	Let appliance cool down.
	sensor or coil connection failed. (2)	Contact an authorized service agency.
	NOTE: E47 on griddles indicates that	
E21 +	Sensor error from heat sink. Board	Verify that air vents are not obstructed. Check air filter. Reduce ambient
(	overheated. Ambient temperature	temperature.
*	beyond normal operating range. (2)	Contact an authorized service agency.

Section 5 Troubleshooting

<b>Error Code</b>	Problem	Action
(Display)		
E24+	Sensor error from CPU. Board overheated.	overheated.   Verify that air vents are not obstructed. Check air filter. Reduce ambient
(	Ambient temperature beyond normal	temperature.
*)	operating range. (2)	Contact an authorized service agency.

A DANGER If the plug is not safely accessible, the device must be switched off at the main circuit breaker. (2)

The appliance switches off immediately.



powered by INDUCS

888-442-7526 WWW.GARLAND-GROUP.COM



### WWW.WELBILT.COM

Welbilt provides the world's top chefs, and premier chain operators or growing independents with industry leading equipment and solutions. Our cutting-edge designs and lean manufacturing tactics are powered by deep knowledge, operator insights, and culinary expertise.

All of our products are backed by KitchenCare  $^{\circ}$  – our aftermarket, repair, and parts service.

► CLEVELAND

▶ DELFIELD®

► FRYMASTER®

► KOLPAK®

► MANITOWOC®

► MERRYCHEF®

► CONVOTHERM®

► FITKITCHEN™

► GARLAND

► LINCOLN

► MERCO®

► MULTIPLEX®