


Gatsby™ Care & Use Instructions:

Gatsby™ Drinkware is produced using the highest quality, commercial-grade SAN (Styrene Acrylonitrile) plastic. Follow these easy guidelines to enjoy maximum performance and prolonged life of your Front of the House® Drinkware investment.

basic care guidelines

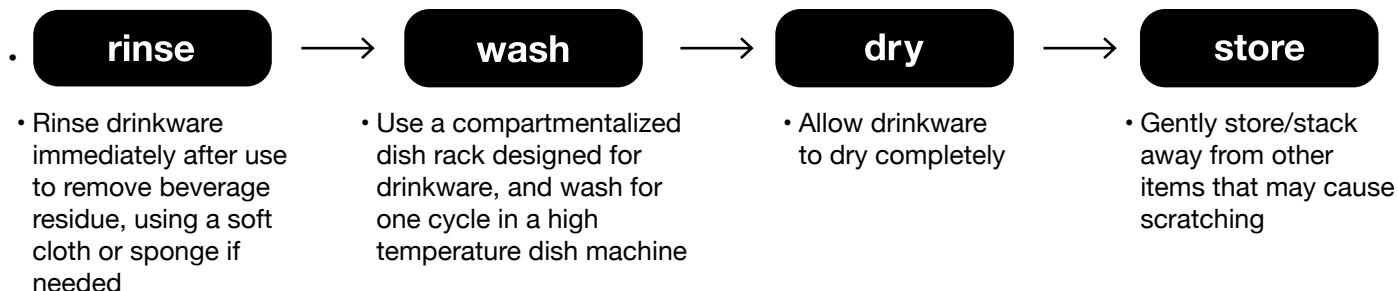

care and use tips

Follow these recommendations to preserve clarity and color:

- Use a high-temperature dish machine
- Do not use corrosive chlorinated or phosphate-based detergents
- Do not use sanitizers in combination with high-temperature dish machines
- Use a water softener if hard water is present
- Ensure detergent feeders are set within the recommended usage levels
- Completely empty the rinse water in the dish machine daily
- Remove drinkware from dish machine promptly after cycle completion
- Avoid extended exposure to stain-causing foods such as tomato, carrot, and curry
- Periodically soak drinkware overnight in a presoak solution appropriate for plastics

Follow these recommendations to avoid scratching:

- Use dish machine racks designed for drinkware, and do not overcrowd the compartments
- Do not use machine rack with pegs or prongs
- Do not scrub drinkware with abrasive scouring pads or steel wool
- Whenever possible, use a separate bus tub for drinkware

Recommended Detergents and Rinse Agents

(Speak with your dish machine provider for additional products recommended for use with plastics)

- Ecolab® Solid Power XL, Solid Brilliance
- Auto-Chlor® Mach Endurance, Mach Detergent 3X, Auto-Kleen M.S.

To Remove Stains and Build-Up

In certain environments, Gatsby™ Drinkware may experience occasional hard water buildup or food staining. This can usually be resolved with a bleach treatment.

- Dilute bleach with water at a ratio of 1:10
- Soak drinkware for 8-24 hours
- If needed, wipe away stains with a soft cloth
- Rinse with hot water and proceed with standard dishwashing procedures