

Heat Lamp

Model Series:
GS1670

OPERATING INSTRUCTIONS

Introduction :


1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
4. Always unplug appliance when not in use and before cleaning, adjusting, or maintaining this machine. To disconnect appliance, turn controls off and remove plug from power source.
5. Do not operate any appliance with a damaged or altered cord or plug, after the appliance malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors. This appliance is not intended for use in wet or moist locations. Never locate appliance where it may fall into water.
7. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
8. To reduce the risk of fire, it is recommended that the unit is placed on a non-combustible surface.
9. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

Electrical Requirements :

 **WARNING**

ELECTRICAL SHOCK HAZARD
*Plug into a grounded 3-prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.*

Plug heat lamp into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the lamp for voltage and wattage requirements.


Assembly :

1. Set the lamp base on a flat surface.
2. Insert the middle lamp frame into the aluminum tube of the base frame.
3. Insert the upper lamp frame into the middle frame and affix with screws provided.
4. Adjust the height of the unit and tighten into place with the threaded nut.

Operation :

1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.
2. Turn the switch on.
3. Place food in a pan located directly under the bulbs for best results. Adjust the height of the frame to achieve best temperature for food.
4. Turn unit off when not in use.
5. To disconnect appliance, turn switch off and remove plug from power source.

Cleaning :

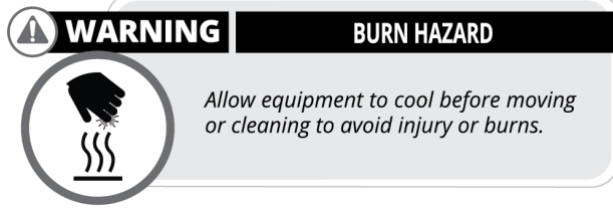

NOTE: Proper maintenance plays an important part in the life span and functioning of the lamp.

1. Unplug the cord and let unit cool before cleaning or moving.
2. This unit including the food tray can be cleaned with a damp sponge and mild soap. Rinse with clean water and wipe dry.
3. Do not immerse in water or other liquid. Do not clean with a water jet.

TIPS:

1. Ensure the entire appliance is dry before storage.
2. Wipe the frame and wash the food tray as soon as possible after use to avoid hardening and drying of the food or liquid on the unit. Cleaning will be more difficult.

REPAIR :



To avoid serious injury or damage, do not repair the heat lamp or replace a damaged power cord yourself. Repairs must be coordinated through: Global Solutions customer service at 1-800-782-6761.

TROUBLESHOOTING

Lights not On	Check if unit is plugged in and power switch is turned on
	Check power at receptacle
	Check if Bulb has burned out
Loose Sockets	Turn off power and check if socket is loose or broken. Remove light bulb and tighten socket screws as necessary.
Loose Hoods	Turn off power and check if hood is loose. Remove light bulb and tighten hood screws as necessary.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

