



1. Remove the lid of the server.



2. Pull out the lid assembly.



3. Unscrew the inlet cap.



4. Clean the inlet tube with the medium sized brush and the cleaning solution.



5. Rinse well and reassemble the lid.



6. Unscrew the sight gauge cap.



7. Remove the glass tube.



8. Clean the sight gauge with the large brush and reassemble the sight gauge.



9. Turn the faucet in a counter-clockwise direction and remove the faucet from the dispenser. Unscrew the faucet cap from the faucet body and disassemble all faucet parts.



10. Transfer these parts to a three compartment sink for cleaning. Fill the first sink with a soap solution using a mild detergent, the second sink with a sanitizer solution (75°F warm chlorine solution of at least 50-100 ppm) and the third sink is used for clean rinse.



11. Use a small brush (BOM #00674.0000) to thoroughly scrub the faucet body.



12. Allow the parts to soak in a sanitizer solution for a minimum of ten minutes. Remove the faucet parts from the sanitizer solution and rinse thoroughly. Allow parts to air dry over night.



13. Thoroughly rinse the entire inside of the server. DO NOT immerse the server in water.



14. Use a clean damp cloth rinsed in mild, non-abrasive detergent to clean all surfaces.