



Instruction manual

- OPlease read this instruction manual completely before using for the first time.
- Olmproper handling may result in an accident.
- OKeep this manual at hand for easy reference.
- OThis product is used for these cooking utensils shown below.



(Except microwave, oven and IH heater)

HARIO CO., LTD.

9-3 Nihonbashi Tomizawa-Ćho,Chuo-ku,Tokyo 103-0006 Japan http://www.hario.jp

[Caution in using the product]

- OPlease check every part of the product to ensure there is no problem before using the product. Please do not use the product if any sign of a crack, chipping,dent, bending,slackness or other abnormality is discovered.
- Please do not use the product for any purpose other than boiling water since it may result in discoloration or corrosion. Do not use the product for cooking.
- OPlease do not use with water completely filled to the top. Please use with less than 0.7L of water, the practical capacity. Filling it with too much water can cause hot water to spill out and cause burns.
- Never heat the product empty. Heating an empty product may result in deformation or damage to the product and may also cause a fire or burn injury.
- The handle is made of metal so it will become extremely hot when boiling water. Please make sure to use the handle cover when holding the kettle. The handle will still become hot when hot water is left in the kettle. In any case, please use a potholder to avoid burns.
- Owhen using over direct fire, please make sure the flame does not contact with the handle cover.
- Do not let children use it. Keep away and out of reach from children
- Please refrain from heating with the lid off. It is very dangerous because steam will be generated.
- Please note that the long preservation of water causes rust and the hole to open.
- Please do not remove the lid while holding the handle when hot water is in the kettle. Steam may cause injury from burn.

OPlease do not use if connection part between the body and the handle becomes loose. It may fall off and cause burns.

OPlease screw up the the handle or lid knob tighter if

they become loose.

ODo not use the product on top of a space heater. This may result in the product toppling over and cause burn injury.

Please do not give a strong impact such as drops from a high place. It causes damage and the transforma-

tion.

The welded part of the spout is very easily distorted so please do not apply strong impact on it. It can be the cause of bending or shape change.

Please use low heat when direct heating and turn off the heat as soon as it starts boiling. Over-heating may

cause spillage.

Attempting to pour out boiled water from the product immediately after water is boiled may result in hot water to splatter. Please wait at least 20 seconds after turning off the heat.

[Caution]

Since the pouring spout, body and opening are small, there is a risk of boiling water to boil over from these openings. Please ensure not to over fill and take care to control the amount of heat to apply.

(How to attach the handle cover)

As shown in the figure, put the top of silicone cover to the handle and slide up from the bottom.



[With the cooking heater at use]



- Ensure to wipe off any water adhering to the bottom of the product before putting it on a cooking heater for a more effcient heating.
- OEnsure to place the kettle at the center of the heater.
- OPlease do not use it when the transformation and trouble are caused by the fall and boiling without water, etc. Please use it correctly along the manual of the cooking heater used.
- ODo not use on IH heater.

[With the gas range at use]



- ODo not use the product to boil small amount of water. Part of the body that is not in contact with water will be overheated and become discolored.
- overheated and become discolored.

 OPlease use over low heat.
- OPlease adjust the flame so that the flame does not spread out beyond the bottom of the product. The handle and lid knob may become overheated and become deteriorated or discolored if the flame is too large.
- OPlease place the kettle at the center of the cooking range to ensure stability while boiling.

[Preparation before use]

OApply some dishwashing detergent on a washing sponge and wash the product 2 to 3 times and rins off thoroughly before using the product for the first time.

ORemove all stickers, if any attached to the body of the

product before use.

The outside copper surface has clear lacquer on it to prevent discoloration. Please use it under this condition.

[Care after use]

OPlease wash using a soft sponge with mild detergent and wipe off the excess water after use. Please refrain from using abrasive nylon scrub sponge, steel wire brushes or rough cleansers that may scratch the glass surface.

OPlease use a copper polishing material on the outside

copper surface if it becomes tarnished.

OAllowing traces of salt or oil to remain on the surface of the product may result in corrosion.Please ensure to

keep the product clean.

Ocopper rust may appear on copper products. However, copper rust do not cause harm to humans so it can still be used. In order to get rid of the rust, use a towel soaked in vinegar mixed with salt to scrub it off. After that, wash with a mild detergent and make sure to wipe off the excess water.

OPlease do not use the dishwasher, for it may cause

discoloration.

ODo not use chlorine bleach.

OWhite spots may appear on the bottom as you keep using the product. This is caused by residue of magnesium and calcium contained in tap water. This is not harmful to your health. The same will adhere to the body, lid or pouring spout. Please wash off thoroughly after use.

OPlease follow your local regulations for disposal.