

Instruction Sheet

Subject: LB Model Bin Snout Installation

The bin snout must be sealed on the interior and exterior with silicone sealant to prevent leakage.

1. Using the primer provided, clean the area around the opening and the flat surface of the snout.
2. Place the top channel of the snout in the opening of the bin and push up to secure in place.
3. Drop the bottom channel of the snout into the opening.
4. Using the silicone provided, apply a generous amount around the inside AND outside perimeter of the snout.
5. Smooth the silicone to create a thorough seal.

An insufficient silicone seal will result in leaking.

6. Allow silicone to dry for 24 hours before using the bin.



Seal the entire interior and exterior perimeter of the snout with silicone sealant to prevent water leakage