



WingSpan "Wall Stand Off INSTRUCTIONS

CLIMB ON

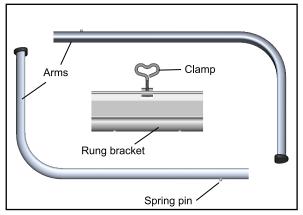


Familiarize yourself with the all the parts of your new WingSpan™ wall standoff.

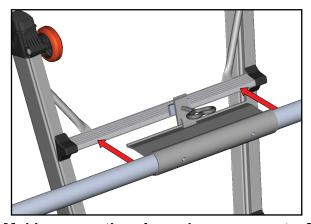


Making sure the clamp is swung out of the way, and the outer ladder assembly is extended at least one rung, slide the rung bracket onto the top outer rung.



Your WingSpan wall standoff is now ready to use

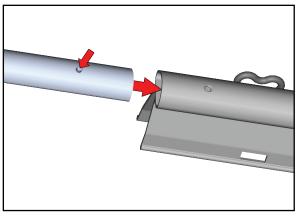

To assemble, hold down the spring pins and slide the arms into the rung bracket until the spring pins lock into place.

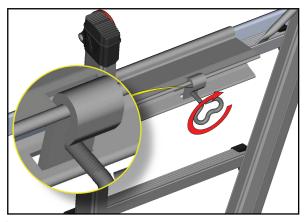

Swing the clamp around and hook it into the open slot in the rung bracket, then tighten the clamp onto the rung. If the clamp will not reach the slot, loosen the clamp all the way, and then try again.

If you need any assistance with these instructions, or need replacement parts for your WingSpan wall standoff, please call our Customer Experience Team at 800-453-1192.

Little Giant Ladder Systems

1198 North Spring Creek Place Springville, UT 84663 Toll Free: 800-453-1192 Phone: 801-489-3684 Fax: 801-489-3685

www.LittleGiantLadders.com

