


NEO



CALL **EMAIL** 800.500.0583 support@whipit.com www.whipit.com

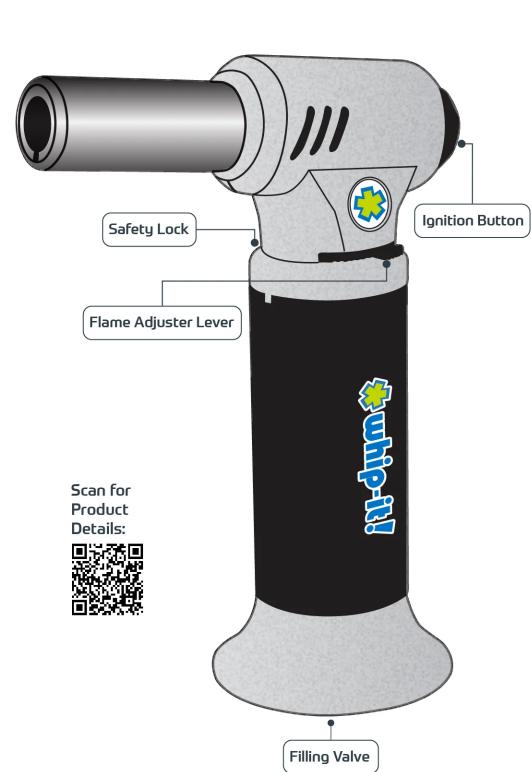

Fill Your Torch

In a hazard-free environment, press the **Ignition Button** multiple times to purge excess butane. Hold the torch upside down and insert the butane can's nozzle into the **Filling Valve**. Apply firm and consistent pressure. A fizz will indicate that the torch is at capacity. (To avoid oxygen pockets, **DO NOT** repetitiously release and re-insert the butane). Wait a few minutes before using the torch to allow gas stabilization.

Ignition and Flame Adjustment

Move the Flame Adjuster **Lever** to the start of the low flame line then press the **Ignition Button** and gradually slide the Flame Adjuster **Lever** right to increase (+) or left to decrease (-) the flame size.

INSTRUCTIONS

Hands-free Use

While the flame is lit. shift the **Safety Lock** downwards to the "Lock" position for hands-free use. To disable. shift the **Safety Lock** upwards to unlock.

Safety and Storage

Always shift the **Safety Lock** downwards to the lock position to prevent accidental ignition when the torch is not in use. Store at room temperature not exceeding 40°C/104°F.

WARNING

Do not touch the flame guard while in use or until sufficient time has passed for cooling. Do not immerse this product or heated parts in water. Allow to cool naturally. For best results, always use Whip-It! Butane Gas in the torch. Do not use propane gas or any other types of fluids. Do not store in a temperature exceeding 40°C/104°F. Keep away from eyes at all times. The torch flame is nearly invisible in bright light or sunlight. Make sure that gas flow is turned off when not in use. Do not pack this item in any checked or carry-on baggage. This product is flammable. Keep away from fire, open flames and hot surfaces. Failure to comply with these warnings may result in bodily harm or other accidents. Keep this unit out of reach of children at ALL times.

WARRANTY

Whip-It! firmly believes in delivering high-quality products. We offer a Limited Lifetime Warranty on all mechanical parts and labor with the ordinary use of your torch. This warranty excludes coverage for damages resulting from misuse, tampering and abuse. For more information, please visit our website or contact us directly.