




OASIS INTERNATIONAL

Service Bulletin

04/22/20

**Artesian Series POU Mechanical Float
Models: PSWSA1SK & PSWSA1SHS**

If there is no water flowing out of either faucet follow the steps below to reset the mechanical float. After removing the screws, lift up lid. Push the reset button about $\frac{1}{2}$ or $\frac{3}{4}$ down. Be careful to not push the button through the lid. The button will come back up after pushing. When the unit is moved or bumped, this causes the water to slosh around in the reservoir and the secondary float may be activated.

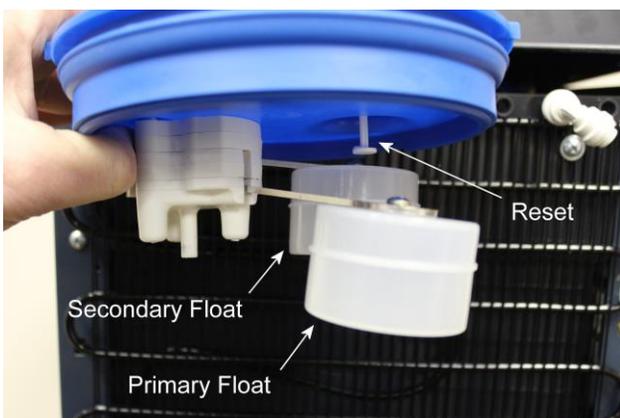

Alternate float assembly will have a white reset button.



www.oasiscoolers.com