



FOOD EQUIPMENT Operating and Maintenance Instructions

Model: 6210 & 6210-220 Pizza Oven

INTRODUCTION

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.
3. Clean machine thoroughly before and after all uses using cleaning instructions below.

SAFETY INSTRUCTIONS

1. Plug electrical cord into a certified electrical outlet with a corresponding voltage rating as listed on the machine model labels.
2. Always unplug the electric cord when appliance is not in use and before cleaning, adjusting or maintaining this machine. Do not operate with a damaged cord or plug or after the machine malfunctions, has been dropped or damaged. Use authorized service for examination, electrical or mechanical adjustment or repair.
3. This machine will be HOT during use and for a short time after it is turned off – BE CAREFUL. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials away from appliance.
4. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left operating and unattended.
5. This appliance is not intended for use near or around water. Never locate appliance where it may fall into a water container.
6. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electrical shock, fire or damage to the appliance. Do not block air intakes or exhaust in any manner. Do not use on soft surfaces where openings may become blocked.

PREPARATION

1. Remove all packing pieces and lift unit out of the box.
2. Remove any outside packaging.
3. Set unit on a flat surface.
4. Position the unit near a power outlet. Avoid the use of extension cords. Do not run cord under carpeting or cover with runners or the like. Arrange cord where it will not be tripped over.
5. This appliance has hot and live electrical parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.

Caution: To reduce the risk of fire, the appliance is to be mounted on floors of noncombustible construction with noncombustible flooring and surface finish and with no combustible material against the underside thereof, or on noncombustible slabs or arches having no combustible material against the underside thereof. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.

6. Remove any white plastic coating that may be affixed to stainless steel surfaces.
7. If unit fails to work properly when first operated call NEMCO customer service at 1-800-782-6761.

ELECTRICAL REQUIREMENTS

Refer to the product tag (serial plate) on the back of the unit for voltage and wattage requirements. Be sure to plug unit into grounded outlet with sufficient power.

WARNING: DURING NORMAL OPERATIONS THE EXTERIOR OF THE UNIT IS HOT!

OPERATION

1. Plug the unit into the power supply.
2. Set thermostat according to recipe or food package instructions.
3. Bake food products according to their cooking instructions. (Top and bottom of heaters can be operated independently)
4. To disconnect appliance, turn controls to off and remove plug from outlet.

CLEANING

NOTE: Proper maintenance plays an important part in the life span and functioning of the unit.


1. Turn the temperature control to the OFF position. Unplug the power cord.
2. Allow the unit to cool 30 minutes.
3. The rack and crumb pan can be removed from the unit and washed in hot, soapy water. Wipe dry.
4. Clean exterior of unit with a damp sponge and mild soap. Be sure to dry unit.
5. Do not immerse in water or other liquid.

DO NOT IMMERSE UNIT!

SERVICE PARTS

<u>PART #</u>	<u>DESCRIPTION</u>
45380	PILOT LIGHT (120 VOLTS)
45756	ON / OFF SWITCH PLATE
45769	TUBULAR HEATER (120 VOLTS)
45769-220	TUBULAR HEATER (220 VOLTS)
45772	THERMOSTAT
45781	PILOT LIGHT (220 VOLTS)
45918	TIMER (60 MIN)
45920	TIMER KNOB
45921	KNOB, CRUMB PAN
45936	TIMER DIAL
46361	CORDSET (220 VOLTS)
46372	CORDGRIP (220 VOLT CORD)
46376	CORDGRIP (120 VOLT CORD)
46377	TOGGLE SWITCH
46751	CORDSET (120 VOLTS)
55077	FOOT
66602	RACK
66605	CRUMB PAN
66631	RACK HANDLE
66756	DOOR ASSEMBLY

CONTROL PANEL LAYOUT

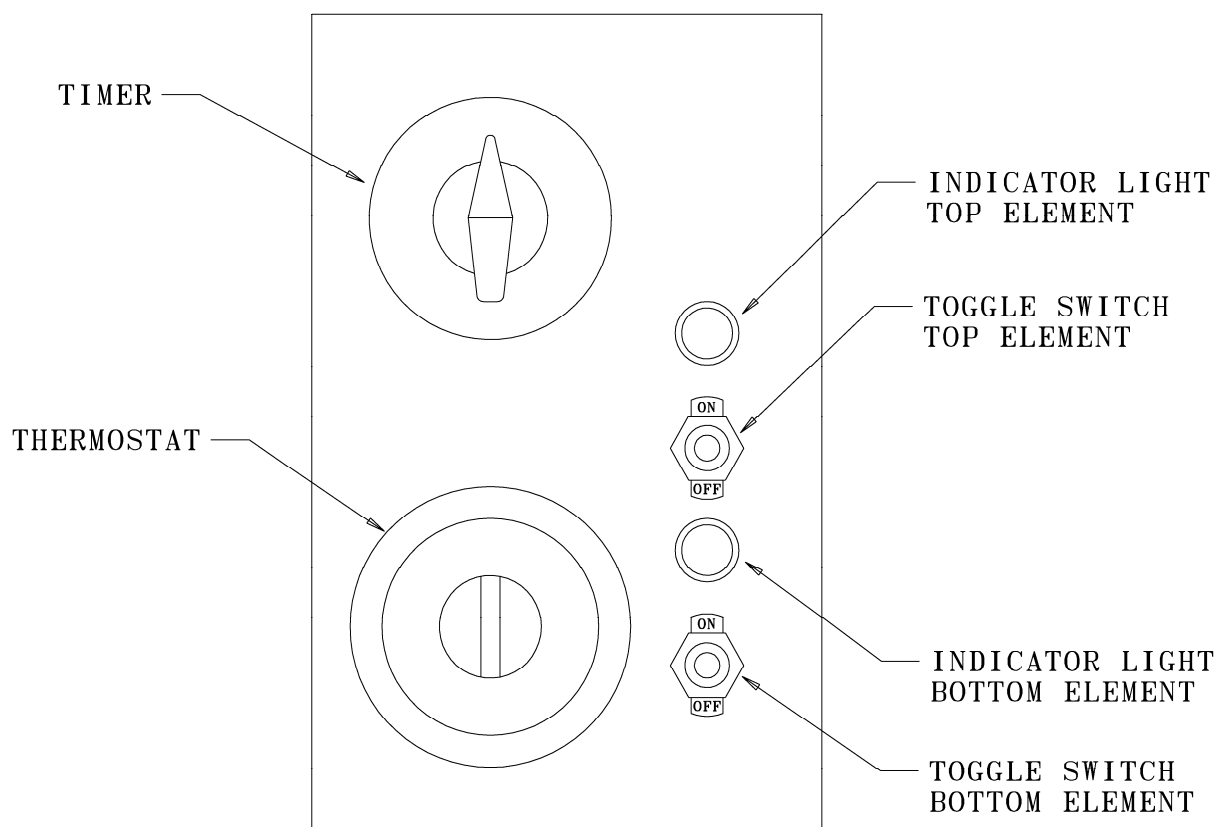

NEMCO FOOD EQUIPMENT 301 Meuse Argonne, Hicksville, OH 43526

1-800-782-6761 Toll Free 419-542-6690 Fax

www.nemcofoodequip.com



1/12/2011