





Package Elite Assembly Instructions



1. *BEFORE any assembly, make sure power cord is NOT plugged in.* Canopy in shipping position. Down position for moving through doorways or low ceiling height.

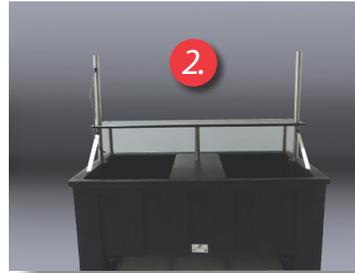

2. Lift canopy off of attached long poles.

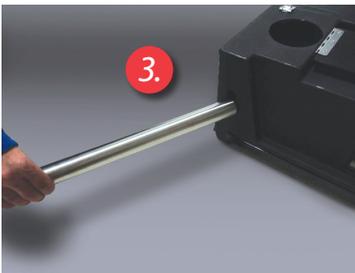


3. Install short poles through holes in bottom of canopy.



4. Make sure poles engage into molded plastic nipples in top of canopy



5. Insert canopy short poles into fixed long poles.

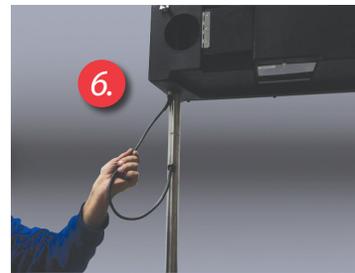

6. Feed lighting wire through oblong hole in left side of canopy (facing back of unit).



7. Make canopy lighting connection.



8. Canopy light bulbs are shipped inside unit. To install, remove bottom access door.



9. Screw bulb into lighting fixture inside canopy. Replace light bulb 100 watt Max compact florescent. *DO NOT USE REGULAR INCANDESCENT BULBS.*



10. Electric plug in located on bottom left side (facing back of unit).

Continued on next page.



© Iowa Rotocast Plastics, Inc. 2012. All Rights Reserved.


Cleaning and Care

1. Wash with mild soap and water.
2. Do not store in direct sunlight.
3. Grease casters monthly under heavy use. (Use Lithum Grease)






Package Elite Assembly Instructions

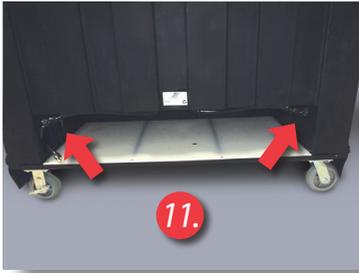

11. Drain each component separately.

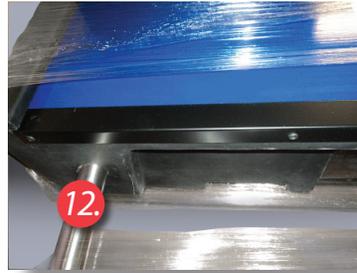

12. To remove canopy graphic, remove bottom angle screws, remove angle.

© Iowa Rotocast Plastics, Inc. 2012. All Rights Reserved.



Cleaning and Care

1. Wash with mild soap and water.
2. Do not store in direct sunlight.
3. Grease casters monthly under heavy use. (Use Lithum Grease)

