

# Care & Use Instructions

## Non-Stick Oven Baskets & Screens

- Wash oven basket before first use.
- Maximum operating temperature is **550°F**.
- Hand wash with mild soap/detergents only.
- Avoid using chemical cleaners or solvents.
- **DO NOT** scrape the basket surface with a hard-edged implement or use abrasive cleaning materials.
- **DO NOT** use grease on basket surface.
- Oven basket **WILL BE VERY HOT** upon removal from oven. Use a spatula or oven paddle underneath the basket to transport. **DO NOT** pick up basket from the side walls or rim.
- For use in indirect heat applications only.  
**DO NOT** expose to direct flame or heating coils.
- **DO NOT** fold.
- Replace basket when non-stick finish shows wear.