 
 



## PRO-MAX-MM

## **OPERATION & CLEANING INSTRUCTIONS**
 
## **CHANGING THE KEG**








NOTE: Float release is aligned and lets you see the green mark on the base.



Rotate float release 180° until the red mark on the STEP 3 bottom of the base is seen completely thru the cut out on the float release. The float will rise to the top of the chamber and allow beer to flow to the faucet.

 Return float release 180° until green STEP 4 mark on top of the base is seen completely thru the cut out on the float release.



VENT KNOB

CHAMBER :

FLOAT RELEASE 0

VENT

FLOAT

BEER

## **CLEANING INSTRUCTIONS**



STEP 1 Disconnect keg and connect line to cleaning system.

 


STEP 2 Rotate float release 180° until the red mark on the base is seen completely thru the cut out on the float release. This will allow the cleaning solution to circulate through the FOB.



STEP 3 Push down & hold **vent knob** to allow cleaning solution to fill chamber and exit through vent. This will clean the chamber, vent and drain.

**STEP 4** Rinse with water. Repeat Step 3 while rinsing with water.



STEP 5 Rotate float release 180° until green mark on top of the base is seen completely thru the cut out on the float release. Follow instructions for resetting after keg empties.

