



There are many applications for the Patterson Portable Stroller Fan. Use care when selecting locations for the fan. Do not place the fan on a sloped surface. Do not use if the finger guards are missing or are damaged or not fitting properly. Do not use if the cord or connector has exposed wires or is damaged in any way.

1. Place the portable base on a flat surface.
2. Secure the "U" shaped yoke to the portable base by inserting the 5/8" bolt through the center hole in the yoke and through the hole in the pedestal base arm. Place the 5/8" nut on the 5/8" bolt and tighten securely.
3. Carefully mount the factory assembled fan with mounting studs through the holes in the uprights of the "U" shaped yoke with the motor mount below the motor. Secure the fan to the yoke with the factory supplied nuts.

**Note:** Use care when repositioning fan or stroller. Do not attempt to adjust fan or stroller while the fan is running.

**Note:** Do not operate fan if the finger guards are damaged or missing.