


Installation Manual

# Rolling Booth

## Mesa—Vista(Booths)

Z000000611

Released 07/15/24

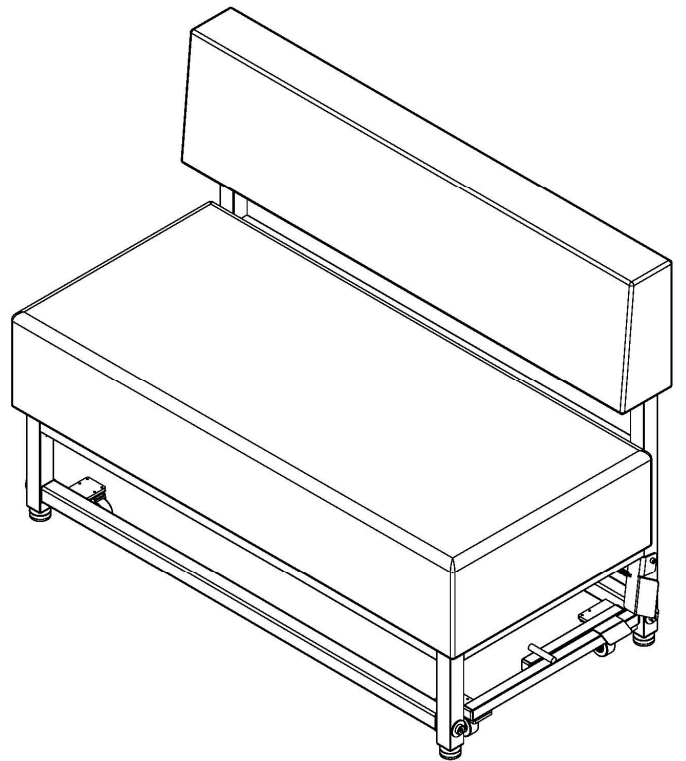

**Address** 615 CENTENIAL DRIVE  
KENYON, MN 55946

**Web** Plymold.com  
**Phone** 800.PLYMOLD


 **Plymold**  
A Division of Foldcraft

## Assembly


**Step 1:** Remove teardrop glides [B].

**Step 2:** Install non skid glides [A].

Thread glide completely into leg.

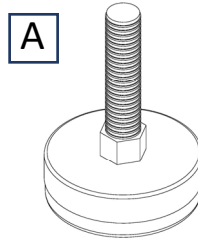


Non Skid Glide

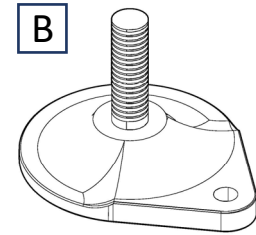

Tear Drop Glide

Figure 1

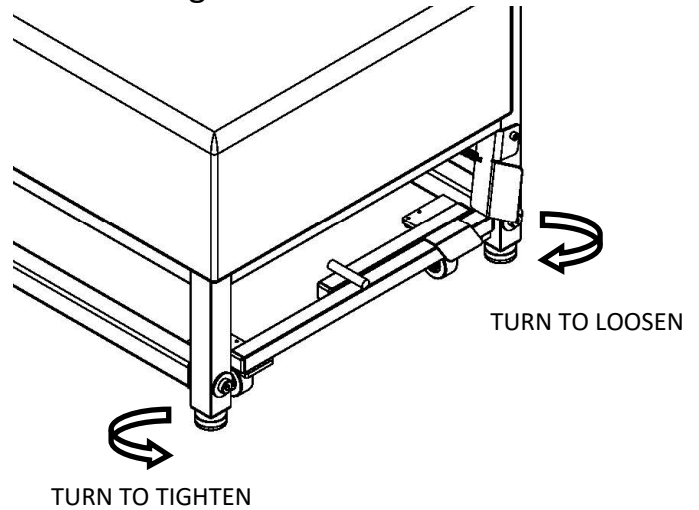

**Step 3:** Engage wheels by pressing down on foot lever [C]. (Figure 2)

**Step 4:** Move booth to desired location.

**Step 5:** Disengage wheels by pressing side lever [D]. (Figure 3)

Figure 2



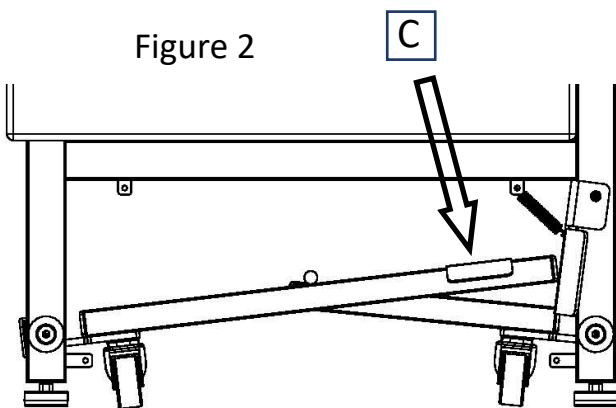


Figure 3

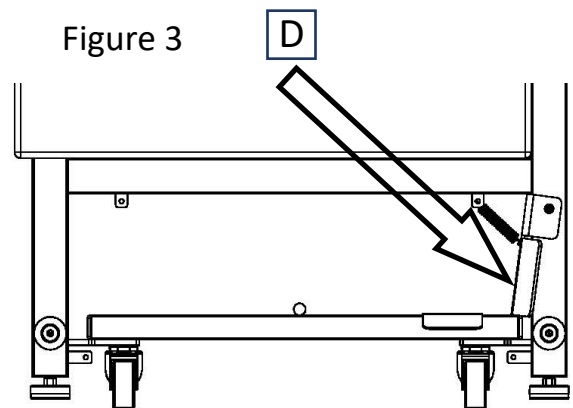

**Note:** Booths are shipped with lift mechanism on the right end. To move the lift mechanism to the left end see optional instructions on next page.

# Lift Mechanism Parts

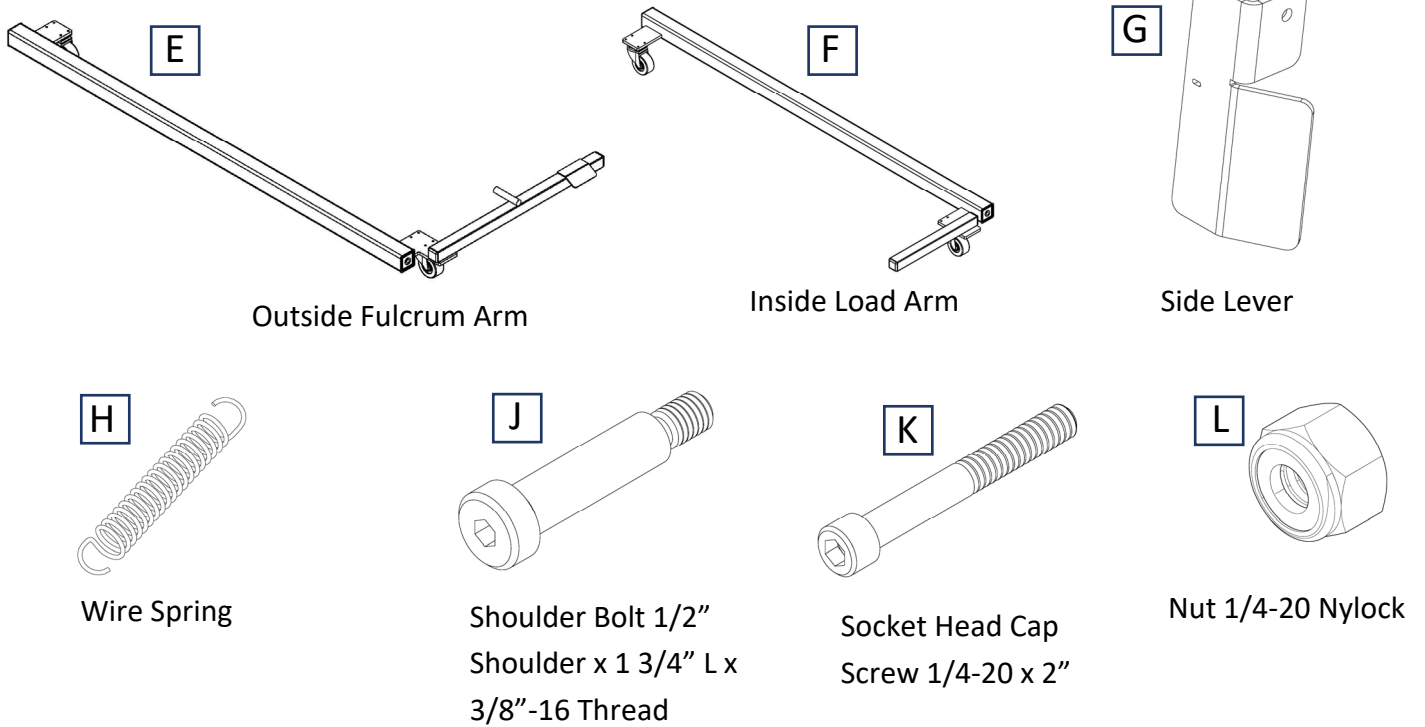

Move lift mechanism to left end. **(OPTIONAL)**



**WARNING! Disengage wheels to prevent personal injury.**

**Step 6:** Disengage wheels shown on (Figure 3, Step 5) of previous page.

**Step 7:** Uninstall spring [H]. (Figure 5)


**Step 8:** Uninstall 1/4-20 Nut [L] and 1/4-20 x 2" Socket Head cap screw [K] to remove side lever [G]. (Figure 6)

**Step 9:** Uninstall 1/2"x 1 3/4" shoulder bolt [J] on both ends to remove inside and outside arms. (Figure 7)

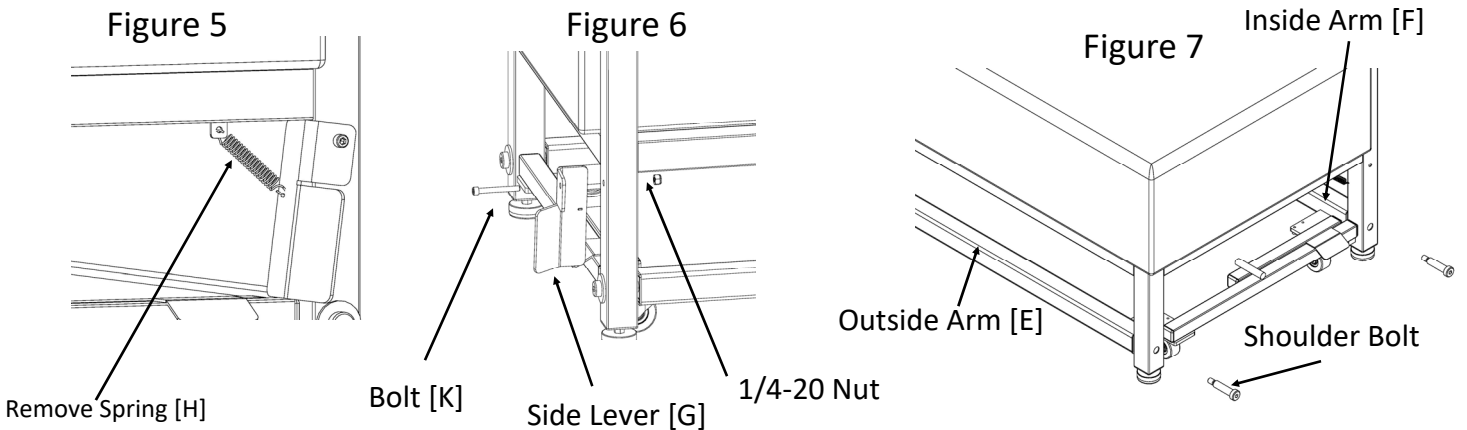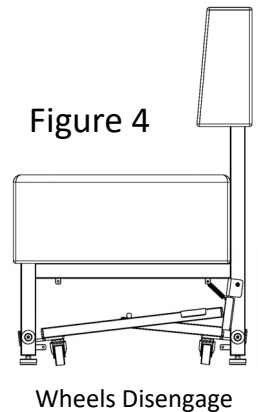


## Assembly

Figure 8

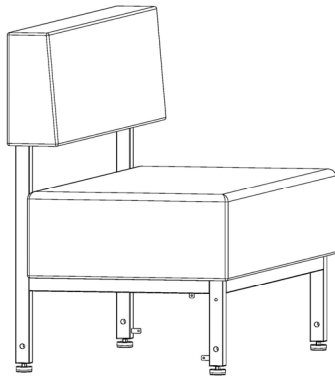

Left End View of  
Booth No Wheels

Figure 9

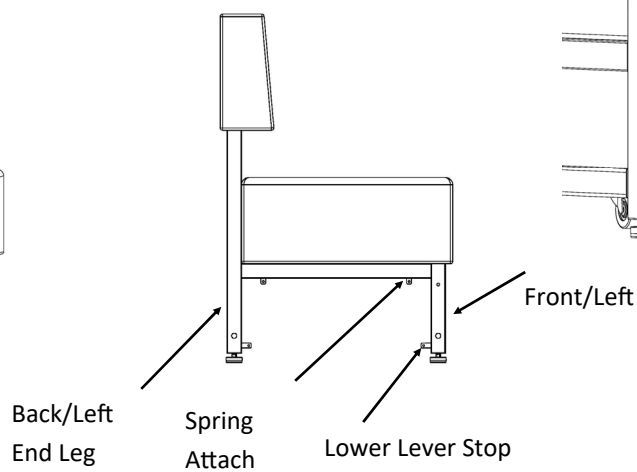


Back/Left  
End Leg

Spring  
Attach

Lower Lever Stop

Front/Left

Figure 10

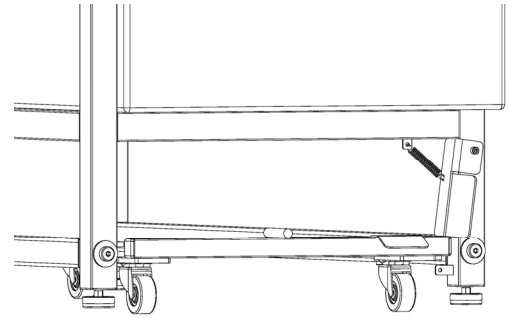

**Step 10:** Fasten inside load lever arm [F] onto front legs using 1/2"x 1 3/4" shoulder bolt [J] on both ends.

**Step 11:** Fasten outside fulcrum arm [E] onto back legs using 1/2"x 1 3/4" shoulder bolt [J] on both ends. Make sure the fulcrum pin is on top of the load lever arm.

**Step 12:** Install 1/4-20 Nut [L] and 1/4-20 x 2" Socket Head cap screw [K] to attach side lever [G].

**Step 13:** Install spring [H]

**Step 14:** Wheels are ready to engage and disengage from the left end. Steps 4,5,6 show how to accomplish this from the right end.

Figure 11

