Daily Cleaning for the Sŏta™ Oven

Daily Cleaning

Follow the steps below when cleaning your Sota oven. Use only TurboChef®-approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.



 
Step 1

Step 1: Prepare the Oven

- MARNING: The oven operates at approximately 500°F (260°C) and may cause injury if not allowed to cool properly.
- Turn off the oven by pressing the On/Off key.
- Slightly open the oven door.
- · Cooling takes approximately 30 minutes.
- $\ensuremath{\mathsf{O}}\xspace\operatorname{DO}\xspace$ NOT clean the oven until the oven displays oven off:

Supplies and Equipment

TurboChef * Oven Cleaner (Product Number: 103180), TurboChef * Oven Guard (Product Number: 103181), Kay ClickSan® sanitizer, nylon scrub pad, cleaning towel, disposable gloves, protective eyewear, dust mask (optional)



Step 6, Continued

Step 6: Clean the Oven Interior, Continued

- A CAUTION: DO NOT attempt to scrub the upper jetplate (A). If food is stuck to the oven ceiling, gently remove it without applying pressure to the glass plate. Breakage will result in a non-warranty service call.
- ⚠ CAUTION: DO NOT remove the top glass jetplate (A); breakage will result in a non-warranty service call.

Step 2 (Fig A)

Step 2: Remove the Wire Rack and Lower Jetplate

- ⚠ WARNING: Be sure the oven interior is cool before removing these items.
- The wire rack and lower jetplate are connected and can be removed together.
- Push the wire rack towards the rear cavity wall (Fig A) and then lift up (Fig B).
- Maneuver the bottom jetplate out from under the tabs on
- ⚠ CAUTION: DO NOT remove the top glass jetplate; breakage will result in a non-warranty service call.



Step 7

Step 7: Clean and Dry the Oven Door

- Clean the oven door with Oven Cleaner and a nylon scrub
- Wipe the oven door with a damp towel, and then a dry



Step 2 (Fig B)

 
Step 3: Clean the Wire Rack and Lower Jetplate

• Detach the wire rack from the jetplate and wash, rinse, sanitize, and dry each part.



Step 8: Rinse or Wipe the Oven Interior

- ⚠ CAUTION: DO NOT use a hose or water jet for cleaning. Doing so can damage critical oven components, resulting in a non-warranty service call.
 - Wipe down the oven interior with a clean damp towel.
- Dry the oven interior with a clean towel.



Step 4

Step 4: Clean the Air Filter

- ⚠ CAUTION: TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.
- · Remove the air filter from the back of the oven.
- Rinse the air filter with hot water.
- Allow the air filter to dry completely.
- ⚠ CAUTION: DO NOT operate the oven without the air filter in place.



Step 9

Step 8

Step 9: Apply TurboChef® Oven Guard

 
- Spray TurboChef® Oven Guard onto a clean towel.
- Wipe the interior walls and the inside of the oven door.
- A CAUTION: DO NOT spray Oven Guard into the cavity, especially around the holes on the back oven wall. Doing so can damage critical oven components, resulting in a nonwarranty service call.



Step 5

Step 5: Wipe the Oven Interior

• Use a food vacuum or damp towel to remove large particles from the oven cavity.



Step 10

Step 10: Reinstall Components

- Reconnect the wire rack to the lower jetplate, and reinstall both items.
- Close the oven door.
- Reinstall the filter, or replace it with a new one if the mesh is deteriorated, has large openings, or has started to dislodge from the frame.



Step 6

Step 6: Clean the Oven Interior

- Spray TurboChef * Oven Cleaner onto the top, bottom, and sides of the oven interior.
- ⚠ CAUTION: DO NOT spray Oven Cleaner into the holes on the back oven wall. Doing so can damage critical oven components, resulting in a non-warranty service call.
- Allow Oven Cleaner to penetrate stains for five minutes.
- Clean the oven interior with a nylon scrub pad.



Step 11

Step 11: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.
- Remove the lower panel and remove large food particles.
- Wipe the panel with a clean, damp towel.
- ⚠ CAUTION: DO NOT spray chemicals into any openings, such as the louvers on the side panels or the rear vent catalyst housing. Doing so can damage critical oven components, resulting in a non-warranty service call.
- The oven is ready to turn on.

