


# Stacking Chair Dolly

## INSTRUCTION SHEET




LANCASTER™  
TABLE & SEATING

### CONTENTS:

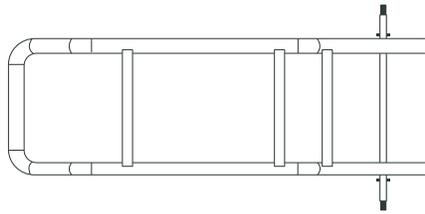


A. truck body

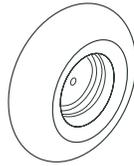


B. wheels x 2

### HARDWARE:

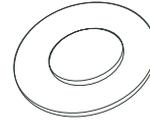

 C. washers x 4




D. nuts x 2

### NOTES:

- Inspect all pieces for damage upon receipt and before assembly. Do not use if any parts are broken or missing
- Wrench needed for assembly (not included), do not over tighten
- Always use with caution, adult operation only
- Stacking capacity: 8-10 chairs, do not overload


### STEP 1

Put washer on axle, followed by wheel, then second washer

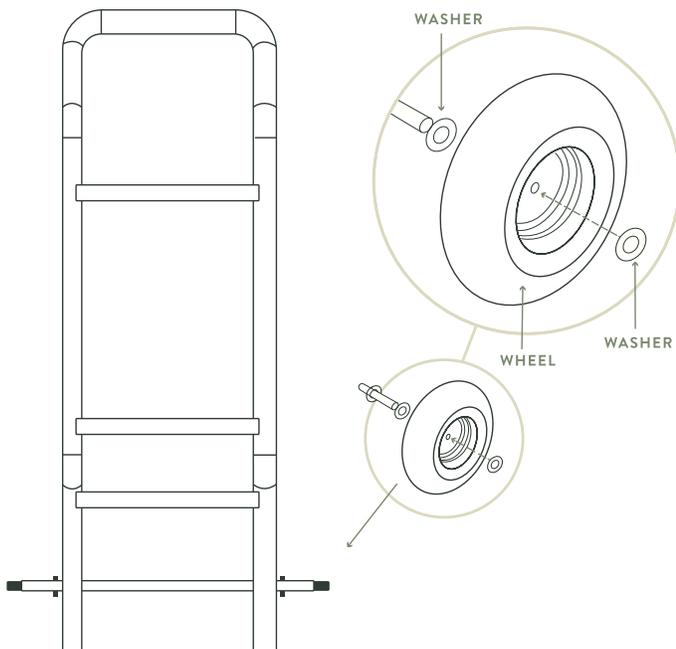

### STEP 2

Screw nut onto threaded end of axle, hand tighten with wrench

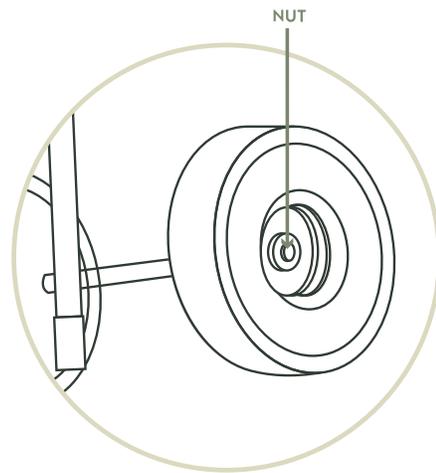

### STEP 3

Repeat for second wheel

### CLEANING & MAINTENANCE:

- Periodically tighten nuts as needed
- Wipe dolly with a slightly damp cloth