

Use & Care Guide

WOODEN HIGH CHAIR



LANCASTER™
TABLE & SEATING




ASSEMBLY / ARRIVAL

1. It is the responsibility of the recipient to inspect the shipment for damage prior to signing the bill of lading. Damages must be reported to your authorized retailer within 5 days of receipt.
2. Please refer to any safety labels on packaging or resources that come with high chairs.
3. Always follow cleaning and maintenance instructions.
4. Ensure all bolts are tightened fully.



HARNESS USAGE

Secure seat belt by pushing tabs into buckle until they click into place. Straps are adjustable to fit looser or tighter.

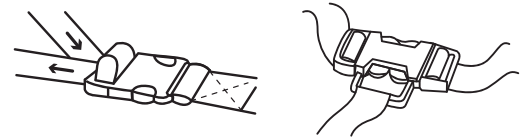

CLEANING INSTRUCTIONS

1. Do not use abrasive cleaners or products. Clean with a damp cloth and dry with a dry cloth. Recommended: Noble Sunbright (999SUNBRIGHT), or for deep cleaning, Noble Luster Plus (148LUSTER+).
2. If you are using a new soap or cleaner, test first on an area that may not be shown. Make sure wood is fully dry after cleaning and before use.



ONGOING MAINTENANCE

MONTHLY

1. Tighten all bolts, ensuring structure is sound and there are no cracks / breaks in material.
2. Do not overtighten - this may result in cracks in the material.

⚠️ WARNING ⚠️

The child shall be secured in the high chair at all times by the restraint system.

It is recommended that the high chair be used only by children capable of sitting upright unassisted.

- Weight Capacity - up to 33 lb.
- Age Range - up to 3 years
- Reference front of seat for further warning instructions.



2205 Old Philadelphia Pike, Lancaster, PA 17602
1-800-942-0412
Manufacturer Date:

⚠️ WARNING ⚠️

FALL HAZARD: Children have suffered **severe** head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.

- Always use restraints, and adjust to fit snugly.
- Stay near and watch child during use.