

#503HDTP600GR | #503HDTH600GR | #503HDTP100GR
#503HDTP600BL | #503HDTH600BL | #503HDT100BL


Steel Hand Truck

ASSEMBLY TIPS

- Read these instructions thoroughly before proceeding.
- Tighten all parts by hand. Do not use power tools.
- For you safety, do not overload.
- For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.

STEP 1

Slide axle into the frame of the hand truck. Place the first wheel, followed by a washer, as shown below. Insert the small pin into the axle hole to secure wheel in place.

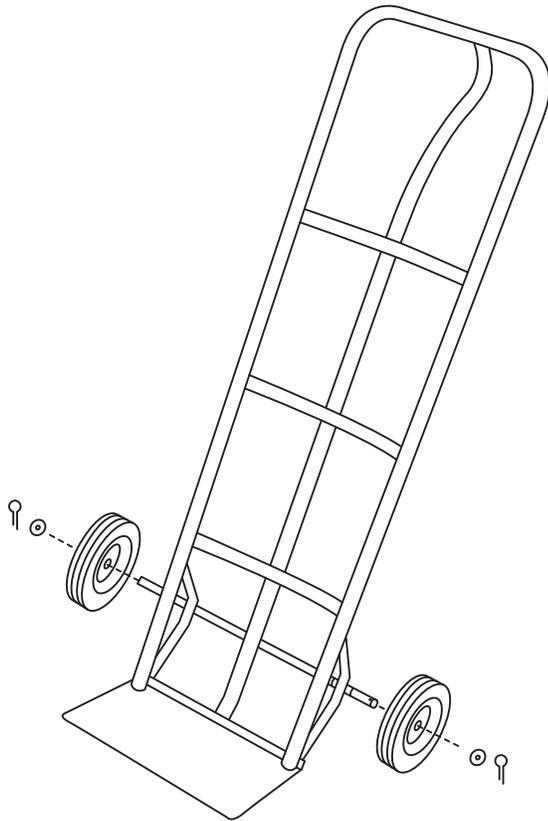

STEP 2

Repeat for the second wheel, then assembly is complete.

