


# Installation and Maintenance Instructions

## TABLE LEG HOSE REEL SWING BRACKET G018477-45

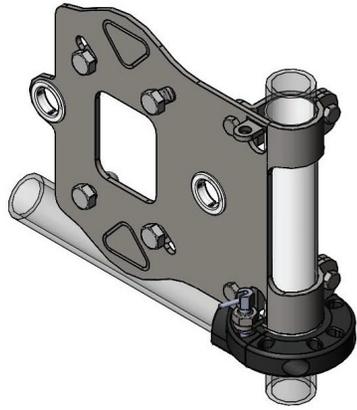

### Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

T&S Brass and Bronze Works, Inc.  
Attn: Warranty Repair Department  
2 Saddleback Cove  
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover

Items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long and implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

## Part Numbers

### Table Leg Hose Reel Swing Bracket Parts List

<b>1 Spring-Loaded Lock</b>	<b>018470-45</b>
<b>2 Table Leg Sleeve</b>	<b>018469-45</b>
<b>3 Swing Bracket Support Kit (Hardware Included)</b>	<b>018478-45</b>

## Instructions

### Left Side Installation:

1. Place the 2 black plastic pieces as shown in Figure A and tighten screws and nuts. Ensure back piece is seated firmly on horizontal support.
2. Snap white plastic sleeve over vertical leg and slide down to rest on black assembly. Sleeve lip must be toward black assembly.
3. Place large bracket around leg.
4. Attach both small brackets as shown.
5. Slide down over sleeve and against black assembly.
6. Ensure spring-loaded lock engages black assembly holes.
7. IMPORTANT! Hose Reel supply hose must go through grommet on inlet side of reel.

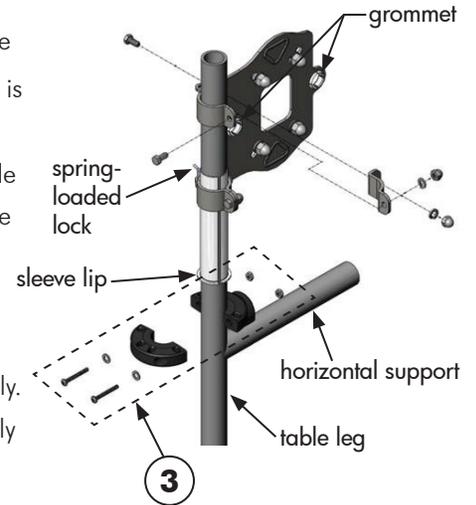


Figure A - Left Side

### Right Side Installation:

1. Leave the black assembly and sleeve in place.
2. Remove small brackets.
3. Remove large bracket and flip upside down.
4. Re-attach small brackets as shown.
5. Remove spring-loaded lock.
6. Re-Install spring-loaded lock into lower hole as shown.
7. Ensure spring-loaded lock engages black assembly holes.
8. IMPORTANT! Hose Reel supply hose must go through grommet on inlet side of reel.

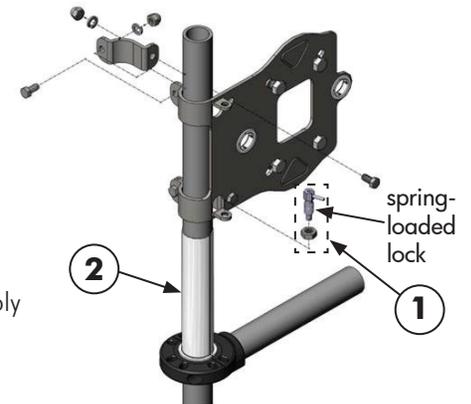


Figure B - Right Side