



TO LOAD:

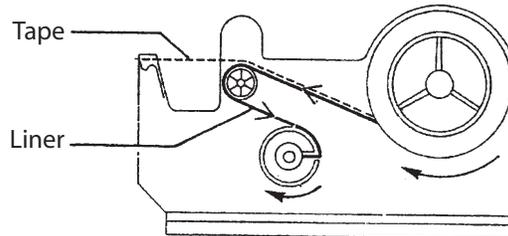

If the spool (1) doesn't rewind the liner promptly, it is necessary to increase the friction torque, turning the knurled knob (2) clockwise, until the liner is completely rewound.

The core holder friction controls the unrolling of the tape. If the tape unrolls easily, it is necessary to increase the friction torque, turning the knurled knob (3), clockwise, until the correct unroll is obtained.

These frictions do not need to be adjusted again, until a different kind of tape is used.

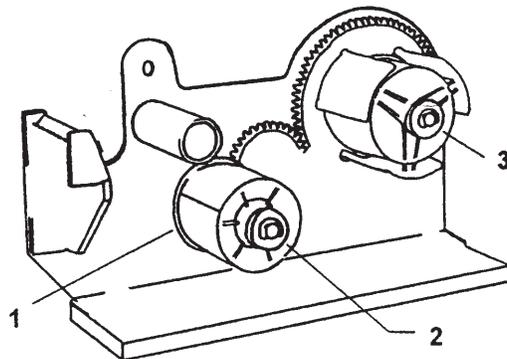

SAFETY:

The dispenser is provided with a sharpened blade to cut the tape, so it is necessary to use it carefully.

MAINTENANCE:

Adhesive which may occasionally up on the blade after extended use can easily be removed using a wooden or plastic tool. Do not use solvents for cleaning. The core holder shaft or the spool shaft should be lubricated from time to time using Vaseline oil. All parts available as spare parts.