



# WAFFLE PROGRAM – FAQs

## Good practices.

Use a waffle fork to remove waffles from the machine to avoid scratching the nonstick coating. Never use a metal utensil.

Use a cleaning brush to thoroughly clean plates without scratching.



CAC174

CAC177

## WAFFLES STICKING?

Waring Waffle Makers are equipped with a nonstick coating to prevent waffles from sticking. However, if sticking begins to occur, use soft bristle or silicone brush to evenly coat plates with cooking oil. We do not recommend using nonstick spray because, if used over time, will cause a buildup of plate tackiness.

### Buildup on plates? Plates scratched?

Plates are removable and can be easily replaced on location.

Order – WW180XRP / WBW300XRP / WMB400XRP

## Waring – The Works: How to Replace Waffle Plates



[Watch Here](#)

**For Repairs, Customer Service and Questions**

Weekdays 8:30 – 4:30 EST

Call: 1-800-4WARING • Email: [service\\_waring@conair.com](mailto:service_waring@conair.com)




# CLEANING & MAINTENANCE GUIDE

Unplug and allow Waffle Maker to cool completely before cleaning.

## DAILY STEPS

### STEP 1




**BRUSH CRUMBS FROM GROOVES  
WITH INCLUDED BRUSH**

**TIP**

Only use brushes with soft bristles to avoid scratching the nonstick coating.

### STEP 3

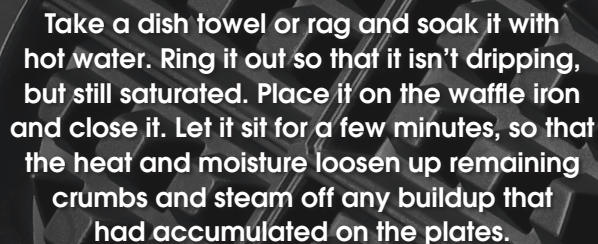

Take a dish towel or rag and soak it with hot water. Ring it out so that it isn't dripping, but still saturated. Place it on the waffle iron and close it. Let it sit for a few minutes, so that the heat and moisture loosen up remaining crumbs and steam off any buildup that had accumulated on the plates.

### STEP 2



**ABSORB ANY EXCESS COOKING OIL  
BY WIPING WITH A DRY CLOTH  
OR PAPER TOWEL**

### STEP 4



**TO CLEAN EXTERIOR, WIPE WITH A SOFT, DAMP CLOTH  
NEVER USE AN ABRASIVE CLEANSER OR HARSH PAD  
USE SOAP OR CLEANING SPRAY AS NEEDED**

Patrons will often overfill the waffle makers, which causes batter to overflow. To prevent staining on the exterior of the unit, it is important to clean the housing periodically throughout each day of service.

## EVERY 3–4 MONTHS

For busy establishments, it may be necessary to replace waffle plates over time.

To replace plates, order through Waring customer service at 1-800-4WARING, order online or find a local distributor or service center.

**NOTE:** Any other servicing should be performed by an authorized service representative.

Plates should not be removed for cleaning. Waffle plates are not dishwasher safe.