



INSTRUCTIONS FOR *WEIGHT BAGS*

In order to attach your weight bags to your shelter, your E-Z UP® Instant Shelter® should be completely set up and in its intended location. Refer to your shelter owner's manual for set up instructions.



A Each weight bag includes two cylinders that must be filled with sand before first use. Unzip each of the two cylinders on your weight bag, fill with sand and zip closed. A weight bag is designed to hold 25 lbs of sand (sand not included).



Fill both cylinders of the weight bag with sand prior to first use

B Wrap the weight bag around one corner leg, securing the leg between the two cylinders. Your weight bag should be standing vertically, with the base of each cylinder firmly on the ground.



Wrap frame leg between weight bag cylinders

C Attach the weight bag to the frame leg by tightly wrapping the straps around both cylinders of the bag and securing the two hook-and-loop ends to the hook-and-loop patches.



Secure straps tightly

D Attach a weight bag to each corner leg, using the steps noted above.



Fabric Care: The weight bag fabric can be cleaned with mild soap (not detergent) and water once the sand is removed. Let the fabric dry completely before storing.



INTERNATIONAL E-Z UP, INC.

1900 Second Street, Norco, California 92860 USA Phone (951) 279-0999 • Fax (951) 279-0888

© Copyright 2015 International E-Z UP, Inc. USA. All rights reserved. IN.PRWB.0525

ezup.com
800-45 SHADE
800-457-4233