

47542DM2WBKK | 47542DMWWBKK | 47542OP2WBKK
47542OPWWBKK | 475WWASSBK

Windshield Washing Attachment

Receptacle Mounting:

REQUIRED TOOLS

NOT INCLUDED


- Power drill
- 3/8" bit
- Phillips screwdriver
- Adjustable wrench

PARTS LIST

- Receptacle lid
- Receptacle base
- Mounting template
- Windshield service center lid
- Windshield service center base
- Windshield service center bucket
- (4) Washers
- (4) Locknuts
- (4) Mounting bolts


STEP 1

Remove the receptacle lid, windshield service center bucket, and lid from the packaging.

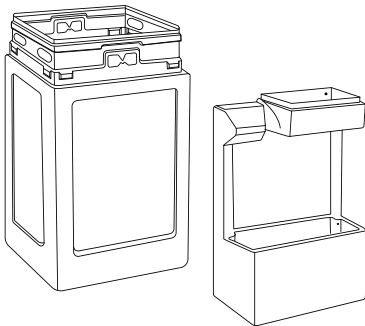


STEP 2

Unfold the mounting template and place it against the receptacle in the position where the unit will be attached. Ensure the correct side is up.

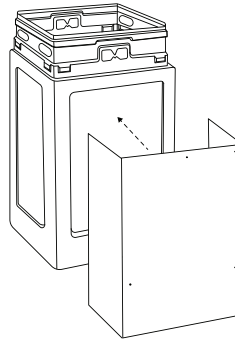


STEP 3

Wrap the mounting template "wings" (unmarked areas of the paper template) around the sides of the receptacle and use tape to hold it in place.

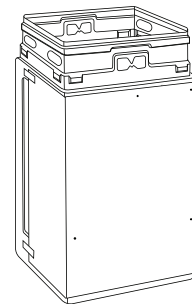


STEP 4

Using a 3/8" drill bit, drill through the 4 marked points on the paper template.

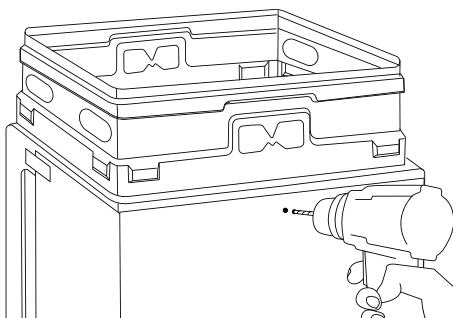


STEP 5

Remove template. Line up the holes on the windshield service center and the drilled holes in the receptacle.

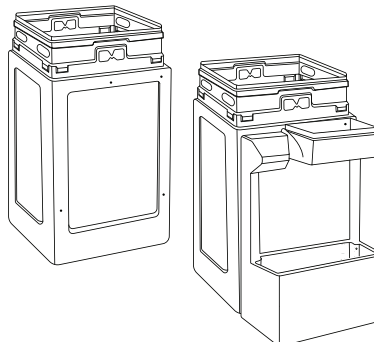


STEP 6

Place one washer on each of the four supplied mounting bolts. From the inside of the receptacle, feed the bolts through the drilled holes on the receptacle and the pre-drilled holes in the windshield service center.

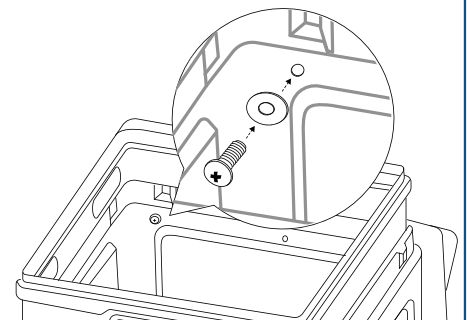


STEP 7

Locate the end of each of the four bolts on the windshield service side. Thread a locknut onto each bolt.

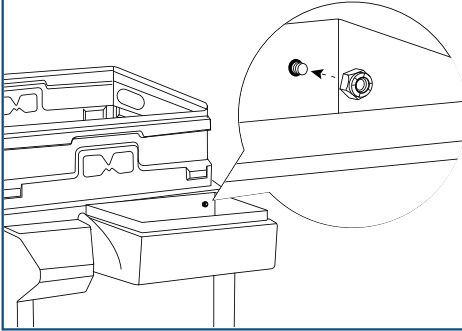


STEP 8

Use a Phillips screwdriver and an adjustable wrench to tighten the screws and locknuts until snug.

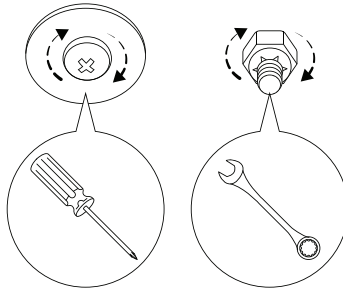

STEP 9

Replace the receptacle lid, windshield service center bucket, and lid. Assembly complete.

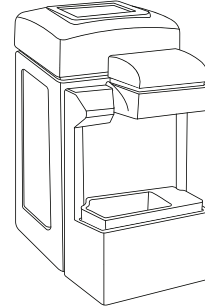

Column Mounting:

REQUIRED TOOLS


- (4) mounting screws (no more than 1/4 diameter)
- Power drill
- Bit (compatible with your hardware)

PARTS LIST

- Windshield service center base
- Windshield service center bucket
- Windshield service center lid


STEP 1

Place the windshield service center against the intended column.

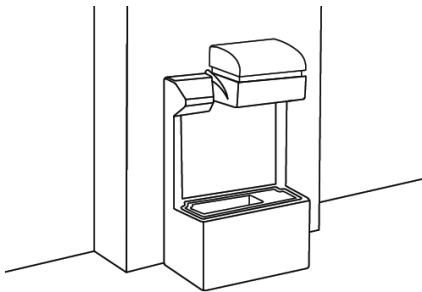


STEP 2

Remove the bucket and lid.

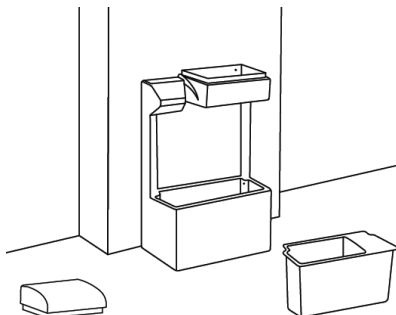


STEP 3

Locate and mark the four mounting holes inside the unit.

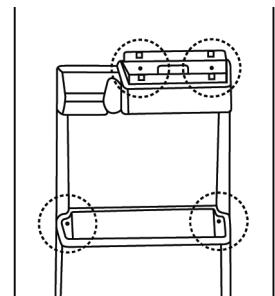


STEP 4

Use a 3/8" bit to drill the four holes.

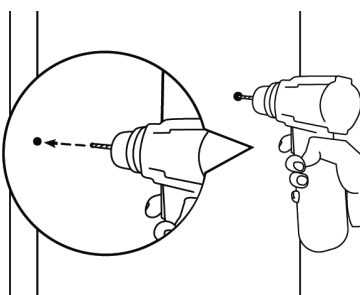


STEP 5

From inside the windshield service center, screw in the four mounting screws to attach it to the column.

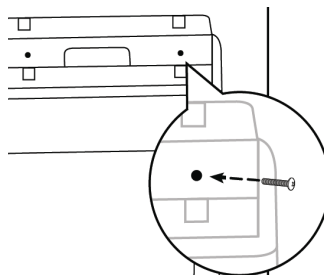

STEP 6

Replace the bucket and lid. Assembly complete.

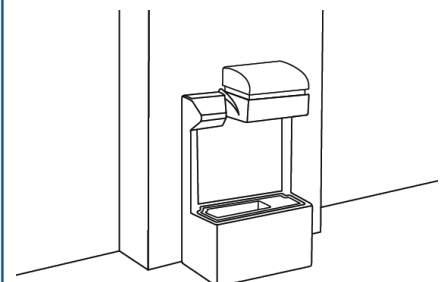

Strap Mounting:

PARTS LIST

- Receptacle lid
- Receptacle base
- Mounting template
- Windshield service center lid
- Windshield service center base
- Windshield service center bucket
- (4) Washers
- (4) Locknuts
- (4) Mounting bolts


REQUIRED TOOLS

NOT INCLUDED

- Knife/Scissors
- Two mounting straps
- Phillips screwdriver
- Adjustable wrench


STEP 1

Using a knife or scissors, cut the mounting strap to the appropriate length.

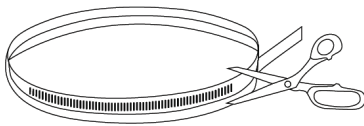


STEP 2

Remove the windshield service center lid and bucket.

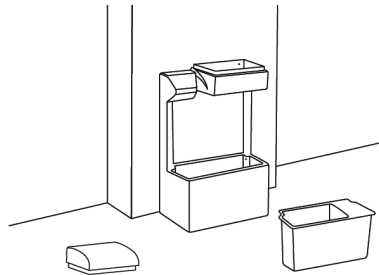

STEP 3


Place one washer onto each of the four supplied mounting bolts.

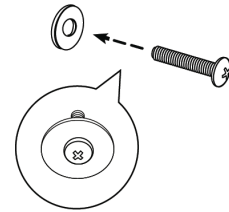

Note: Additional hardware may need to be purchased if the supplied hardware is not compatible.


STEP 4

Insert bolt/washer through hole in mounting strap and then through hole in windshield service center as shown.

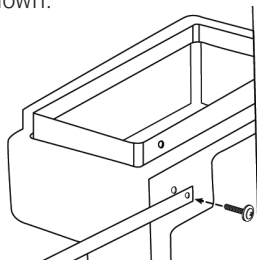


STEP 5

From inside the windshield service center, place a locknut on the bolt.

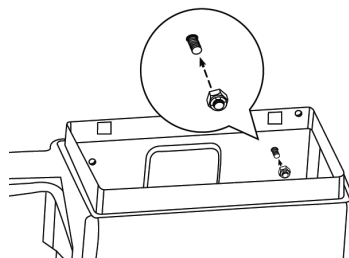


STEP 6

Use a Phillips screwdriver and an adjustable wrench to tighten the screws and locknuts until snug.

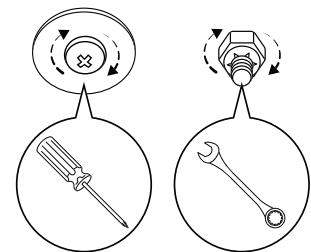

STEP 7

Repeat to secure both the top and bottom straps.

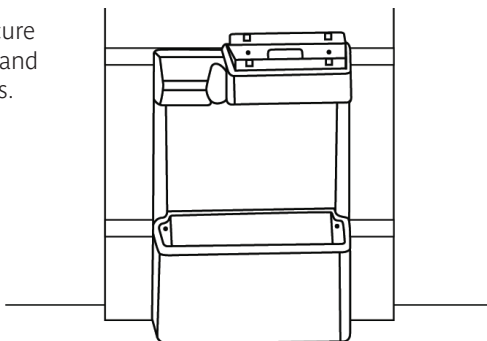

STEP 8

Replace the bucket and lid. Assembly complete.

