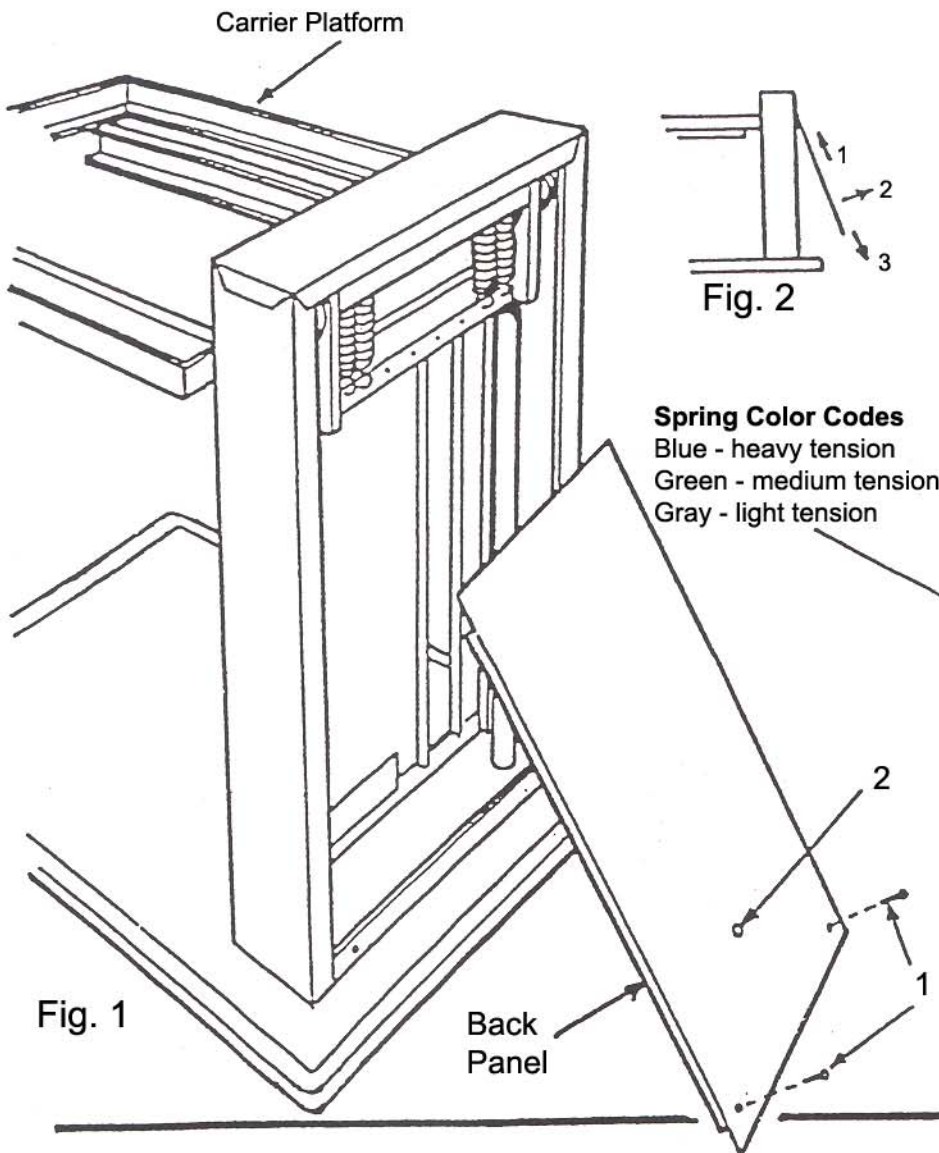
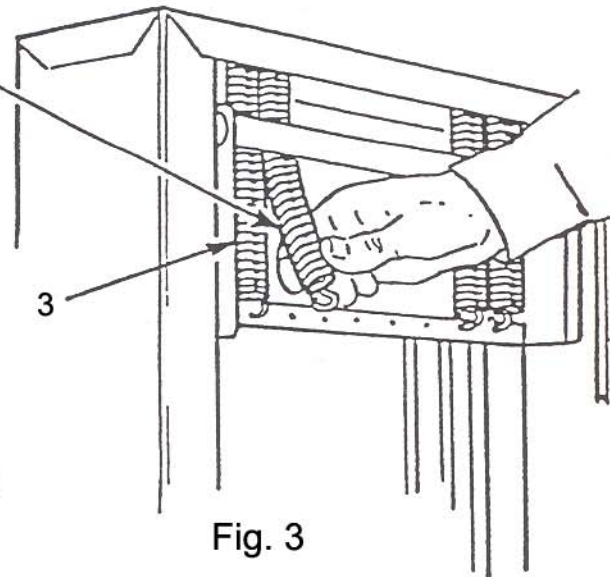


INSTRUCTIONS FOR FIELD ADJUSTMENT**To remove back panel :**



1. Remove two screws (item 1) from bottom of panel. (Figure 1)
2. Insert ball point pen or similar object into hole (item 2), and lift panel up, out, and down (Figure 2).

To adjust spring tension:

1. Remove load from carrier platform.
2. Attach or detach tension springs (item 3) from carriage support (Figure 3).
3. Test load for correct height, and readjust, if necessary.

**Carrier Platform Field Adjustment**

(to re-level carrier platform, if necessary)

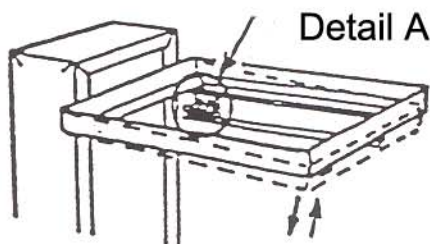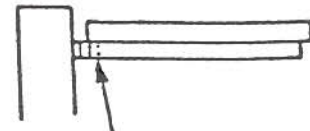**Detail B**

1. Remove load from carrier platform.
2. Tip unit on its handle side to expose underside of carriage platform.
3. Loosen lower (closer to casters) carriage arm bolts (Detail B).
4. Loosen or tighten square head set screws to raise or lower carrier platform. (Detail A). Tightening (clockwise) will raise the platform.
5. Re-tighten the lower carriage arm bolts to secure the carrier platform.