



[www.easterntabletop.com](http://www.easterntabletop.com) - Phone: 718-240-9595

## **I .Specification For Model# 801IND.Spec 801IND**

- 1). Item No.: 801IND
- 2). Power : 600W(1-4 levels)
- 3). Voltage: 120V~60Hz
- 4) Max chain QTY: 3 PCS

## **II .Cautions**

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unit near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.

## **III .How to Use**

- 1). Place suitable cooking utensils in the center of the top plate and plug in, the power light will shine

- 2). Pressing ON/OFF button, the cooker will be work. Set the cooker at desired power by directly pressing to adjust the power from 1 to 4 or 4 to 1.
- 3). The appliance is equipped with an overheat protection. If the pot or pan is getting too hot, the appliance will switch off power, a buzzer sounds and on the display occurs "E2". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems.
- 4). This appliance is liable to get hot during use.

#### Power Levels as below :

<b>1 Level</b>	<b>61°C-71°C(145-155°F)</b>
<b>2 Level</b>	<b>72°C-76°C(156-165°F)</b>
<b>3 Level</b>	<b>77°C-82°C(166-175°F)</b>
<b>4 Level</b>	<b>83°C-87°C(176-185°F)</b>

#### IV.Usable and Non-usable Utensils

 
##### 1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



##### 2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



#### V.How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).