


Coffee cup

Tasse à café
Kaffeetasse
Taza a café
Tazza da caffè

10 cm - 6.5 cm - 28 cl
3.95" - 2.55" - 9.45 oz

■ FR116C28GR
■ FR116C28RD
■ FR116C28OR



8.5 cm - 6 cm - 20 cl
3.35" - 2.35" - 6.75 oz

■ FR116C20GR
■ FR116C20RD
■ FR116C20OR

12


Saucer for breakfast/coffee cup

Soucoupe pour tasse à déjeuner/café
Untere für Frühstück-/Kaffeetasse
Platillo para taza a desayuno/café
Piattino per tazza da colazione/caffè

17 cm / 6.70"

■ FRCLSA02GR
■ FRCLSA02RD
■ FRCLSA02OR

12


Espresso cup

Tasse à expresso
Espressotasse
Taza a expreso
Tazza da espresso

6.5 cm - 5.3 cm - 8 cl
2.55" - 2.10" - 2.70 oz

■ FR116C08GR
■ FR116C08RD
■ FR116C08OR

12


Saucer for espresso cup

Soucoupe pour tasse à expresso
Untere für Espressotasse
Platillo para taza a expreso
Piattino per tazza da espresso

13 cm / 5.10"

■ FRCLSA13GR
■ FRCLSA13RD
■ FRCLSA13OR

12


Mug Flora

Chope Flora
Becher Flora
Mug Flora
Mug Flora

8 cm - 10.8 cm - 30 cl
3.15" - 4.25" - 10.15 oz

■ FRBAFM30GR
■ FRBAFM30RD
■ FRBAFM30OR



7.6 cm - 10.6 cm - 26 cl
3.00" - 4.15" - 8.80 oz

■ FRBAFM26GR
■ FRBAFM26RD
■ FRBAFM26OR



6



Pieces per box
Pièces par boîte
Stück pro Karton
Piezas por caja
Pezzi per scatola