

FIRE **NEW**



Coffee cup
Tasse à café
Kaffeetasse
Taza a café
Tazza da caffè

7.5 cm - 8 cm - 20 cl
2.95" - 3.15" - 6.75 oz

■ FRNOCU20GR
■ FRNOCU20RD
■ FRNOCU20OR

12



Saucer for coffee cup
Soucoupe pour
tasse à café
Untere für Kaffeetasse
Platillo para taza a café
Piatino per tazza da caffè

14 cm / 5.50"

■ FRNOSA2GR
■ FRNOSA2RD
■ FRNOSA2OR

6



Espresso cup
Tasse à espresso
Espressotasse
Taza a expreso
Tazza da espresso

6.5 cm - 6 cm - 9 cl
2.55" - 2.35" - 3.05 oz

■ FRNOCU09GR
■ FRNOCU09RD
■ FRNOCU09OR

12



Saucer for espresso cup
Soucoupe pour tasse
à espresso
Untere für Espressotasse
Platillo para taza a expreso
Piatino per tazza da
espresso

10 cm / 3.95"

■ FRNOSA1GR
■ FRNOSA1RD
■ FRNOSA1OR

12



Mug
Chope
Becher
Mug
Mug

8 cm - 10.5 cm - 33 cl
3.15" - 4.15" - 11.15 oz

■ FRNOMG33GR
■ FRNOMG33RD
■ FRNOMG33OR

6



Breakfast cup
Tasse à déjeuner
Frühstückstasse
Taza a desayuno
Tazza da colazione

12 cm - 7.5 cm - 45 cl
4.70" - 2.95" - 15.20 oz

■ FR116C45GR
■ FR116C45RD
■ FR116C45OR



11 cm - 6.5 cm - 37 cl
4.35" - 2.55" - 12.50 oz

■ FR116C37GR
■ FR116C37RD
■ FR116C37OR

12



■ Green
■ Red
■ Orange