



# DISPENSE-RITE®

## STL Series



### In-Counter Cup Dispensers



Project \_\_\_\_\_

Price \_\_\_\_\_ Quantity \_\_\_\_\_

Total \_\_\_\_\_ Shipping \_\_\_\_\_

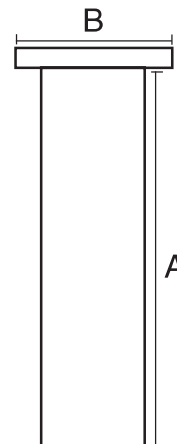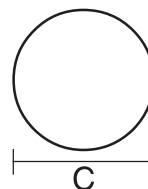

- Simple and fast adjustment mechanism
- ABS Plastic Construction
- No-jam design
- All models are NSF Listed
- Mount horizontally, vertically or in angled positions
- Attractive black ring bezel standard - Optional colored rings are available.
- Available colors: Silver Satin (stainless finish)
- Standard models ship with 2 compression springs. "F" Spring inside dispenser
- Single spring models available.

"F" Spring: Foam cups in any position  
Paper or Plastic cups in a horizontal position

"P" Spring: Paper or Plastic cups in a vertical or angled position

	ONE-SIZE-FITS-ALL	ONE-SIZE-FITS-ALL	ONE-SIZE-FITS-ALL
Reference	STL-2	STL-2S	STL-2L
Range of Adjustability	3-1/8" - 4-1/2" 79 - 114mm	3-1/8" - 4-1/2" 79 - 114mm	3-1/8" to 4-1/2" 79 to 114mm
A Under Counter Length	22" 559mm	17" 432mm	28" 711mm
B Ring Bezel Diameter	7-1/8" 181mm	7-1/8" 181mm	7-1/8" 181mm
C Tube Diameter	5" 127mm	5" 127mm	5" 127mm
D Mounting Collar Cut Out	5-1/4" 134mm	5-1/4" 134mm	5-1/4" 134mm
	NSF	NSF	NSF

#### Installation Instructions

1. Cut hole for mounting collar. (Row D from chart above)
2. Insert mounting collar with the "UP" arrow to the top for horizontal or angled mounting and to the rear for vertical mounting.
3. Drill four 9/64" (4mm) holes and fasten mounting collar with supplied screws.
4. Replace cover ring and rotate clockwise to secure to dispenser.

#### Adjustment Instructions

1. Rotate cover ring clockwise and remove from dispenser.
2. Push down on the three tabs and slide adjustment clips outward to open the dispenser to its largest opening.
3. Insert a full sleeve of cups, rim first into the mouth of the dispenser.
4. Slide all three adjustment clips inward equally to adjust for cup size.
5. Check the dispensing action. Cups should be dispensed one at a time. If more than open cup is being dispensed at a time move adjustment clips inward. If cups are difficult to dispense move adjustment clips outward.
6. Replace cover ring and rotate clockwise to secure to dispenser.