


Professional slicers

VERTICALE EVO

350-370-385

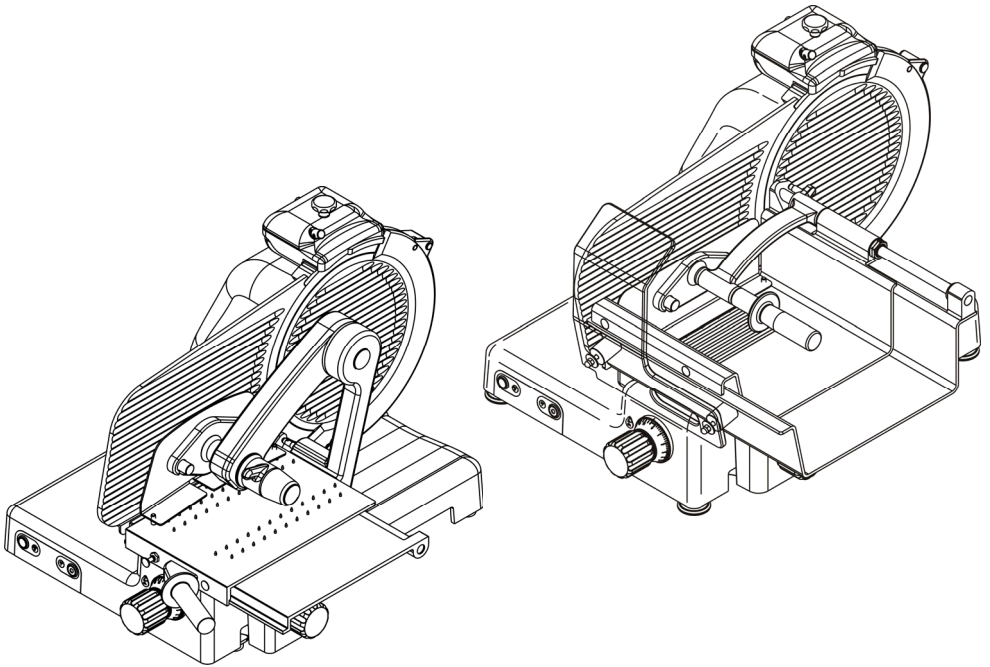

Ed. 01/2020 - ver. 003

Operating and maintenance manual

INTRODUCTION

- This manual has been re-presented to provide the **Client with all the information** on the machine and its safety regulations, and also the use and maintenance instructions which permit using the machine in the best way and maintaining its efficiency throughout time.
- This manual must be kept in its entirety until the machine is disposed of.
- This manual should be given to personnel in charge of the use and periodic maintenance of the machine.

INDEX OF CHAPTERS

CHAP. 1 - RECEIVING THE MACHINE	page 4
1.1 - PACKAGE	
1.2 - CHECKING THE PACKAGE UPON DELIVERY	
CHAP. 2 - INSTALLATION	page 6
2.1 - UNPACKING	
2.2 - POSITIONING	
2.3 - ELECTRICAL CONNECTION	
2.3.1 - Slicer with single-phase motor	
2.3.2 - Slicer with 400 V. three-phase motor	
2.3.3 - Blade rotation direction	
2.3.4 - Slicer with 230 V. three-phase motor	
2.3.5 - Electrical connection modification	
2.4 - PRELIMINARY CHECK	
2.4.1 - Cleaning and maintenance of the controls	
CHAP. 3 - INFORMATION ON THE MACHINE	page 10
3.1 - GENERAL PRECAUTIONS	
CHAP. 4 - GETTING TO KNOW THE SLICER	page 12
4.1 - CONSTRUCTION FEATURES	
4.2 - SAFETY DEVICES INSTALLED ON THE MACHINE	
4.2.1 - Mechanical safety	
4.2.2 - Electrical safety	
4.3 - DESCRIPTION OF THE MACHINE	
4.4 - OVERALL DIMENSIONS, WEIGHT, FEATURES....	
CHAP. 5 - MACHINE USE	page 17
5.1 - OPERATIONAL CHECK	
5.2 - LOADING AND CUTTING THE PRODUCT	
5.3 - SHARPENING THE BLADE	
CHAP. 6 - ROUTINE CLEANING	page 20
6.1 - GENERALITIES	
6.2 - CLEANING THE MACHINE	
6.2.1 - Cleaning the goods holder plate	
6.2.2 - Cleaning the blade, the bladeguard and the ring	
6.2.3 - Cleaning the greaseguard	
6.2.4 - Cleaning the sliceguard	

- 6.2.5 - *Cleaning the sharpener*
- 6.3 - *SLIDE GUIDES LUBRICATION*

CHAP. 7 - MAINTENANCE

page 22

- 7.1 - *GENERALITIES*
- 7.2 - *BELT*
- 7.3 - *FEET*
- 7.4 - *FEEDING CABLE*
- 7.5 - *BLADE*
- 7.6 - *GRINDERS*
- 7.7 - *SLIDE GUIDES LUBRICATION*
- 7.8 - *PUSH-BUTTON PANEL*

CHAP. 8 - DISMANTLING

page 23

- 8.1 - *PUTTING OUT OF SERVICE*
- 8.2 - *WEEE Waste of Electric and Electronic Equipment*

CHAP. 9 - ELECTRICAL DIAGRAM

page 24

- 9.1 - *115 V. - SINGLE-PHASE 230 V. - THREE-PHASE 230 V.
- THREE-PHASE 400 V.*

CHAP. 1 - RECEIVING THE MACHINE

1.1 - PACKAGE

The slicer is shipped in a package which consists of (Fig. n°1): cardboard box, wooden pallets and protective nylon. They should be disposed of separately and according to the norms in force in the country of installation.

	Dimensions AxBxC (mm)	Gross weight (Kg)
V 350 VCS	870x840x830	71
V 350 BS2/BS3	870x840x830	73
V 370 VCS	870x840x830	72
V 370 BS2/BS3	870x840x830	74
V 385 VCS	870x840x830	74
V 385 BS2/BS3	870x840x830	75

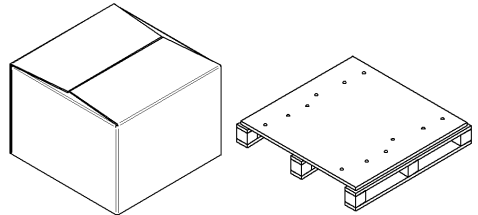


Fig. n°1

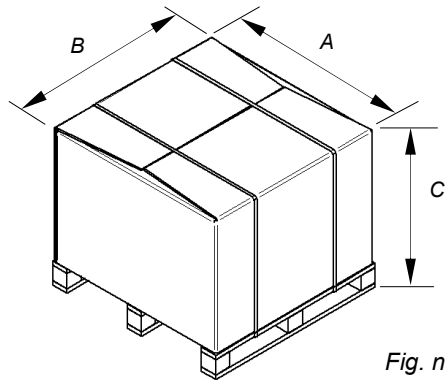


Fig. n°2



WARNING!

Do not place more than one of the same package on top (Fig. n°3).

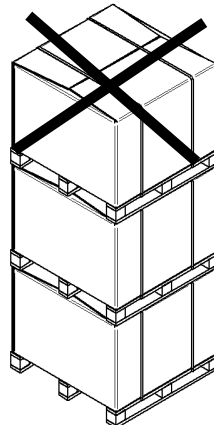


Fig. n°3



Do not expose the package to humidity or rain (Fig. n°4).

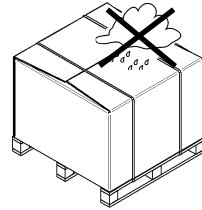


Fig. n°4



Heavy package. Do not lift manually unless with help of at least three people (Fig. n°5).

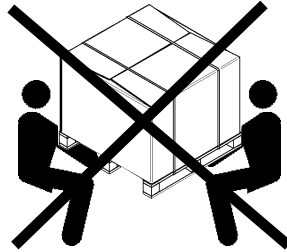


Fig. n°5



Move the package only by electrical trolleys or manually, equipped with lifting straps (Fig. n°6).

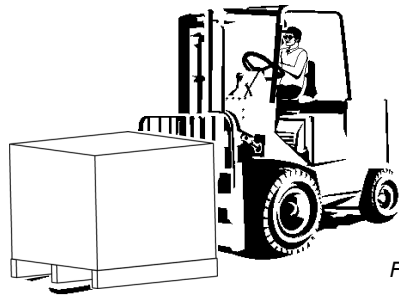


Fig. n°6



Since the center of gravity is not in the middle of the package, moving it suspended by chords or similar systems is not advisable (Fig. n°7).

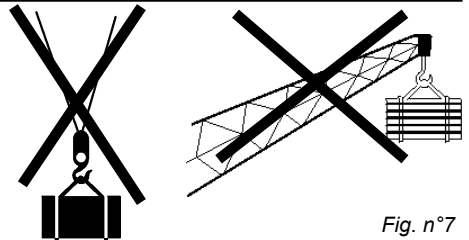


Fig. n°7

1.2 - CHECKING THE PACKAGE UPON DELIVERY

When the package is received, if there is no external damage proceed to opening it, making sure that all material is inside. If the package upon delivery shows signs of tampering (Fig. n°8), impact or fall, it is necessary to present the damage to the carrier, and within 3 days of the delivery date, indicated on

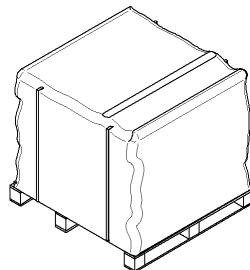


Fig. n°8

the documents, make a precise report on the damage to the machine. Do **not overturn the package!!** When transporting it make sure that it is firmly held by the four corners (keeping it parallel to the floor).

CHAP. 2 - INSTALLATION

WARNING!

All operations must be carried out by specialized personnel (Fig. n°9).



Fig. n°9

2.1 - UNPACKING

Remove the straps from the package (Fig. n°10) and lift the cardboard (h).

The package should be:

- the machine on the pallet (Fig. n°11 detail a);
- blade extractor optional (Fig. n°11 detail b);
- 4 feet (Fig. n°11 detail c);
- Case, if present (Fig. n°11 detail d).

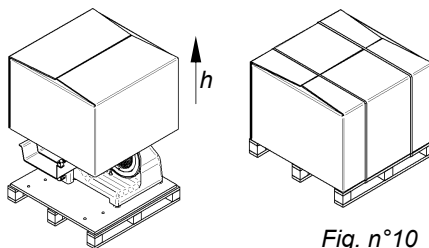


Fig. n°10

Check inside the suitcase if it present, find the following components:

(Fig. n°11):

1. Instruction manual (detail 1) ;
2. **CE** compliance certificate (detail 2);
3. Audio-visual cd;
4. Liquid detergent with sprayer;
5. Oil tube;
6. Sharpening and burring grinders;
7. Socket wrench to remove grinders;
8. Grinders brush;
9. Large and small screwdrivers.
10. Pliers.

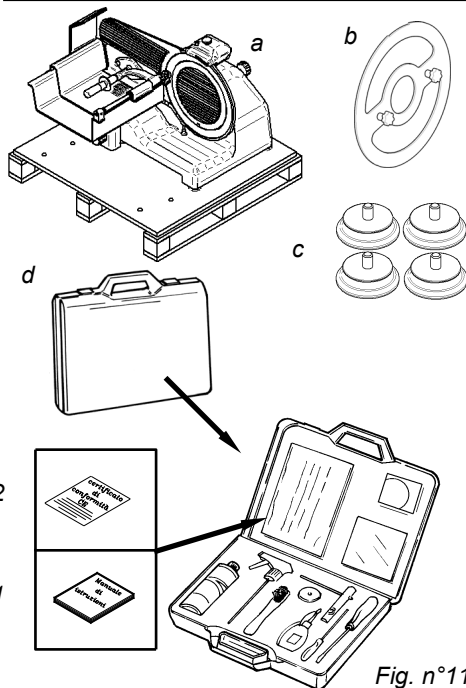


Fig. n°11

2.2 - POSITIONING

Position the pallet, with the slicer, on a flat surface and take off (a) the cap from the slicer (Fig. n°12).

At this point turn the machine on its side (Fig. n°13) and unscrew, with the proper wrench provided, the 4 nuts which fasten the slicer. Remove the 4 washers and unscrew the 4 fastening tie rods on the wooden pallet. Take off the pallet and fasten the 4 feet provided. Finally, put the cap in its place.

Position the slicer in the predestined place.

The dimensions indicated in Tab. 1-2-3 (according to the model) must be kept in mind for the plane where the slicer will be installed, therefore it must be wide enough, well-levelled, dry, smooth, robust, stable about 80 cm high off the ground and at least 20 cm from walls, objects, shelves, etc. (Fig. n°14) in respect to the space necessary for its use and safeguarding. Furthermore the machine must be placed in an environment with a maximum humidity of 75%, not salty and with a temperature between +5°C and +35°C; in any case in environments which do not lead to deviations of the above.

Make sure the graduated hand grip is in position "0".

Check the alignment of the blade-plane thickness gauge by running a finger (Fig. n°16) from the blade towards the thickness gauge plane (never in the opposite direction). Unscrew and screw the feet on the operator's side until the correct alignment is found (Fig. n°17).

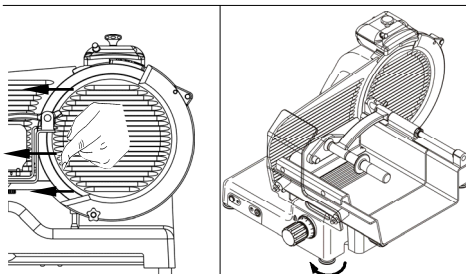
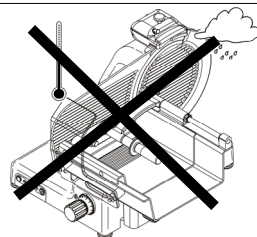
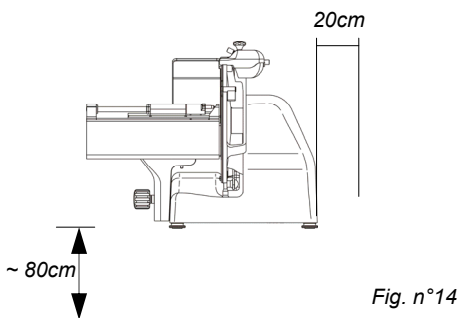
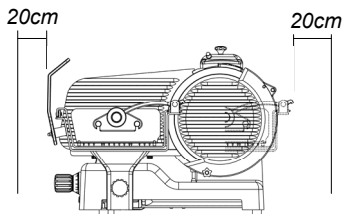
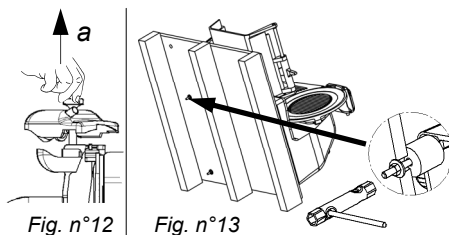



Fig. n°16

Fig. n°17

2.3 - ELECTRICAL CONNECTION

Check that the data reported on the technical-part number plate (Fig. n°18), in the delivery documents, correspond in the right order; contact the supplier for clarification if they do not.

At this point make sure that the system is standard and that the cable and grounding system perfectly operate.

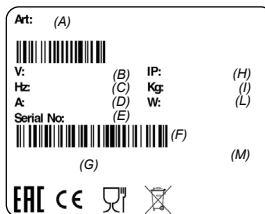

LEGEND

(A) = Product code and name
(B) = Power supply
(C) = Motor frequency
(D) = Amperage
(E) = Serial number
(F) = Barcode
(G) = Manufacturer
(H) = International Protection
(I) = Weight
(L) = Power
(M) = Origin

Fig. n°18

2.3.1 - Slicer with single-phase motor

The slicer is equipped with a feeding cable with a cross section area of 3x1mm²; length \cong 1.5m and a "SHUKO" plug. Connect the 230 V. - 50 Hz slicer, interposing a magnetothermic differential switch of 10A, $\Delta I = 0.03A$.

2.3.2 - Slicer with 400 V. three-phase motor

The slicer is equipped with a feeding cable with a cross section area of 5x1mm², length \cong 1.5m and a red 15A 3F + T CEI plug. Connect the slicer to the 400 V. - 50Hz three-phase supply mains, interposing a magnetothermic differential switch of 10 A, $\Delta I = 0.03A$.

2.3.3 - Blade rotation direction

Check the direction of the blade rotation with a pulse of the "I" push-button (ON), immediately followed by the "0" push-button OFF.

The direction of the blade rotation must be counter-clockwise when looking at the slicer from the bladeguard side (Fig. n°19). In the case that the rotation direction is not exact, invert (Fig. n°20) the position of two of the three phase wires (black, gray or brown) in the plug.

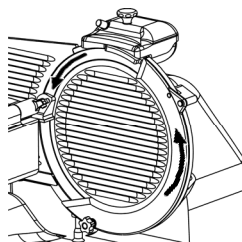


Fig. n°19

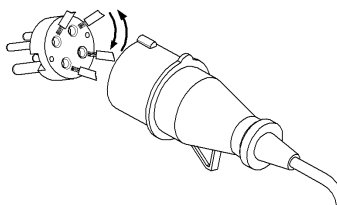


Fig. n°20

2.3.4 - Slicer with 230 V. three-phase motor

The slicer is equipped with a feeding cable with a section area of 5x1mm²; length \cong 1.5m and a blue 15A 3F + T CEI plug.

Connect the slicer 230 V. - 50 Hz three-phase supply mains, interposing a magnetothermic differential switch of 10A, $\Delta I = 0.03A$.

Check that the direction of the blade rotation is counter-clockwise looking at the slicer from the side of the bladeguard. If not proceed as in **2.3.3**.

2.3.5 - Electrical connection modification


Unless otherwise specified, the slicers are equipped with 400 V. three-phase connection. To modify the connection carefully follow these instructions:

- remove the plug from the electric network;
- turn the slicer on the side opposite the trolley;
- take off the yellow cover from the electrical box;
- remove the motor cables from the electronic card;
- connect wires from the motor that have the same color (white-white, blue-blue, etc.);
- reconnect them to the electronic card;
- check the positioning of the feed selection plugs on the electronic card (Fig. n°21);
- close the box, reposition the slicer and proceed as in **paragraph 2.3.3.**

2.4 - PRELIMINARY CHECK

Before testing make sure the goods holder plate is well-blocked, after which test functioning with the following procedure:

- Push the "ON" push-button and the "OFF" push-button Fig. n°22;
- Check if the machine does not start automatically by removing the plug and reinserting it while the machine is running.

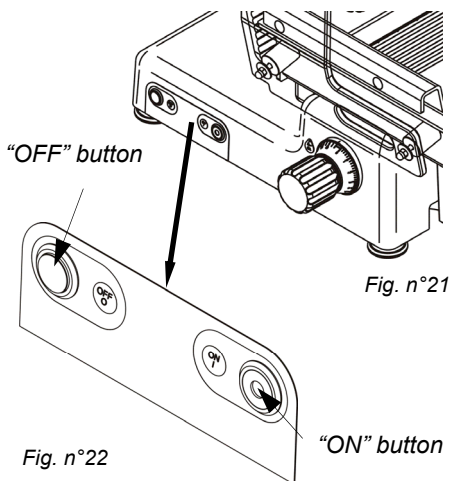

2.4.1 - Cleaning and maintenance of the controls

The buttons fitted on this machine are of an extremely high quality standard and can be washed with water as they have a class IP67 protection rating.

Should they get clogged or jammed after being touched with dirty hands, do not use knives or sharp tools to try to release them.

WARNING! Pull out the power plug before every cleaning operation, transfer the machine to an adequate location and spray the buttons with hot water (avoid high-pressure jets).

Be **CAREFUL** not to let any water penetrate into the other parts of the machine, for reasons of electrical safety and to preserve the machine's working life.

This operation should soften the grease and dirt, releasing the button.

Once the buttons have been released, press them several times (with the plug detached) in order to expel any remaining dirt inside them. If the operation fails from the beginning, repeat the washing operation several times until the buttons have flushed out all the dirt.

Alternatively, prevent use of the machine and contact the Service Centre to replace the buttons.

Buttons that have been scratched or tampered with using blunt tools shall not be covered by the warranty.

CHAP. 3 - INFORMATION ON THE MACHINE

3.1 - GENERAL PRECAUTIONS

The general precautions, even though they appear obvious, are fundamental for the installation, use, maintenance and possible inconveniences with their respective solutions.

- The slicer is designed for cutting fresh, seasoned and cooked meats, cured meats and vegetables, non-frozen and boneless, up to maximum 20°C (Fig. 23). Any other use must be regarded as improper and thus dangerous.

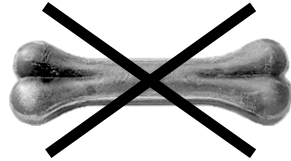


Fig. n°23

- The Manufacturer is not responsible in the following cases:

- ⇒ **the machine is tampered with by unauthorized personnel;**
- ⇒ **components are substituted with unoriginal parts;**
- ⇒ **the instructions in this manual are not followed carefully;**
- ⇒ **the surfaces of the machine are treated with inappropriate products.**



WARNING!



Fig. n°24

- Keep this manual in a safe place for future information or consultation (Fig. n°24).

- *The slicer must only be used by trained personnel who know the safety norms contained in this manual perfectly.*

- *In the case of an alteration in personnel, give time for training.*

- *Do not allow the slicer to be used by children or by untrained people (Fig. n°25).*

- *Before carrying out any cleaning or maintenance operation, disconnect the machine plug from the electrical network.*

- *When carrying out routine maintenance or cleaning of the slicer (and therefore the guards are removed), carefully evaluate the residual risks .*

- *During maintenance or cleaning stay concentrated on the operations.*

- *Do not use corrosive or flammable substances to clean the slicer (Fig. n°26); **only use the product provided.***

- *To clean the slicer carefully follow the instructions in the chapter: "Routine cleaning".*

- *Do not wash the slicer in a dishwasher (Fig. n° 27) or with water jets, do not immerse it in water or in other liquids.*

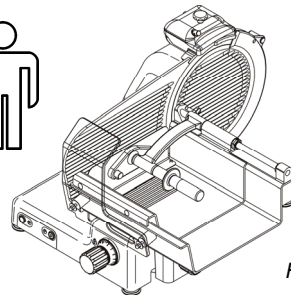


Fig. n°25



WARNING!

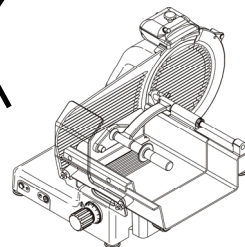


Fig. n°26

- Do not leave the slicer exposed to damaging agents: sun, rain, sprays, humidity, ice (Fig. n°28).
- Do not pull the slicer or the feeding cable (Fig. n°29) to unplug it.
- Regularly check the state of the feeding cable; a worn out cable or in any case not intact represents a serious electrical danger.
- If the machine remains unused for long periods of time, before using it again have it checked by a "Service Center".
- If the slicer should show signs of malfunctioning it is advisable to turn it off and to not use it, to not directly intervene for repairs, and to contact the "Service Center", shown on the back of this manual.
- Do not leave the slicer uselessly plugged in. Unplug the machine when it is not being used.
- Even if safety devices are installed on dangerous points of the machine, avoid placing hands near the blade and other moving parts.
- **Never cut the product, by now finished, without the aid of the goods pressing arm.**
- **Do not assume positions that bring body parts in direct contact with the blade.**

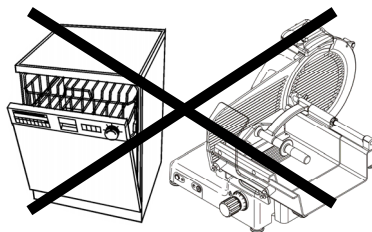


Fig. n°27

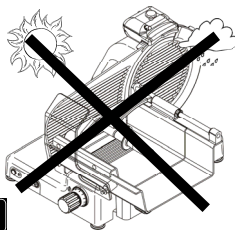


Fig. n°28

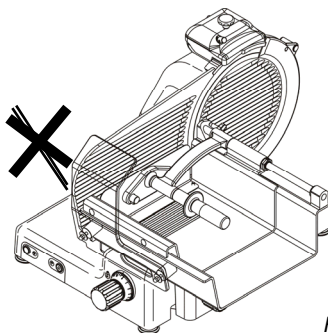


Fig. n°29

CHAP. 4 - GETTING TO KNOW THE SLICER


4.1 - CONSTRUCTION FEATURES

The slicer is made of an anodized aluminum alloy (AlMg3). It guarantees contact with food-stuffs (hygienic) and is resistant to acids and salts apart being highly resistant to oxidation.

The blade is in 100 Cr6 rectified, chromium-plated and hardened steel assuring a precise and net cut of the product even after being sharpened.

Most of the other components present are made of:

- ABS plastic suitable for contact with foodstuffs
- AISI steel
- aluminium.

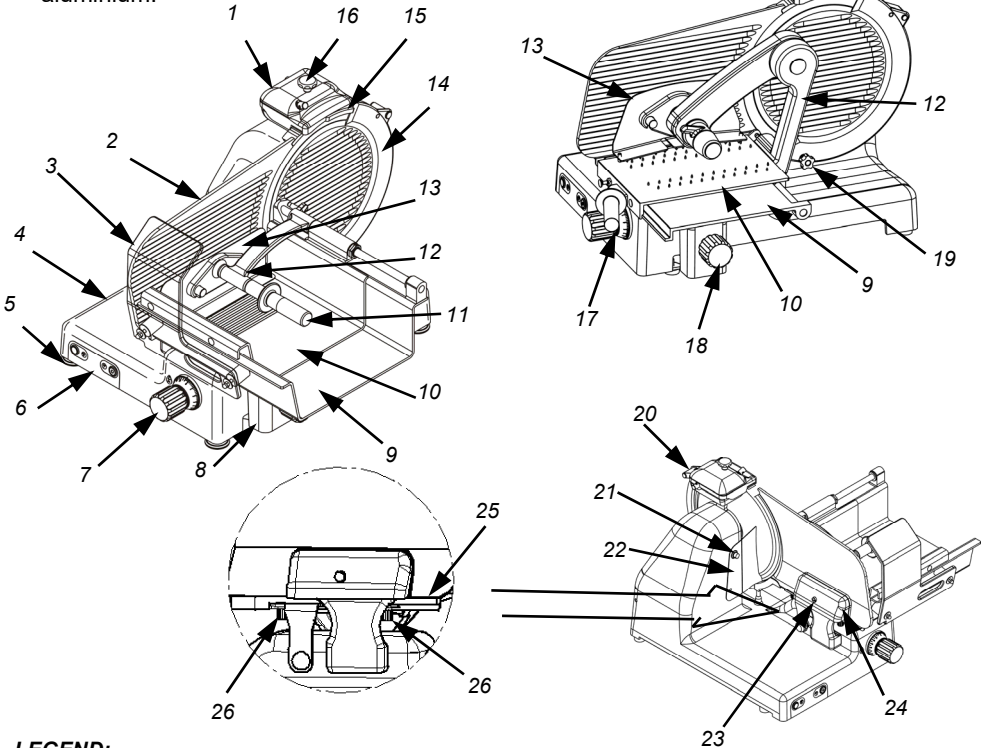

LEGEND:

- | | | | |
|----|-----------------------|----|-------------------------------|
| 1 | Sharpener | 14 | Blade cover |
| 2 | Thickness gauge plate | 15 | Blade protection ring |
| 3 | Handguard | 16 | Sharpener knob |
| 4 | Base | 17 | Plate knob |
| 5 | Foot | 18 | Stem knob |
| 6 | Push-button panel | 19 | Blade guard knob |
| 7 | Graduated handgrip | 20 | Blade guard locking knob |
| 8 | Stem | 21 | Slice guard knob |
| 9 | Product plate | 22 | Slice guard |
| 10 | Sliding plate | 23 | Support cover knob |
| 11 | Product grip knob | 24 | Thickness plate support cover |
| 12 | Product grip | 25 | Greaseguard |
| 13 | Product grip arm | 26 | Greaseguard hand grip |

Fig. n°30

4.2 - SAFETY DEVICES INSTALLED ON THE MACHINE

4.2.1 - Mechanical safety

As far as mechanical safety is concerned, the slicer described in this manual responds to:

- CEE 2006/42 machine directives.

Safety is made possible by the:

(Fig. n°31-32)

- Bladeguard (ref. n°1);
- Ring (ref. n°2);
- Cap (ref. n°3);
- goods presser (ref. n°4);
- goods presser hand grip (ref. n°5);
- Handguard (ref. n°6);
- Trolley transported only when thick-ness gauge plane is at "0", at the end of the run and towards operator side. operatore.

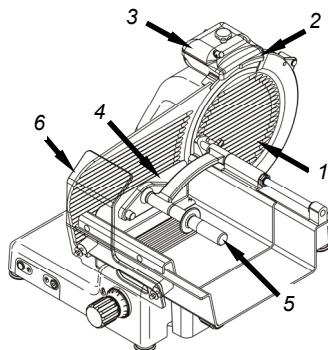


Fig. n°31

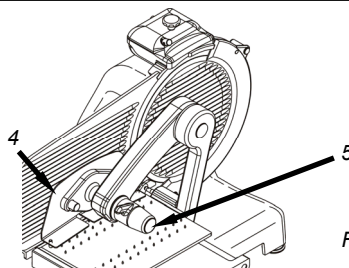


Fig. n°32

4.2.2 - Electrical safety

As far as electrical safety is concerned, the slicer described in this manual responds to:

- the 2014/35/UE low tension directive;
- the electromagnetic compatibility directive 2014/30/UE.

- A relay in the control circuit, that requires the machine to start up again in case of an accidental loss of electricity (Fig. n° 33).

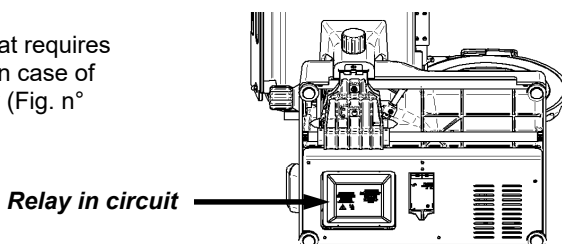


Fig. n°33

Even though the professional **CE** slicers are equipped with the standard mea-sures for electrical and mechanical protection (both while operating and during cleaning and maintenance), **RESIDUAL RISKS** which cannot be completely eliminated in any case exist, highlighted in this manual under the form of **WARNING**. They concern the danger of cutting, bruising and other caused by the blade or by other machine parts.

4.3 - DESCRIPTION OF THE MACHINE

Professional CE slicers have been designed and made by our company with the precise purpose of cutting food products (like lunch meat, meats and vegetables) and they guarantee:

- maximum safety in use, cleaning and maintenance;
- maximum hygiene, thanks to a meticulous selection of materials that come in contact with the food products, and with the elimination of the edges in the parts of the slicer that come into contact with the product, in a way that it can be easily and totally cleaned not to mention easily disassembled;
- maximum cutting precision thanks to the cam mechanism;
- all components are robust and stable;
- maximum silence thanks to the belt transmissions;
- very easy to handle.

4.4 - OVERALL DIMENSIONS, WEIGHT, FEATURES ...

BS2/BS3

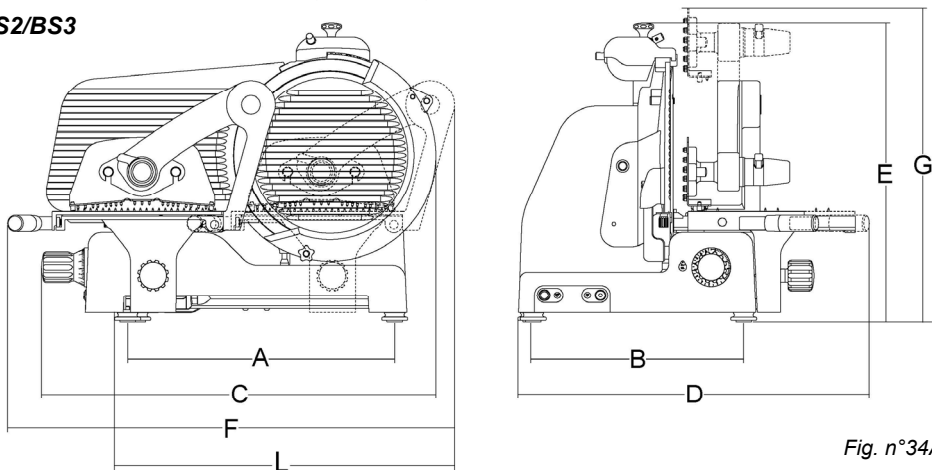


Fig. n°34A

VCS

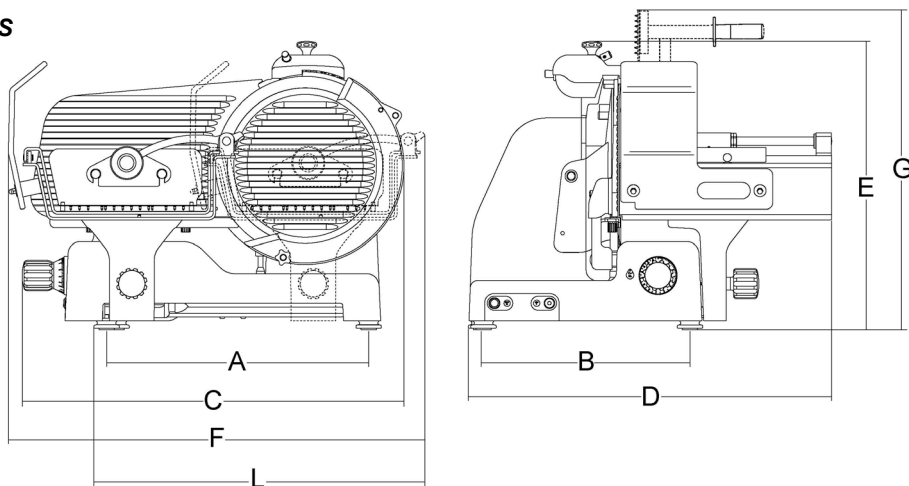


Fig. n°34B

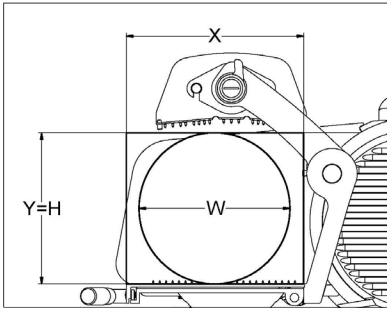
BS2/BS3

Fig. n°34C

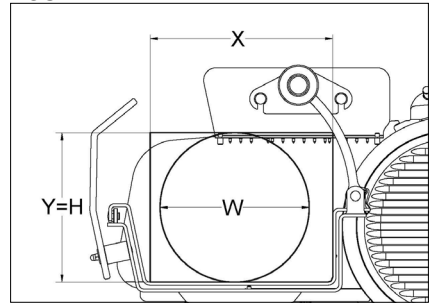
VCS

Fig. n°34D

TAB. n°1 - DIMENSION MEASUREMENTS AND TECHNICAL FEATURES

MODEL	U.m.	350 BS2	370 BS2	385 BS2
Blade diameter	mm	350	370	385
AxB	mm	515x410	515x410	515x410
CxDxE	mm	750x676x567	760x676x577	767x676x597
FxDxG	mm	887x676x635	887x676x626	887x676x626
L	mm	682	681	681
Hopper dimensions	mm	350x320	350x320	350x320
Run of carriage	mm	370	370	370
X Y H W	mm	330 250 250 250	330 267 267 267	330 281 281 281
Cut thickness	mm	25	25	25
Motor	W	380	380	380
Net weight	Kg	59	60	61
Power source	1ph 3ph	230 V. / 50 Hz 230-400 V. / 50 Hz		
Noise level	dB	≤ 60		

WARNING:

The electrical features of the machine are shown on a plate on the back of the machine.

TAB. n°2

MODEL	U.m.	350 BS3	370 BS3	385 BS3
Blade diameter	mm	350	370	385
AxB	mm	515x410	515x410	515x410
CxDxE	mm	750x676x567	750x676x577	767x676x597
FxDxG	mm	887x676x650	887x676x641	887x676x641
L	mm	711	711	711
Hopper dimensions	mm	350x320	350x320	350x320
Run of carriage	mm	370	370	370
X Y H W	mm	330 253 253 253	330 270 270 270	330 290 290 290
Cut thickness	mm	25	25	25
Motor	W	380	380	380
Net weight	Kg	59	60	61
Power source	1ph 3ph	230 V. / 50 Hz 230-400 V. / 50 Hz		
Noise level	dB	≤ 60		

TAB. n°3

MODEL	U.m.	350 VCS	370 VCS	385 VCS
Blade diameter	mm	350	370	385
AxB	mm	515x410	515x410	515x410
CxDxE	mm	750x742x567	760x742x577	767x742x597
FxDxG	mm	832x742x595	832x742x586	832x742x600
L	mm	665	665	665
Hopper dimensions	mm	430x300	430x300	430x300
Run of carriage	mm	370	370	370
X Y H W	mm	294 240 240 240	294 258 258 258	294 272 272 272
Cut thickness	mm	25	25	25
Motor	W	380	380	380
Net weight	Kg	60	61	62
Power source	1ph 3ph	230 V. / 50 Hz 230-400 V. / 50 Hz		
Noise level	dB	≤ 60		

CHAP. 5 - MACHINE USE

5.1 - OPERATIONAL CHECK

Before every use, please follow these instructions:

- check that installation has been carried out correctly as in **chapter 2**;
- make sure the hand guard has been installed correctly and tightened
- check that the hopper is well fastened with the lock hand grip (Fig. n°35 - ref.1);

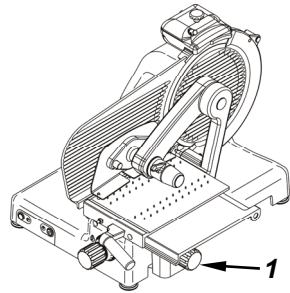


Fig. n°35

- check the sliding of the hopper and that it is free of obstacles on the work counter for all of its run (Fig. n°37 - ref.a);
- check that the goods pressing arm easily rises and lowers so that it is not impeded in all its movement (Fig. n°36 - ref.b);

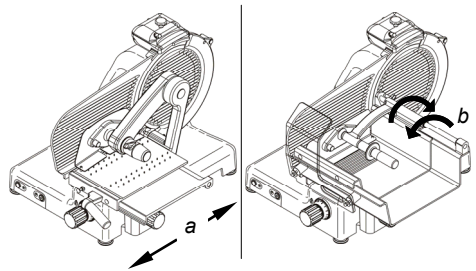


Fig. n°36

- check the opening of the thickness gauge plane by making the numbered hand grip turn clockwise and counterclockwise (Fig. n°37 - ref.c);

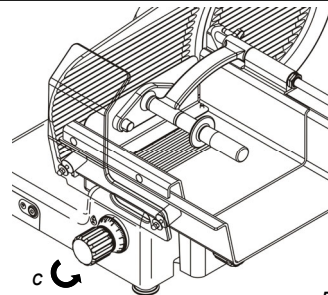


Fig. n°37

- check that the sharpener is well fastened to the machine and that it is easy to extract and free of obstacles (Fig. n°38 - ref.d).

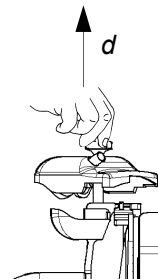


Fig. n°38

5.2 - LOADING AND CUTTING THE PRODUCT

WARNING: The goods to be cut are loaded on the hopper only with the graduated hand grip at "0" and the motor stopped, being careful with the blade and the points.

Adhere to the following procedure:

1. Lift the goods presser, load the goods on the hopper, bringing it close to the thickness gauge, block it with the proper toothed arm;
2. regulate the desired thickness of the cut with the graduated hand grip;
3. assume a correct position to avoid accident: place the right hand on the goods presser hand grip and, then the left hand next to the slice guard to take the cut product (**without touching the blade**); the body must be perpendicular to the work plane (Fig. n°39).

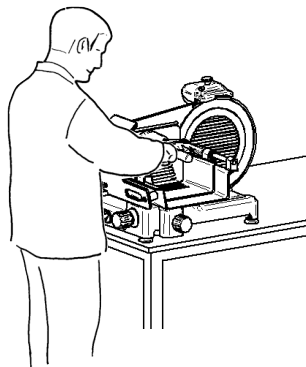


Fig. n°39

WARNING: Do not assume positions which bring body parts in direct contact with the blade (ex. Fig. n°40);

4. then push the "ON" push-button;
5. push the carriage (hopper + goods presser arm + stem) gently towards the blade, without applying excessive pressure on the goods with the goods presser arm. The goods will easily enter the blade, and the slice guided by the proper slice guard will detach and fall on the plane (Fig. n°41);
6. avoid running the slicer when empty;
7. at the end of the cutting operation, stop the machine by putting the switch in the "OFF" position and put the graduated hand grip at "0";
8. after slicing, do not leave the food lying on the product. Store the food that has just been sliced in a place suitable for its preservation.
9. Carry out sharpening the blade as soon as the cut product has a threaded or rough surface, therefore the cutting effort increases (**chapter 5.3**).



Fig. n°40

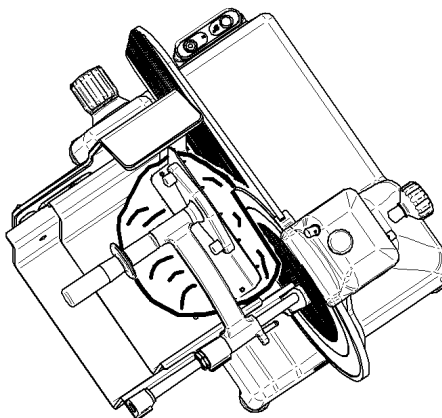


Fig. n°41

5.3 - SHARPENING THE BLADE

WARNING: Before starting to sharpen the blade, pay attention to **RESIDUAL RISKS** (chapter 4.2.2) concerning the dangers of cutting without having followed the instructions listed below.

To sharpen the blade, which needs to be done periodically as soon a decrease in cutting is noticed, the following directions must be adhered to:

1. disinsert the plug from the outlet and carefully clean the blade with denatured alcohol so it is degreased;
2. lift (a) the sharpener cap (1) and turn it 180° (b Fig. n°42);

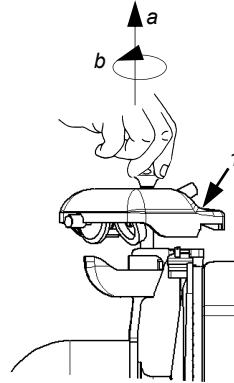


Fig. n°42

3. let it go in a way that the cap (c) fits on the locator pins (d Fig. n°43);
4. check also that the blade stays between the two grinders;

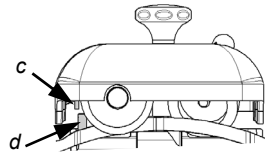


Fig. n°43

5. insert the pin and start the machine, by pressing the "ON" push-button;
6. press the push-button (2 Fig.n°44), let the blade rotate in contact with the grinder for about 30/40 sec. so that a slight burr forms on the blade edge;
7. press the 2 push-buttons (2 and 3) contemporaneously for 1/2 sec. and release them in the same instant (Fig. n° 45);
8. after having completed the sharpening it is advisable to clean the grinders and the blade (chapter 6.2.3);
9. once the operation is finished, replace the sharpening device in its original position, doing the procedure in reverse.

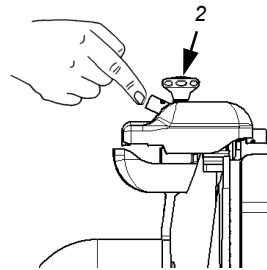


Fig. n°44

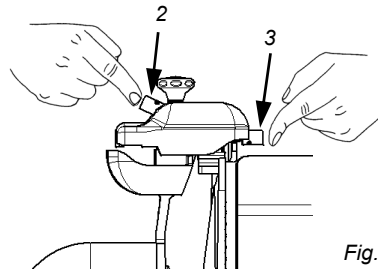


Fig. n°45

N.B.: Do not carry on the deburring operation for more than 1/2 sec. to avoid the damaging bending of the blade

CHAP. 6 - ROUTINE CLEANING

6.1 - GENERALITIES

- Cleaning the machine must be carried out at least once a day or, if necessary, more frequently .
- All the parts of the slicer that come in direct or indirect contact with the food to be cut must be scrupulously cleaned.
- The slicer must not be cleaned with water cleaning machines or water jets, but with the product provided and/or with neutral detergents (pH 7). **The use of any other detergent is prohibited.** Utensils, brushes and whatever else could damage the machine surface must not be used.

Before carrying out any cleaning operation it is necessary to:

1. disconnect the plug from the electrical network to completely isolate the machine from the rest of the system;
2. Bring the graduated hand grip which regulates the thickness gauge to "0".

WARNING: Be careful of residual risks from sharp and/or pointed parts.

6.2 - CLEANING THE MACHINE

6.2.1 - Cleaning the goods holder plate

The trolley (plate + arm + stem) is easily transportable:

- bring the graduated hand grip to "0" (1 Fig. n°46);
- bring the trolley (2) to the end of its run (a) from the controls side; completely unscrew the plate lock hand grip (3), pull the trolley towards the operator, lift the trolley up (b Fig. n°46);
- having taken off the trolley, the goods holder plate can be carefully cleaned with warm water, the equipped detergent or neutral detergent (pH 7).

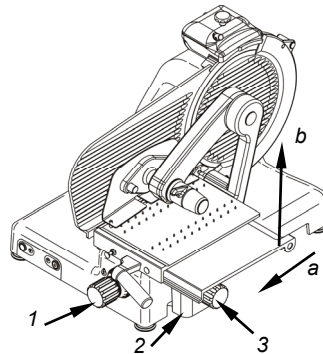


Fig. n°46



Fig. n°47

6.2.2 - Cleaning the blade, the bladeguard and the ring

WARNING: a pair of metallic gloves must be worn while cleaning the blade (1) (Fig. n°48) and a damp cloth must be used.

Turn the blade guard locking knob (3) and remove the blade guard (2) from its seat.

(Fig. n°48). At this point it is possible to clean the blade (Fig. n°49).

To clean the surfaces opposite the blade and the ring, the blade must be

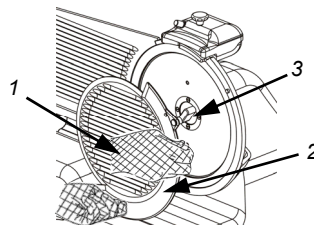


Fig. n°48

extracted in the following way:

1. unhook the bladeguard (Fig. n°48);
2. take out the sharpening device (Fig. n° 50 rif.a);
3. unscrew the three or four screws (Fig. n° 50 ref.f), depending on the model, which fasten the blade;
4. rest the jig (b) on the blade, so that the split in the jig fits in the ring (Fig. n°50 ref.c);
5. match the axes of the two holes (Fig. n° 50 ref.d) on the blade with the two knobs (Fig. n°50 rif.e) on the jig, simply making the blade turn to the desired position;
6. screw the two knobs (e) without excessively tightening them.

N.B. The bladeguard must be cleaned with warm water, the equipped detergent or with neutral detergent (pH 7).

6.2.3 - cleaning the greaseguard

The removal of the greaseguard is possible only if the graduated hand grip is in the "0" position and the trolley has ben removed.

The greaseguard can be easily transported (Fig. n°51):

- loosen the two knobs (1);
- take out the greaseguard (2) by pulling in the direction of the arrow (a);
- clean the greaseguard with warm water, the equipped detergent or with neutral detergent (pH 7).

6.2.4 - Cleaning the sliceguard

(Fig. n°52)

To remove the sliceguard simply grasp the hand grip (1) and pull up so that the two pins unhook (2), and then extract the sliceguard.

At this point clean the sliceguard with warm water, the equipped detergent or with neutral detergent (pH 7).

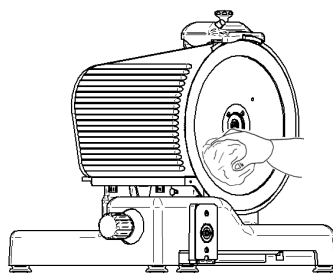


Fig. n°49

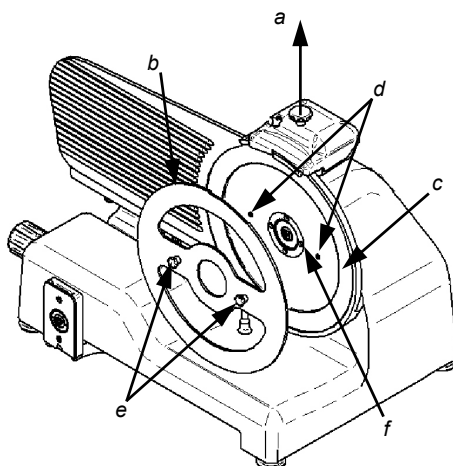


Fig. n°50

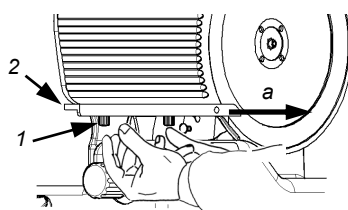


Fig. n°51

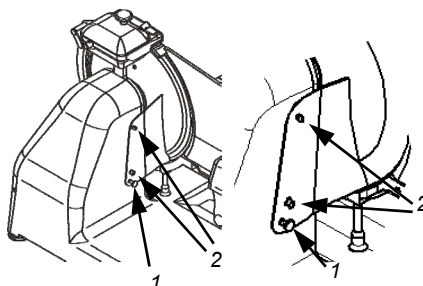


Fig. n°52

6.2.5 - Cleaning the sharpener

To clean the sharpener it is necessary to adhere to the following instructions:

1. lift (a) the cap up to the top;
2. loosen the knob (1);
3. lift (b) the cup (2) and extract it so that the knob (1) passes through the larger opening in the cup (2);
4. rub the grinders with a brush, while cleaning the other components with warm water, the equipped detergent or with neutral detergent (pH 7).

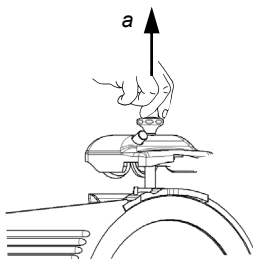


Fig. n°53

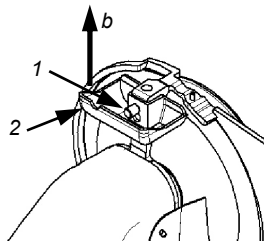


Fig. n°54

6.3 - SLIDE GUIDES LUBRICATION

The slide guides on the carriage (1-2) must be lubricated periodically with the equipped oil (a).

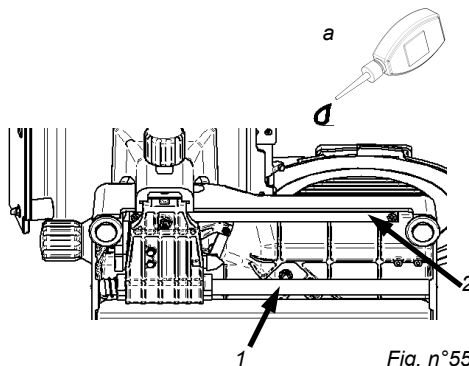


Fig. n°55

CHAP. 7 - MAINTENANCE

7.1 - GENERALITIES

Before carrying out any maintenance operations it is necessary to:

- a) disconnect the feed plug from the electrical network to completely isolate machine from the rest of the system.
- b) bring the graduated hand grip which regulates the thickness gauge to "0".

7.2 - BELT

The belt does not need to be regulated. Generally after 3/4 years it must be replaced, in this case call the "SERVICE CENTER".

7.3 - FEET

The feet could deteriorate in time and lose their elasticity, therefore decreasing the stability of the machine. Replace them by calling the "SERVICE CENTER".

7.4 - FEEDING CABLE

Periodically check the state of wear and tear of the cable and call the “SERVICE CENTER” for its replacement.

7.5 - BLADE

Check that the diameter of the blade, after many sharpenings, has not been reduced more than 10 mm. compared to the original diameter. For its replacement call the “SERVICE CENTER”.

7.6 - GRINDERS

Check that the grinders continue to have their abrasive property during the sharpening. When they are no longer abrasive they must be replaced as to not damage the blade, therefore call the “SERVICE CENTER”.

7.7 - SLIDING GUIDES LUBRICATION

Occasionally put a few drops of oil (from the tube that is provided) on the round bar that the trolley slides back and forth on, through the hole (OIL) located on the side of the graduated hand grip.

7.8 - PUSH-BUTTON PANEL

The push-button panel can be marked and/or consumed with time. In such a case call the “SERVICE CENTER” to replace it.

CHAP. 8 - DISMANTLING

8.1 - OUT OF SERVICE

If for some reason it is decided to put the machine out of service, make sure that it cannot be used by anyone: **detach or cut the electrical connections.**

8.2 - WEEE Waste of Electric and Electronic Equipment



Directive 2002/95/EC, 2002/96/EC and 2003/108/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment, and waste electrical and electronic equipment

This symbol, crossed out wheeled bin, on the product or on its packaging indicates that this product must not be disposed of with your other household waste.

Separate waste collection of this appliance is organised and managed by the manufacturer. It is the user’s responsibility to contact the manufacturer and follow the waste treatment system the manufacturer has adopted for separate waste collection.

The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

CAP. 9 - ELECTRICAL DIAGRAM

9.1 - 115 V. - 230V. SINGLE-PHASE - 230V. THREE-PHASE - 400V. THREE-PHASE

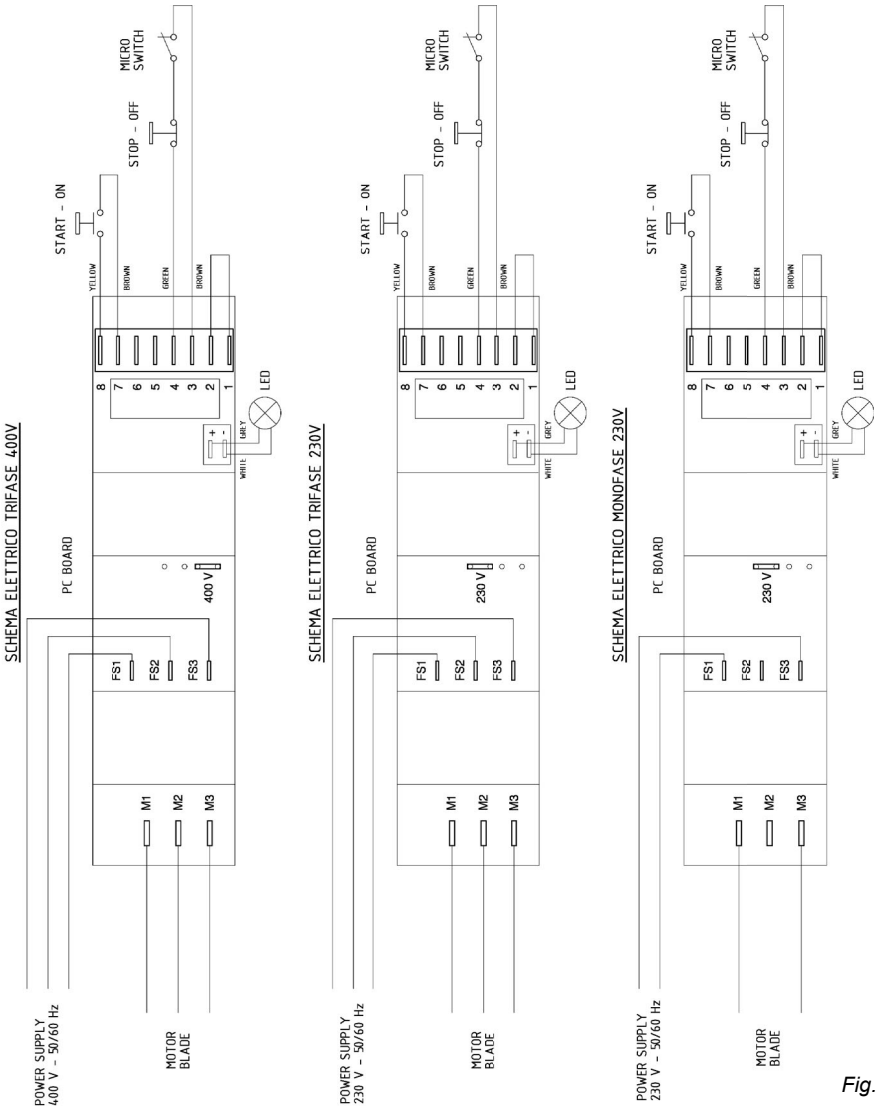


Fig. n°56

**SERVICE CENTRE
 AUTHORISED DEALER**

#