

AARCO PRODUCTS, INC. YAPHANK, NY 11980 WALL CABINET MOUNTING--ALL STYLES

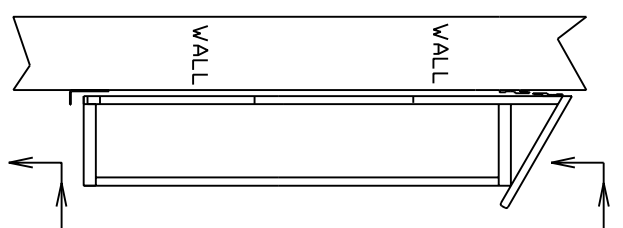


FIG. 1



FIG. 2
ATTACH Z CLIPS 1" IN FROM SIDES
AS SHOWN. DISTANCE BETWEEN CLIPS SHOULD NEVER
EXCEED 24"-USE MORE CLIPS IF NECESSARY.



FIG. 3
ATTACH Z CLIPS TO WALLS TO MATCH

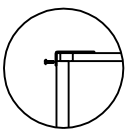


FIG. 4
ATTACH L CLIPS 1" IN FROM SIDES
AS SHOWN. DISTANCE BETWEEN CLIPS SHOULD NEVER
EXCEED 24"-USE MORE CLIPS IF NECESSARY.

FOR FLAT TOPPED BOARDS USE L BRACKETS INSTEAD OF Z

