

Mid-Century Chair & Barstool

ASSEMBLY INSTRUCTIONS



LANCASTER™
TABLE & SEATING

PARTS LIST:

A Frame



B Backrest



C Seat



HARDWARE:


D (6) Bolts*



E (5) Seat Screws



F (1) Allen Key



NOTES:


- Ensure you have all the required pieces before assembly.
- Inspect all pieces for damage before assembly. Do not assemble if any pieces are broken or damaged.
- Assembly instructions are applicable for mid-century chairs and barstools.

REQUIRED TOOLS:

- Screwdriver


STEP 1

Stand frame (A) upright, align the backrest (B) with the four holes on the top back of the chair frame. The smaller screw holes indicate the top of the backrest, ensure this is aligned with the top two holes in the frame.

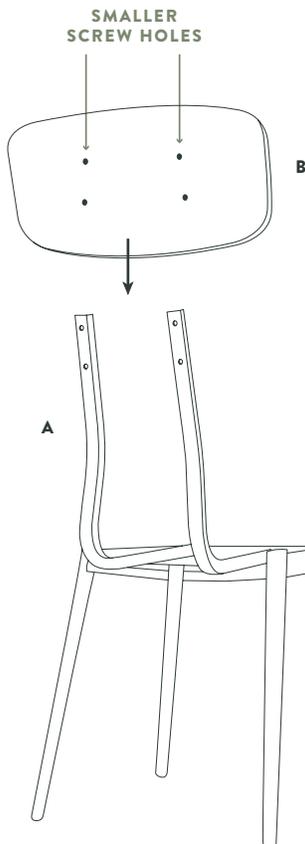


STEP 2

Secure the backrest to the frame by using 4 bolts (D) with the allen key (F) provided.

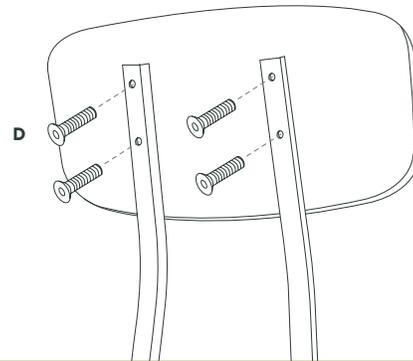

STEP 3

Place the seat (C) on a clean, elevated flat surface with the underside of the seat facing up.

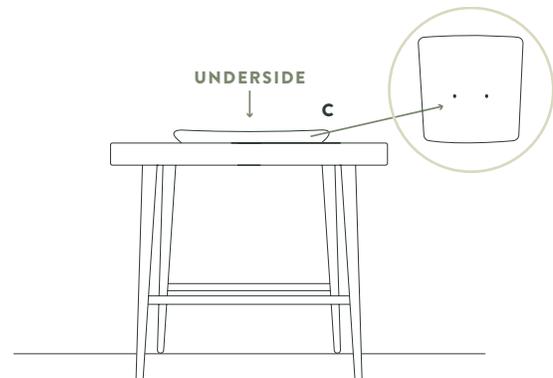

Mid-Century Chair & Barstool


ASSEMBLY INSTRUCTIONS



LANCASTER™
TABLE & SEATING


STEP 4

Flip the chair frame upside down and rest on top of the seat. The narrow end of the seat should be towards the back of the chair frame, with the wide end being at the front of the chair frame. Center the frame on top of the seat, in line with the predrilled holes in the center of the seat.

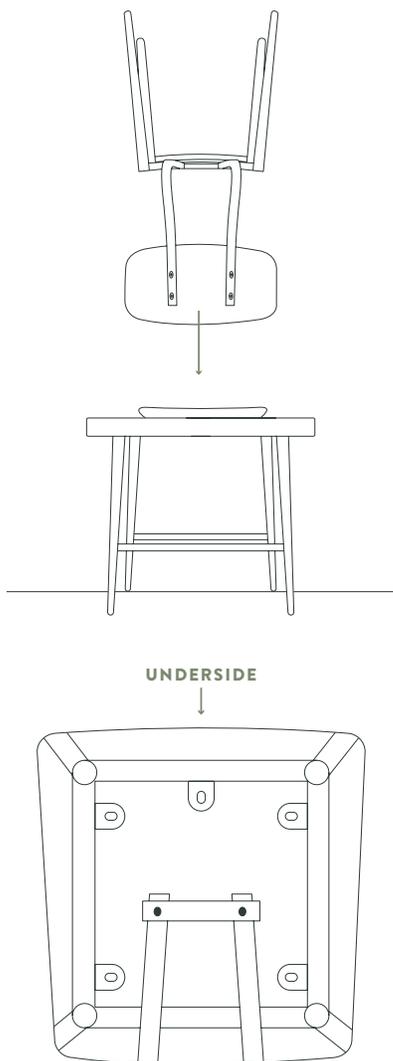


STEP 5

Insert and securely tighten 2 bolts (D) into the predrilled holes in the center of the seat with the allen key (F) provided. Ensure bolts are fully tightened.

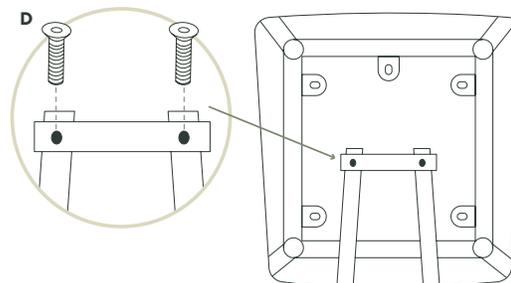

STEP 6

Using a screwdriver (not included), secure the seat to the frame by inserting the 5 seat screws (E) into the frame tabs.

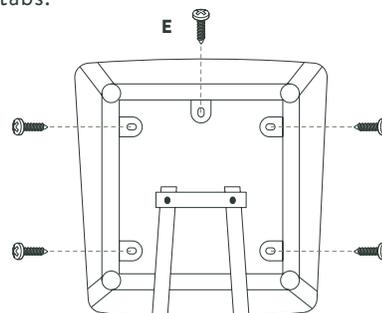

STEP 7

Ensure all screws and bolts are tightened fully. Stand chair upright for usage.



*BOLT & SCREW INFORMATION

- Wooden Back (164BKMCMHRDW)
Bolt 1/4*30 (4 pieces)
- Wooden Seat (164STMCMHRDW)
Bolt 1/4*35 (2 pieces), and Screw Q5.5*16 (5 pieces)
- Vinyl Back (164BKMCMHRDV)
Bolt 1/4*35 (4 pieces)
- Vinyl Seat (164STMCMHRDV)
Bolt 1/4*30 (2 pieces), and Screw Q5.5*16 (5 pieces)