

# INSTRUCTIONS FOR INSTALLATION

## BOBRICK ROLL PAPER TOWEL MODULE REPLACEMENT KIT 2860-53 OR 3961-52

1. Unlock & open the door of the "No Touch Roll Towel Dispenser" B-2860 or B-3961.
2. Locate and remove the two screws and lock washers located at the top back of the roll paper towel module (See Fig. 1) and the two screws and lock washers located on the bottom, outside of the cabinet, using the allen wrench provided.
3. Slide the module to the left side of cabinet, tilt the left side of the module slightly upward (approx. 1") and then pull forward to remove from cabinet. (See Fig. 2)
4. Remove the metal speed nuts from the bottom sides of the old module and place them on the new replacement module in the same position and orientation as they were on the old module. (See Figs. 3 & 4)
5. Install the new module in the reverse order as described above. Make sure that the speed nuts do not dislocate as the module is placed into the cabinet. (See Figs. 3 & 4)
6. Insert the top screws and lock washers into the threaded holes through the module slots to align the module and then insert the bottom screws and lock washers. Tighten all screws securely using the allen wrench provided.
7. Fill the roll paper towel module per the instructions on the inside of the door.
8. Close and lock the door.

Model B-2860 shown below:

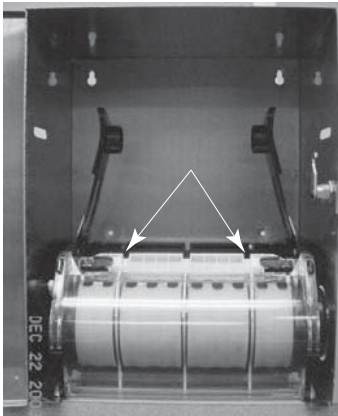


Fig. 1  
Remove Screws

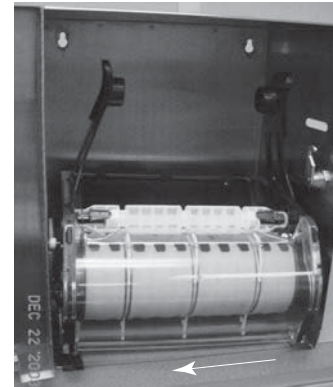


Fig. 2

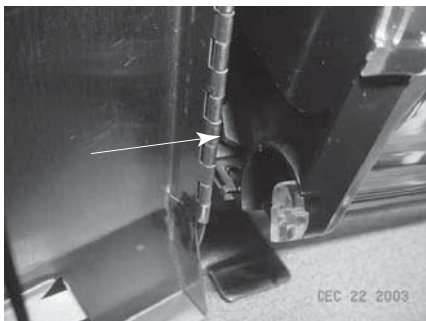


Fig. 3  
Speed Nut (Left Side of Module)

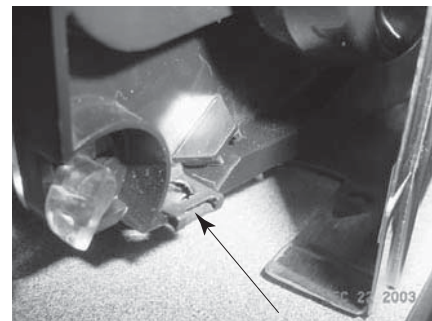


Fig. 4  
Speed Nut (Right Side of Module)

