

Read all instructions and review illustrations before assembly.

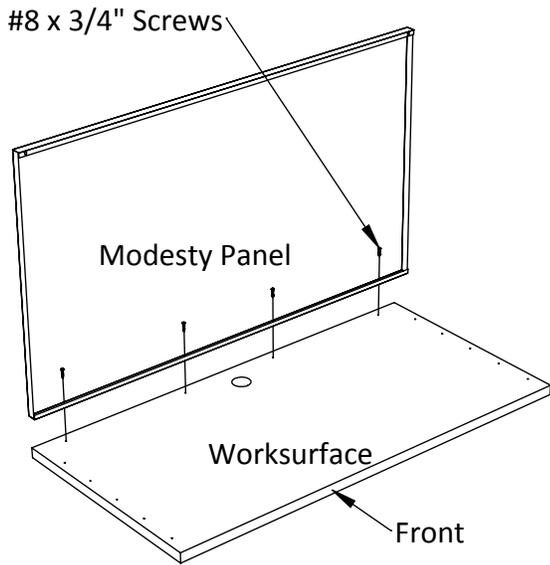


Figure 1

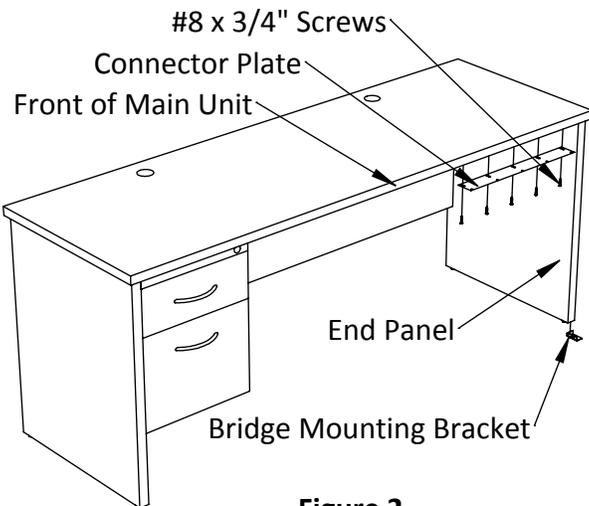


Figure 2

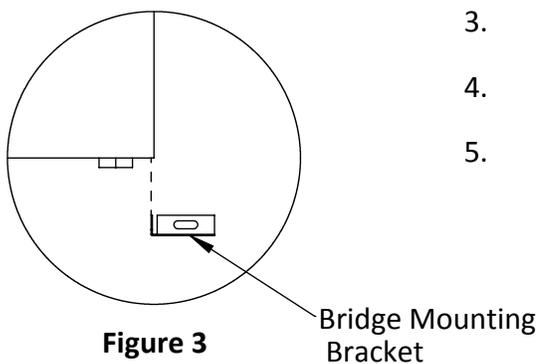


Figure 3



WARNING

This desk is heavy. Two or more people are required for assembly. Attempting to assemble this desk alone may cause injury. Take care when handling metal parts. Sharp edges may cause injury.

Tools needed for assembly:
 - Phillips Screwdriver
 - Level


Bridge Assembly:

1. Place the worksurface, upside down, on cardboard or carpeted surface to prevent the top from being scratched.
2. Remove the connector plates from the bottom of the bridge worksurface.
3. Align the modesty panel holes with the pre-drilled holes in the bottom of the worksurface. See **Figure 1**.
4. Use a phillips screwdriver to install the (4) screws through the holes in the modesty panel and into the worksurface, tighten the screws securely.

Attachment Preparation:

1. Install the connector plates, previously removed from bridge worksurface onto each main unit's underside. (desk/credenza/return). Install the connector plate so it is extending out from underneath the worksurface. See **Figure 2**.
2. Use a phillips screwdriver to install the (5) screws through the connector plate and into the bottom of the main unit's worksurface. Fully tighten screws.
3. The bridge mounting bracket will be pre-attached to the bridge modesty panel, remove it.
4. Insert the bridge mounting bracket into the underside of the main unit's end panel. See **Figure 2**.
5. Adjust the leveling glides under the main units end panels to assure the units are level side-to-side, front-to-back, and to each other. Use the level to verify.

Bridge Assembly

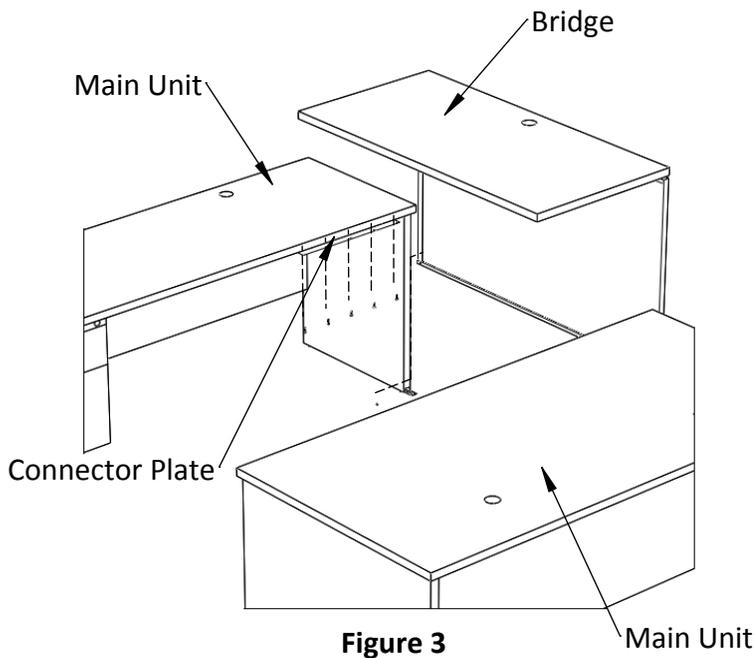

Bridge Installation:

1. Use two or more people to place the bridge worksurface onto the connector plates attached to main units. See **Figure 3**.
2. Align holes along bottom of each side of the bridge worksurface with holes in each connector plate.
3. Use a phillips screwdriver to install screws through the connector plate holes into holes on the bottom of the bridge worksurface.
4. Lift the bridge mounting bracket into the bottom corner of the main unit's end panel. Align slot in the bridge connector bracket with the hole in the bottom corner of the bridge modesty panel. See **Figure 4**.
5. Use a phillips screwdriver to install screw through the bridge mounting bracket hole into bridge modesty panel hole, securing the bridge modesty panel to the end panel on the main unit. See **Figure 5**.

